

Descriptions for Motorola 908 Programmer

Features

In-Circuit EEPROM programming (MON08 Rev1 adaptor must be used).

Ultra high-speed On-Board FLASH/EEPROM programming.

2x2 color LEDs indicates mode of operation, power supply status

Supported Devices

MC68HC908AZ60 (2J74Y)
MC68HC908AZ60 (4J74Y)
MC68HC908AZ60A (3K85K)
MC68HC908AS60 (3J74Y)
MC68HC908AS60A (1L87J)
MC68HC908AB32 (3K56G)
MC68HC08AZ60 (1J35D)
MC68HC08AZ32 (0J66D)
MC68HC08AZ32 (1H56A)
MC68HC08AS20 (0H94K)
MC68HC08AZ32A (1L52H)
MC68HC08AB16A (0L72A)
MC68HC05H12 (0H57A)

Package Included

one 908 programmer

one MC68HC908AZ60 QFP-100 adapter

one MC68HC908AZ60 QFP-64 adapter

one MC68HC908AZ60 PLCC-52 adapter

Additional items you'll need to use this tool

Host: A 32 Bit x86 based or Pentium PC with a free LPT communication port.

Power supply: An 12 Volt / 500 mA power adapter.