

# NAND Flash Memory

## MT29F16G08ABABA, MT29F32G08AFABA, MT29F64G08A[J/K/M]ABA, MT29F128G08AUABA, MT29F16G08ABCBB, MT29F32G08AECBB, MT29F64G08A[K/M]CBB, MT29F128G08AUCBB

## Features

- Open NAND Flash Interface (ONFI) 2.1-compliant<sup>1</sup>
- Single-level cell (SLC) technology
- Organization
  - Page size x8: 4320 bytes (4096 + 224 bytes)
  - Block size: 128 pages (512K +28K bytes)
  - Plane size: 2 planes x 2048 blocks per plane
  - Device size: 16Gb: 4096 blocks; 32Gb: 8192 blocks; 64Gb: 16,384 blocks; 128Gb: 32,768 blocks
- Synchronous I/O performance
  - Up to synchronous timing mode 4
  - Clock rate: 12ns (DDR)
- Read/write throughput per pin: 166 MT/s
- Asynchronous I/O performance
  - Up to asynchronous timing mode 4
- <sup>t</sup>RC/<sup>t</sup>WC: 25ns (MIN)
- Array performance
  - Read page: 25µs (MAX)
  - Program page: 230µs (TYP)
- Erase block: 700µs (TYP)
- Operating Voltage Range
  - V<sub>CC</sub>: 2.7–3.6V
- V<sub>CCO</sub>: 1.7–1.95V, 2.7–3.6V
- Command set: ONFI NAND Flash Protocol
- Advanced Command Set
  - Program cache
  - Read cache sequential
  - Read cache random
  - One-time programmable (OTP) mode
  - Multi-plane commands
  - Multi-LUN operations
  - Read unique ID
  - Copyback
- · First block (block address 00h) is valid when shipped from factory. For minimum required ECC, see
- Error Management (page 107).
- RESET (FFh) required as first command after poweron

- · Operation status byte provides software method for detecting
  - Operation completion
  - Pass/fail condition
  - Write-protect status
- Data strobe (DQS) signals provide a hardware method for synchronizing data DQ in the synchronous interface
- Copyback operations supported within the plane from which data is read
- · Quality and reliability
- Data retention: 10 years
- Endurance: 100,000 PROGRAM/ERASE cycles
- Operating temperature:
  - Commercial: 0°C to +70°C
  - Industrial (IT): -40°C to +85°C
- Package
  - 52-pad LGA
  - 48-pin TSOP
  - 100-ball BGA
  - Note: 1. The ONFI 2.1 specification is available at www.onfi.org.

www.DataSheet4U.com

PDF: 09005aef838cada2 Rev. E 3/10 EN


1



#### **Part Numbering Information**

Micron NAND Flash devices are available in different configurations and densities. Verify valid part numbers by using Micron's part catalog search at www.micron.com. To compare features and specifications by device type, visit www.micron.com/products. Contact the factory for devices not found.

#### Figure 1: Part Numbering

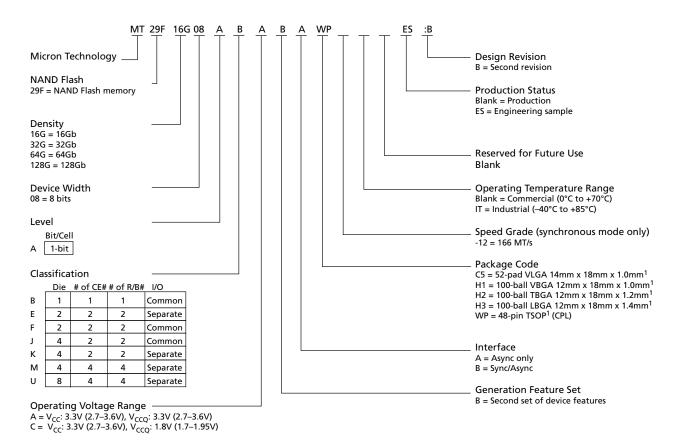

Note: 1. Pb-free package.

www.DataSheet4U.com



## Contents

General Description	
Asynchronous and Synchronous Signal Descriptions	
Signal Assignments	
Package Dimensions	
Architecture	19
Device and Array Organization	20
Bus Operation – Asynchronous Interface	28
Asynchronous Enable/Standby	
Asynchronous Bus Idle	
Asynchronous Commands	
Asynchronous Addresses	
Asynchronous Data Input	31
Asynchronous Data Output	32
Write Protect	33
Ready/Busy#	33
Bus Operation – Synchronous Interface	38
Synchronous Enable/Standby	
Synchronous Bus Idle/Driving	39
Synchronous Commands	40
Synchronous Addresses	
Synchronous DDR Data Input	42
Synchronous DDR Data Output	
Write Protect	45
Ready/Busy#	45
Device Initialization	
Activating Interfaces	
Activating the Asynchronous Interface	
Activating the Synchronous Interface	47
Command Definitions	
Reset Operations	
RESET (FFh)	
SYNCHRONOUS RESET (FCh)	
Identification Operations	
READ ID (90h)	
READ ID Parameter Tables	
Configuration Operations	
SET FEATURES (EFh)	
GET FEATURES (EEh)	
READ PARAMETER PAGE (ECh)	
Parameter Page Data Structure Tables	
READ UNIQUE ID (EDh)	
Status Operations	
READ STATUS (70h)	
READ STATUS ENHANCED (78h)	
Column Address Operations	74
CHANGE READ COLUMN (05h-E0h)	DataSheet4U.com
CHANGE READ COLUMN ENHANCED (06h-E0h)	
CHANGE WRITE COLUMN (85h)	
CHANGE ROW ADDRESS (85h)	
Read Operations	



READ MODE (00h)	81
READ PAGE (00h-30h)	82
READ PAGE CACHE SEQUENTIAL (31h)	83
READ PAGE CACHE RANDOM (00h-31h)	
READ PAGE CACHE LAST (3Fh)	
READ PAGE MULTI-PLANE (00h-32h)	
Program Operations	
PROGRAM PAGE (80h-10h)	
PROGRAM PAGE CACHE (80h-15h)	
PROGRAM PAGE MULTI-PLANE 80h-11h	
Erase Operations	
ERASE BLOCK (60h-D0h)	
ERASE BLOCK MULTI-PLANE (60h-D1h)	
Copyback Operations	97
COPYBACK READ (00h-35h)	
COPYBACK PROGRAM (85h–10h)	
COPYBACK READ MULTI-PLANE (00h-32h)	
COPYBACK PROGRAM MULTI-PLANE (85h-11h)	
One-Time Programmable (OTP) Operations	
PROGRAM OTP PAGE (80h-10h)	
PROTECT OTP AREA (80h-10h)	
READ OTP PAGE (00h-30h)	
Multi-Plane Operations	
Multi-Plane Addressing	
Interleaved Die (Multi-LUN) Operations	
Error Management	
Output Drive Impedance	
AC Overshoot/Undershoot Specifications	
Synchronous Input Slew Rate	
Output Slew Rate	
Electrical Specifications	
Electrical Specifications - DC Characteristics and Operating Conditions (Asynchronous)	. 116
Electrical Specifications - DC Characteristics and Operating Conditions (Synchronous)	
Electrical Specifications - DC Characteristics and Operating Conditions (V <sub>CCO</sub> )	
Electrical Specifications - AC Characteristics and Operating Conditions (Asynchronous)	
Electrical Specifications - AC Characteristics and Operating Conditions (Synchronous)	
Electrical Specifications – Array Characteristics	
Asynchronous Interface Timing Diagrams	. 124
Synchronous Interface Timing Diagrams	
Revision History	. 157
Rev. E, Production – 3/10	. 157
Rev. D, Production – 1/10	
Rev. C – 9/09	. 157
Rev. B – 2/09	. 157
Rev. A – 1/09	. 158

www.DataSheet4U.com



## **List of Tables**

	Asynchronous and Synchronous Signal Definitions	
Table 2: A	Array Addressing for Logical Unit (LUN)	27
Table 3: A	Asynchronous Interface Mode Selection	28
Table 4: S	Synchronous Interface Mode Selection	38
	Command Set	
Table 6: 1	Read ID Parameters for Address 00h	54
	Read ID Parameters for Address 20h	
Table 8: 1	Feature Address Definitions	55
Table 9: 1	Feature Address 01h: Timing Mode	57
Table 10:	Feature Addresses 10h and 80h: Programmable Output Drive Strength	57
Table 11:	Feature Addresses 81h: Programmable R/B# Pull-Down Strength	58
Table 12:	Feature Addresses 90h: Array Operation Mode	58
	Parameter Page Data Structure	
Table 14:	Status Register Definition	71
Table 15:	OTP Area Details	102
	Error Management Details	
Table 17:	Output Drive Strength Test Conditions (V <sub>CCO</sub> = 1.7–1.95V)	108
Table 18:	Output Drive Strength Impedance Values ( $V_{CCO} = 1.7 - 1.95V$ )	108
Table 19:	Output Drive Strength Conditions ( $V_{CCQ} = 2.7 - 3.6V$ )	109
Table 20:	Output Drive Strength Impedance Values (V <sub>CCO</sub> = 2.7–3.6V)	109
	Pull-Up and Pull-Down Output Impedance Mismatch	
	Overshoot/Undershoot Parameters	
Table 23:	Test Conditions for Input Slew Rate	112
Table 24:	Input Slew Rate ( $V_{CCO} = 1.7 - 1.95V$ )	112
Table 25:	Test Conditions for Output Slew Rate	113
Table 26:	Output Slew Rate ( $V_{CCO} = 1.7 - 1.95V$ )	113
Table 27:	Output Slew Rate ( $V_{CCQ} = 2.7 - 3.6V$ )	113
Table 28:	Absolute Maximum Ratings by Device	114
Table 29:	Recommended Operating Conditions	114
Table 30:	Valid Blocks per LUN	114
Table 31:	Capacitance: 100-Ball BGA Package	115
Table 32:	Capacitance: 48-Pin TSOP Package	115
Table 33:	Capacitance: 52-Pad LGA Package	115
	Test Conditions	
Table 35:	DC Characteristics and Operating Conditions (Asynchronous Interface)	116
Table 36:	DC Characteristics and Operating Conditions (Synchronous Interface)	117
Table 37:	DC Characteristics and Operating Conditions (3.3VV <sub>CCO</sub> )	117
Table 38:	DC Characteristics and Operating Conditions (1.8VV <sub>CCO</sub> )	118
Table 39:	AC Characteristics: Asynchronous Command, Address, and Data	118
	AC Characteristics: Synchronous Command, Address, and Data	
Table 41:	Array Characteristics	123

www.DataSheet4U.com



## **List of Figures**

Figure 1:	Part Numbering	2
Figure 2:	48-Pin TSOP Type 1 (Top View)	11
Figure 3:	52-Pad LGA (Top View)	12
	100-Ball BGA (Ball-Down, Top View)	
Figure 5:	48-Pin TSOP – Type 1 CPL (Package Code: WP)	14
Figure 6:	52-Pad VLGA	15
Figure 7:	100-Ball VBGA – 12mm x 18mm (Package Code: H1)	16
Figure 8:	100-Ball TBGA – 12mm x 18mm (Package Code: H2)	17
Figure 9:	100-Ball LBGA – 12mm x 18mm (Package Code: H3)	18
Figure 10:	NAND Flash Die (LUN) Functional Block Diagram	19
Figure 11:	Device Organization for Single-Die Package (TSOP/BGA)	20
Figure 12:	Device Organization for Two-Die Package (TSOP)	21
Figure 13:	Device Organization for Two-Die Package (BGA)	22
Figure 14:	Device Organization for Four-Die Package (TSOP)	23
Figure 15:	Device Organization for Four-Die Package with CE# and CE2# (BGA/LGA)	24
Figure 16:	Device Organization for Four-Die Package with CE#, CE2#, CE3#, and CE4# (BGA/LGA)	25
Figure 17:	Device Organization for Eight-Die Package (BGA/LGA)	26
Figure 18:	Array Organization per Logical Unit (LUN)	27
	Asynchronous Command Latch Cycle	
Figure 20:	Asynchronous Address Latch Cycle	30
Figure 21:	Asynchronous Data Input Cycles	31
Figure 22:	Asynchronous Data Output Cycles	32
Figure 23:	Asynchronous Data Output Cycles (EDO Mode)	33
Figure 24:	READ/BUSY# Open Drain	34
Figure 25:	<sup>t</sup> Fall and <sup>t</sup> Rise ( $V_{CCQ} = 2.7-3.6V$ )	35
Figure 26:	<sup>t</sup> Fall and <sup>t</sup> Rise ( $V_{CCO} = 1.7-1.95V$ )	35
Figure 27:	IOL vs Rp ( $V_{CCQ} = 2.7-3.6V$ )	36
Figure 28:	IOL vs Rp ( $V_{CCQ} = 1.7-1.95V$ )	36
Figure 29:	TC vs Rp	37
Figure 30:	Synchronous Bus Idle/Driving Behavior	40
	Synchronous Command Cycle	
Figure 32:	Synchronous Address Cycle	42
Figure 33:	Synchronous DDR Data Input Cycles	43
Figure 34:	Synchronous DDR Data Output Cycles	45
Figure 35:	R/B# Power-On Behavior	46
Figure 36:	Activating the Synchronous Interface	48
Figure 37:	RESET (FFh) Operation	51
Figure 38:	SYNCHRONOUS RESET (FCh) Operation	52
Figure 39:	READ ID (90h) with 00h Address Operation	53
	READ ID (90h) with 20h Address Operation	
	SET FEATURES (EFh) Operation	
Figure 42:	GET FEATURES (EEh) Operation	56
Figure 43:	READ PARAMETER (ECh) Operation	60
	READ UNIQUE ID (EDh) Operation	
Figure 45:	READ STATUS (70h) Operation	73
Figure 46:	READ STATUS ENHANCED (78h) Operation	com
Figure 47:	CHANGE READ COLUMN (05h-E0h) Operation	74
	CHANGE READ COLUMN ENHANCED (06h-E0h) Operation	
Figure 49:	CHANGE WRITE COLUMN (85h) Operation	76
Figure 50:	CHANGE ROW ADDRESS (85h) Operation	78



Eiguro 51:	READ PAGE (00h-30h) Operation	02
	READ PAGE (001-501) Operation	
	READ PAGE CACHE SEQUENTIAL (311) Operation	
	READ PAGE CACHE LAST (3Fh) Operation	
Figure 54.	READ PAGE MULTI-PLANE (00h-32h) Operation	00
	PROGRAM PAGE (80h-10h) Operation	
	PROGRAM PAGE (80h–10h) Operation PROGRAM PAGE CACHE (80h–15h) Operation (Start)	
	PROGRAM PAGE CACHE (80h–15h) Operation (Start)	
	PROGRAM PAGE MULTI-PLANE (80h–11h) Operation	
	ERASE BLOCK (60h-D0h) Operation	
	ERASE BLOCK (001-D01) Operation ERASE BLOCK MULTI-PLANE (60h–D1h) Operation	
	COPYBACK READ (00h-35h) Operation	
	COPYBACK READ (00h-35h) with CHANGE READ COLUMN (05h–E0h) Operation	
	COPYBACK READ (00II-55II) with CHARGE READ COLOMIN (05II-E0II) Operation	
	COPYBACK PROGRAM (85h-10h) with CHANGE WRITE COLUMN (85h) Operation	
	COPYBACK PROGRAM MULTI-PLANE (85h-11h) Operation	
	PROGRAM OTP PAGE (80h-10h) Operation	
	PROGRAM OTP PAGE (80h-10h) operation PROGRAM OTP PAGE (80h-10h) with CHANGE WRITE COLUMN (85h) Operation	
	PROTECT OTP AREA (80h-10h) White Change White Colowin (85h) Operation	
	READ OTP PAGE (00h-30h) Operation	
	Overshoot	
	Undershoot	
	RESET Operation	
	READ STATUS Cycle	
	READ STATUS ENHANCED Cycle	
	READ PARAMETER PAGE	
	READ PAGE	
	READ PAGE Operation with CE# "Don't Care"	
	CHANGE READ COLUMN	
	READ PAGE CACHE SEQUENTIAL	
	READ PAGE CACHE RANDOM	
	READ ID Operation	
	PROGRAM PAGE Operation	
	PROGRAM PAGE Operation with CE# "Don't Care"	
	PROGRAM PAGE Operation with CHANGE WRITE COLUMN	
	PROGRAM PAGE CACHE	
	PROGRAM PAGE CACHE Ending on 15h	
	COPYBACK	
	ERASE BLOCK Operation	
	SET FEATURES Operation	
Figure 91	READ ID Operation	136
	GET FEATURES Operation	
0	RESET (FCh) Operation	
	READ STATUS Cycle	
	READ STATUS ENHANCED Operation	
0	READ PARAMETER PAGE Operation	
Figure 97:	READ PAGE Operation	142
Figure 98	CHANGE READ COLUMN	com
Figure 99	READ PAGE CACHE SEQUENTIAL (1 of 2)	144
	: READ PAGE CACHE SEQUENTIAL (2 of 2)	
	: READ PAGE CACHE RANDOM (1 of 2)	
	: READ PAGE CACHE RANDOM (2 of 2)	
1.0010 102		0



Figure 103: Multi-Plane Read Page (1 of 2)	
Figure 104: Multi-Plane Read Page (2 of 2)	
Figure 105: PROGRAM PAGE Operation (1 of 2)	
Figure 106: PROGRAM PAGE Operation (2 of 2)	
Figure 107: CHANGE WRITE COLUMN	150
Figure 108: Multi-Plane Program Page	
Figure 109: ERASE BLOCK	
Figure 110: COPYBACK (1 of 3)	
Figure 111: COPYBACK (2 of 3)	
Figure 112: COPYBACK (3 of 3)	
Figure 113: READ OTP PAGE	
Figure 114: PROGRAM OTP PAGE (1 of 2)	
Figure 115: PROGRAM OTP PAGE (2 of 2)	
Figure 116: PROTECT OTP AREA	
5	

www.DataSheet4U.com



#### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND General Description

## **General Description**

Micron NAND Flash devices include an asynchronous data interface for high-performance I/O operations. These devices use a highly multiplexed 8-bit bus (DQx) to transfer commands,address, and data. There are five control signals used to implement the asynchronous data interface: CE#, CLE, ALE, WE#, and RE#. Additional signals control hardware write protection (WP#) and monitor device status (R/B#).

This Micron NAND Flash device additionally includes a synchronous data interface for high-performance I/O operations. When the synchronous interface is active, WE# becomes CLK and RE# becomes W/R#. Data transfers include a bidirectional data strobe (DQS).

This hardware interface creates a low pin-count device with a standard pinout that remains the same from one density to another, enabling future upgrades to higher densities with no board redesign.

A target is the unit of memory accessed by a chip enable signal. A target contains one or more NAND Flash die. A NAND Flash die is the minimum unit that can independently execute commands and report status. A NAND Flash die, in the ONFI specification, is referred to as a logical unit (LUN). For further details, see Device and Array Organization.

## **Asynchronous and Synchronous Signal Descriptions**

Asynchronous Signal <sup>1</sup>	Synchronous Signal <sup>1</sup>	Туре	Description <sup>2</sup>
ALE	ALE	Input	<b>Address latch enable:</b> Loads an address from DQx into the address register.
CE#	CE#	Input	<b>Chip enable:</b> Enables or disables one or more die (LUNs) in a target <sup>1</sup> .
CLE	CLE	Input	<b>Command latch enable:</b> Loads a command from DQx into the command register.
DQx	DQx	I/O	<b>Data inputs/outputs:</b> The bidirectional I/Os transfer address, data, and command information.
-	DQS	I/O	<b>Data strobe:</b> Provides a synchronous reference for data input and output.
RE#	W/R#	Input	<b>Read enable and write/read:</b> RE# transfers serial data from the NAND Flash to the host system when the asynchronous interface is active. When the synchronous interface is active, W/R# controls the direction of DQx and DQS.
WE#	CLK	Input	<b>Write enable and clock:</b> WE# transfers commands, addresses, and serial data from the host system to the NAND Flash when the asynchronous interface is active. When the synchronous interface is active, CLK latches command and address cycles.
WP#	WP#	Input	Write protect: Enables or disables array PROGRAWWW.DataSheet4U.com tions.
R/B#	R/B#	Output	<b>Ready/busy:</b> An open-drain, active-low output that requires an exter- nal pull-up resistor. This signal indicates target array activity.
V <sub>CC</sub>	V <sub>cc</sub>	Supply	V <sub>cc</sub> : Core power supply

 Table 1: Asynchronous and Synchronous Signal Definitions



#### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Asynchronous and Synchronous Signal Descriptions

#### Table 1: Asynchronous and Synchronous Signal Definitions (Continued)

Asynchronous Signal <sup>1</sup>	Synchronous Signal <sup>1</sup>	Туре	Description <sup>2</sup>
V <sub>CCQ</sub>	V <sub>CCQ</sub>	Supply	V <sub>ccq</sub> : I/O power supply
V <sub>SS</sub>	V <sub>SS</sub>	Supply	<b>V<sub>ss</sub>:</b> Core ground connection
V <sub>SSQ</sub>	V <sub>SSQ</sub>	Supply	<b>V<sub>ssq</sub>:</b> I/O ground connection
NC	NC	-	<b>No connect:</b> NCs are not internally connected. They can be driven or left unconnected.
DNU	DNU	_	Do not use: DNUs must be left unconnected.
RFU	RFU	_	Reserved for future use: RFUs must be left unconnected.

Notes: 1. See Device and Array Organization for detailed signal connections.

2. See Bus Operation – Asynchronous Interface (page 28) and Bus Operation – Synchronous Interface (page 38) for detailed asynchronous and synchronous interface signal descriptions.


www.DataSheet4U.com



#### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Signal Assignments

## **Signal Assignments**

#### Figure 2: 48-Pin TSOP Type 1 (Top View)

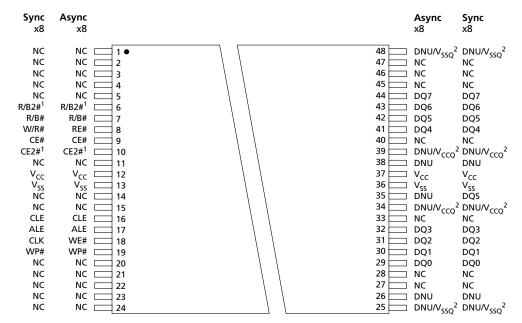


- Notes: 1. CE2# and R/B2# are available on dual die and quad die packages. They are NC for other configurations.
  - 2. These  $V_{CCQ}$  and  $V_{SSQ}$  pins are for compatibility with ONFI 2.1. If not supplying  $V_{CCQ}$  or  $V_{SSQ}$  to these pins, do not use them.
  - 3. TSOP devices do not support the synchronous interface.

www.DataSheet4U.com



#### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Signal Assignments

#### Figure 3: 52-Pad LGA (Top View)

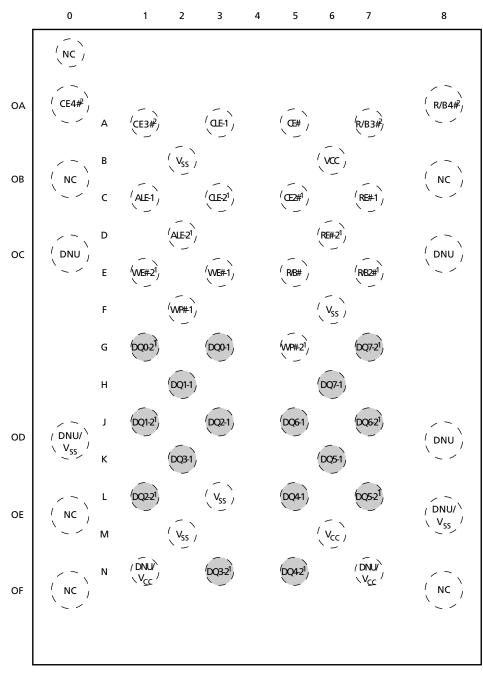

Top View, Pads Down

- 1. These signals are available on quad and octal die packages. They are NC for other configurations.
- These signals are available on quad die four CE# or octal die packages. They are NC for other configurations.



#### **Micron Confidential and Proprietary**

# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Signal Assignments

#### Figure 4: 100-Ball BGA (Ball-Down, Top View)


1	2	3	4	5	6	7	8	9	10
()	()							()	( NC )
( NC )									( NC )
	( <b>R</b> FU )	( DNU )	( NC )	(WP#- <b>2</b> )	( NC )	( NC )	( <b>DNU</b> )	( <b>R</b> FU )	
	( <b>R</b> FU )	( DNU )	×_/ /~ >	(WP#-1)	×_/ /~ ×	×_/ /~ \	×_/ /~ \	/_/	
	( Vcc )	( Vcc )	{ Vcc }	( Vcc )	( Vcc )	( Vcc )	{ Vcc }	{ Vcc }	
	( Vss )	( Vss )	( Vss )	( Vss )	( Vss )	( <b>V</b> ss )	( Vss )	( Vss )	
	( <b>V</b> ssq )	{ Vccq }	( RFU )	( RFU )	( <b>R/B2</b> ₽ <sup>3</sup> )	( <b>R/B4</b> # <sup>4</sup> )	( Vccq )	( <b>V</b> ssq )	
	(DQ0-2)	(DQ2-2 <sup>3</sup> )	(ALE-2)	(CE4# <sup>4</sup> )	( <b>R/B#</b> )	( <b>R/B3#</b> <sup>4</sup> )	(DQ5-2 <sup>3</sup> )	(DQ7-2)	
	(DQ0-1)	(DQ2-1)	(ALE-1)	(CE3# <sup>4</sup> )	(CE2# <sup>3</sup> )	( CE# )	(DQ5-1)	(DQ7-1)	
	( Vccq )	( Vssq )	( Vccq )	(CLE-2 <sup>3</sup> )	(RE#-2 <sup>3</sup> ) (W/R#-2)	( Vccq )	( Vssq )	( Vccq )	
	(DQ1-2)	(DQ3-2)	( <b>Vssq</b> )	(CLE-1)	(W/R#-1)	( <b>Vssq</b> )	(DQ4-2)	(DQ6-2)	
	(DQ1-1)	(DQ3-1)	( <b>RFU</b> )	(DQS-2 <sup>3</sup> )	( <b>RFU</b> )	WE#-2 (CLK-2)	(DQ4-1)	(DQ6-1)	
	( <b>Vssq</b> )	( Vccq )	( <b>RFU</b> )	(N/A <sup>1</sup> ) (DQS-1)	( <b>RFU</b> )	(WE#-1) (CLK-1)	( Vccq )	( <b>Vssq</b> )	
(NC)	-							-	( <b>NC</b> )
( NC )	( NC )							( NC )	( NC )

- www.DataSheet4U.com Notes: 1. N/A: This signal is tri-stated when the asynchronous interface is active.
  - 2. Signal names in parentheses are the signal names when the synchromous Data Sheet 40 com
  - 3. These signals are available on dual, quad, and octal die packages. They are NC for other configurations.
  - 4. These signals are available on quad die four CE# or octal die packages. They are NC for other configurations.



## **Package Dimensions**

Figure 5: 48-Pin TSOP – Type 1 CPL (Package Code: WP)

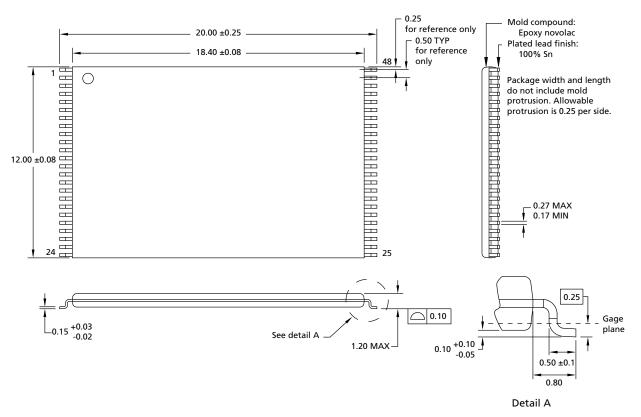


Note: 1. All dimensions are in millimeters.

www.DataSheet4U.com



#### Figure 6: 52-Pad VLGA

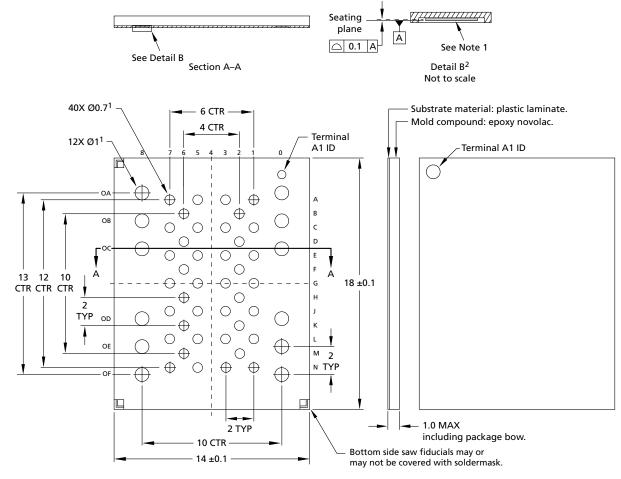


Notes: 1. Pads are nonsolder mask defined (NSMD) and are plated with 3–15 microns of nickel followed by a minimum of 0.1 microns of soft wire bondable gold (99.99% pure).
2. Primary datum A (seating plane) is defined by the bottom terminal surface. Terminals need not extend below the package bottom surface.

Note: 1. All dimensions are in millimeters.

www.DataSheet4U.com



#### Figure 7: 100-Ball VBGA - 12mm x 18mm (Package Code: H1)

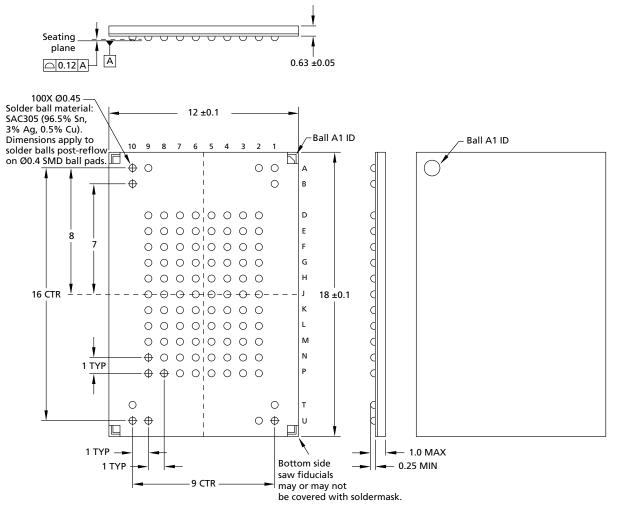



Note: 1. All dimensions are in millimeters.

www.DataSheet4U.com



#### Figure 8: 100-Ball TBGA – 12mm x 18mm (Package Code: H2)

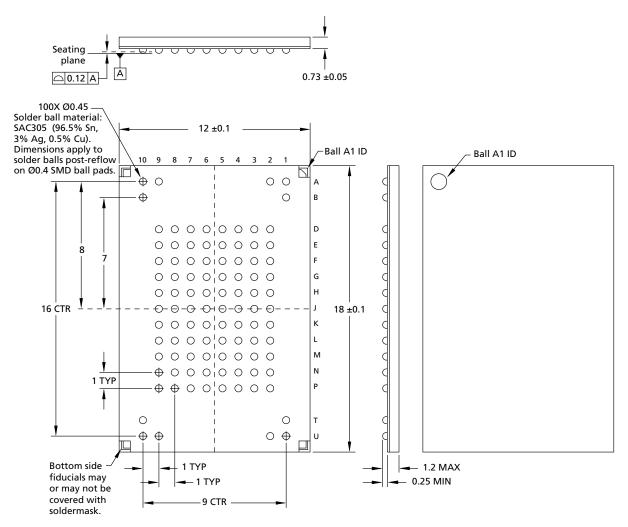


 

www.DataSheet4U.com



#### Figure 9: 100-Ball LBGA – 12mm x 18mm (Package Code: H3)

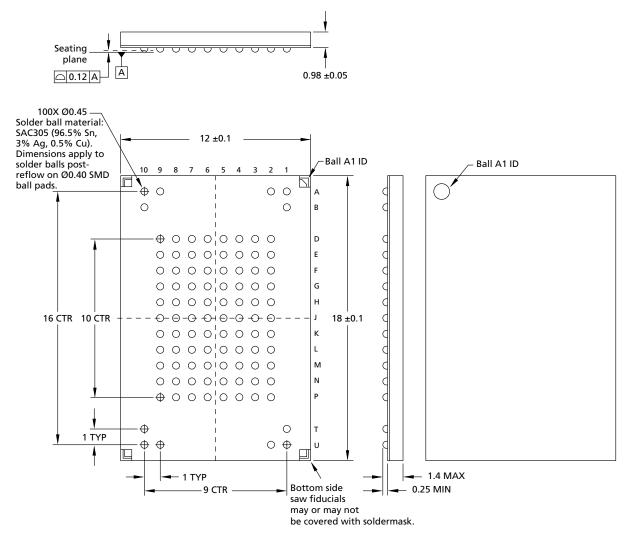

Note: 1. All dimensions are in millimeters.

www.DataSheet4U.com



#### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Architecture

## Architecture


These devices use NAND Flash electrical and command interfaces. Data, commands, and addresses are multiplexed onto the same pins and received by I/O control circuits. The commands received at the I/O control circuits are latched by a command register and are transferred to control logic circuits for generating internal signals to control device operations. The addresses are latched by an address register and sent to a row decoder to select a row address, or to a column decoder to select a column address.

Data is transferred to or from the NAND Flash memory array, byte by byte, through a data register and a cache register.

The NAND Flash memory array is programmed and read using page-based operations and is erased using block-based operations. During normal page operations, the data and cache registers act as a single register. During cache operations, the data and cache registers operate independently to increase data throughput.

The status register reports the status of die (LUN) operations.

#### Figure 10: NAND Flash Die (LUN) Functional Block Diagram

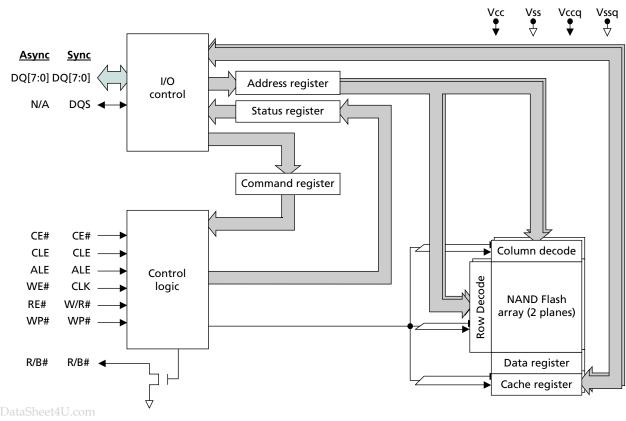


N/A: This signal is tri-stated when the asynchronous interface is active. DataSheet4U.com
 Some devices do not include the synchronous interface.

Notes:



## **Device and Array Organization**

#### Figure 11: Device Organization for Single-Die Package (TSOP/BGA)

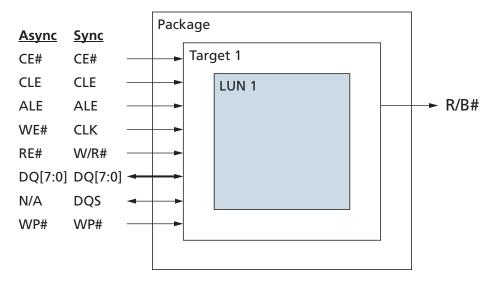


Note: 1. TSOP devices do not support the synchronous interface.

www.DataSheet4U.com



#### Figure 12: Device Organization for Two-Die Package (TSOP)

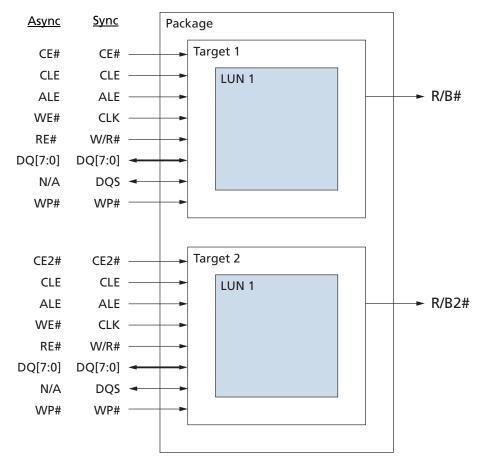


Note: 1. TSOP devices do not support the synchronous interface.

www.DataSheet4U.com




#### Figure 13: Device Organization for Two-Die Package (BGA)

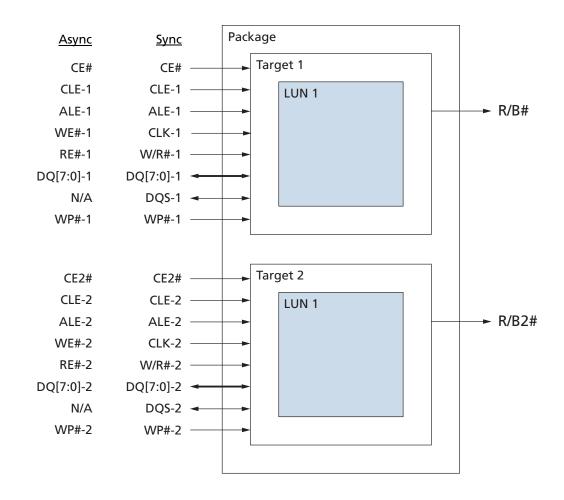

www.DataSheet4U.com



#### Figure 14: Device Organization for Four-Die Package (TSOP)

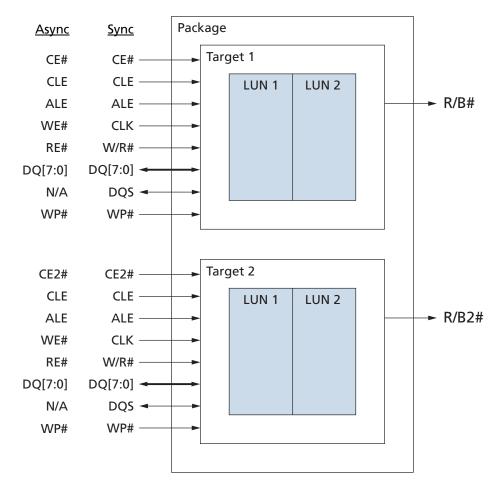


Note: 1. TSOP devices do not support the synchronous interface.

www.DataSheet4U.com



#### Figure 15: Device Organization for Four-Die Package with CE# and CE2# (BGA/LGA)

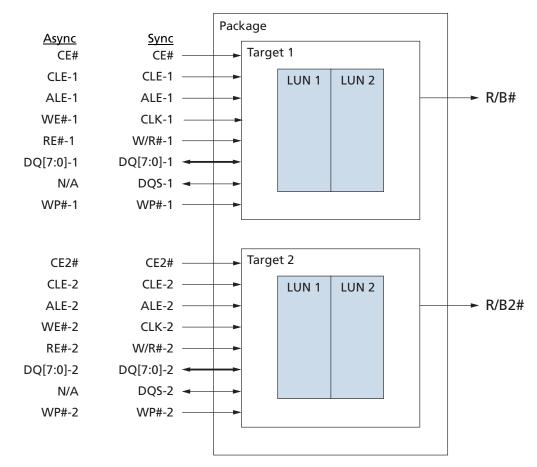


Note: 1. LGA devices do not support the synchronous interface.

www.DataSheet4U.com




#### Figure 16: Device Organization for Four-Die Package with CE#, CE2#, CE3#, and CE4# (BGA/LGA)

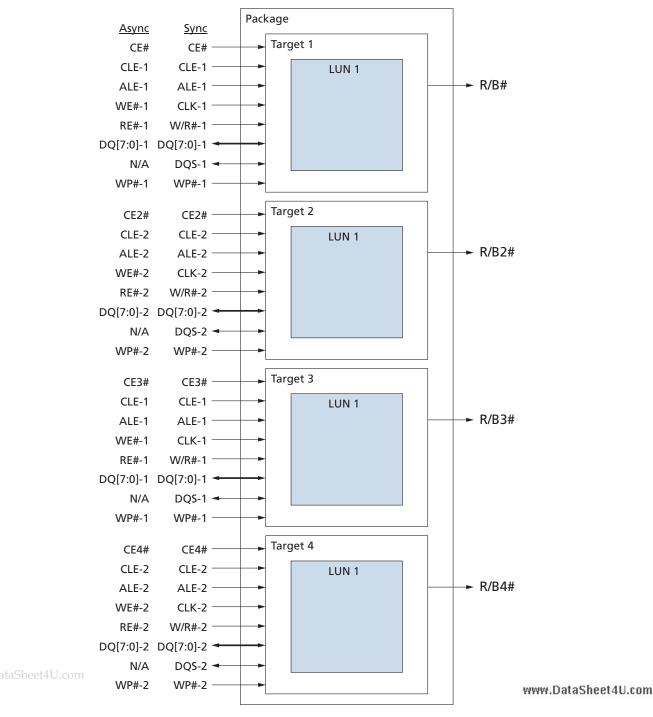






#### Figure 17: Device Organization for Eight-Die Package (BGA/LGA)

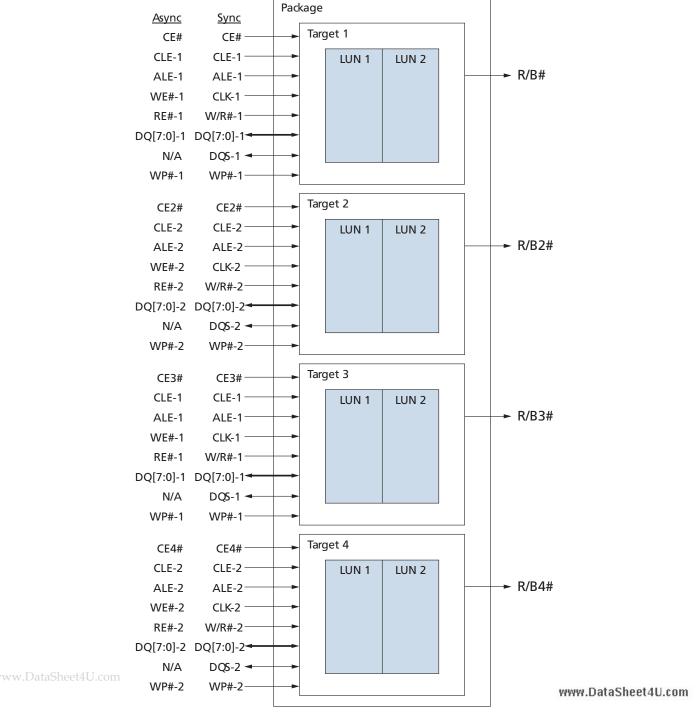





#### Figure 18: Array Organization per Logical Unit (LUN)

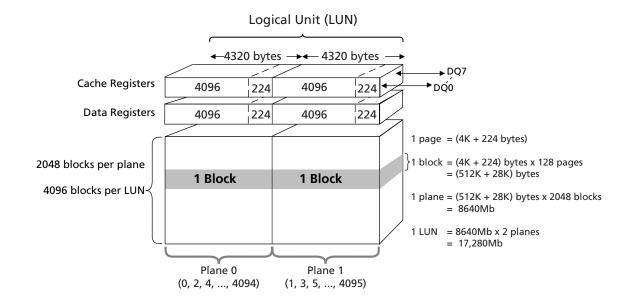

#### Table 2: Array Addressing for Logical Unit (LUN)

Cycle	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0
First	CA7	CA6	CA5	CA4	CA3	CA2	CA1	CA0 <sup>2</sup>
Second	LOW	LOW	LOW	CA12 <sup>3</sup>	CA11	CA10	CA9	CA8
Third	BA7 <sup>4</sup>	PA6	PA5	PA4	PA3	PA2	PA1	PA0
Fourth	BA15	BA14	BA13	BA12	BA11	BA10	BA9	BA8
Fifth	LOW	LOW	LOW	LOW	LA0 <sup>5</sup>	BA18	BA17	BA16

Notes: 1. CAx = column address, PAx = page address, BAx = block address, LAx = LUN address; the page address, block address, and LUN address are collectively called the row address.

2. When using the synchronous interface, CA0 is forced to 0 internally; one data cycle always returns one even byte and one odd byte.

3. Column addresses 4320 (10E0h) through 8191 (1FFFh) are invalid, out of bounds, do not exist in the device, and cannot be addressed.

- 4. BA[7] is the plane-select bit: Plane 0: BA[7] = 0 Plane 1: PA[7] = 1
  - Plane 1: BA[7] = 1
- LA0 is the LUN-select bit. It is present only when two LUNs are shared on the target; otherwise, it should be held LOW.
   LUN 0: LA0 = 0

LUN 1: LA0 = 1

www.DataSheet4U.com



## **Bus Operation – Asynchronous Interface**

The asynchronous interface is active when the NAND Flash device powers on. The I/O bus, DQ[7:0], is multiplexed sharing data I/O, addresses, and commands. The DQS signal, if present, is tri-stated when the asynchronous interface is active.

Asynchronous interface bus modes are summarized below.

Mode	CE#	CLE	ALE	WE#	RE#	DQS	DQx	WP#	Notes
Standby	н	Х	X	X	Х	Х	X	0V/V <sub>CCQ</sub> <sup>2</sup>	2
Bus idle	L	Х	X	Н	н	Х	Х	X	
Command input	L	Н	L		н	X	input	Н	
Address input	L	L	н		н	х	input	Н	
Data input	L	L	L		н	x	input	Н	
Data output	L	L	L	н	₹	x	output	Х	
Write protect	Х	Х	Х	Х	Х	х	Х	L	

#### Table 3: Asynchronous Interface Mode Selection

Notes: 1. DQS is tri-stated when the asynchronous interface is active.

- 2. WP# should be biased to CMOS LOW or HIGH for standby.
- 3. Mode selection settings for this table: H = Logic level HIGH; L = Logic level LOW; X =  $V_{IH}$  or  $V_{IL}$ .

#### **Asynchronous Enable/Standby**

A chip enable (CE#) signal is used to enable or disable a target. When CE# is driven LOW, all of the signals for that target are enabled. With CE# LOW, the target can accept commands, addresses, and data I/O. There may be more than one target in a NAND Flash package. Each target is controlled by its own chip enable; the first target (Target 0) is controlled by CE#; the second target (if present) is controlled by CE2#, etc.

A target is disabled when CE# is driven HIGH, even when the target is busy. When disabled, all of the target's signals are disabled except CE#, WP#, and R/B#. This functionality is also known as CE# "Don't Care". While the target is disabled, other devices can utilize the disabled NAND signals that are shared with the NAND Flash.

A target enters low-power standby when it is disabled and is not busy. If the target is busy when it is disabled, the target enters standby after all of the die (LUNs) complete their operations. Standby helps reduce power consumption.

#### **Asynchronous Bus Idle**

A target's bus is idle when CE# is LOW, WE# is HIGH, and RE# is HIGH.

www.DataSheet4U.com During bus idle, all of the signals are enabled except DQS, which is not used when the asynchronous interface is active. No commands, addresses, and dawaw.DataSheet4U.com the target; no data is output.




#### **Asynchronous Commands**

An asynchronous command is written from DQ[7:0] to the command register on the rising edge of WE# when CE# is LOW, ALE is LOW, CLE is HIGH, and RE# is HIGH.

Commands are typically ignored by die (LUNs) that are busy (RDY = 0); however, some commands, including READ STATUS (70h) and READ STATUS ENHANCED (78h), are accepted by die (LUNs) even when they are busy.

#### Figure 19: Asynchronous Command Latch Cycle

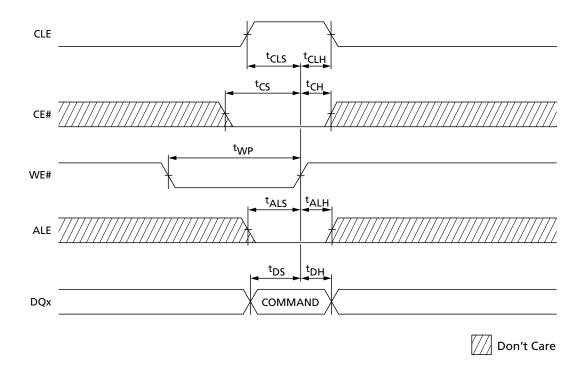

www.DataSheet4U.com




#### **Asynchronous Addresses**

An asynchronous address is written from DQ[7:0] to the address register on the rising edge of WE# when CE# is LOW, ALE is HIGH, CLE is LOW, and RE# is HIGH.

Bits that are not part of the address space must be LOW (see Device and Array Organization). The number of cycles required for each command varies. Refer to the command descriptions to determine addressing requirements (see Command Definitions).

Addresses are typically ignored by die (LUNs) that are busy (RDY = 0); however, some addresses are accepted by die (LUNs) even when they are busy; for example, address cycles that follow the READ STATUS ENHANCED (78h) command.

#### Figure 20: Asynchronous Address Latch Cycle

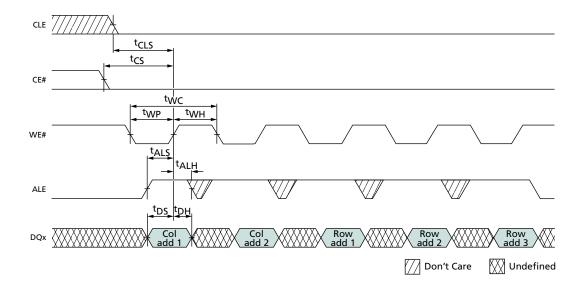

www.DataSheet4U.com




#### **Asynchronous Data Input**

Data is written from DQ[7:0] to the cache register of the selected die (LUN) on the rising edge of WE# when CE# is LOW, ALE is LOW, CLE is LOW, and RE# is HIGH.

Data input is ignored by die (LUNs) that are not selected or are busy (RDY = 0).



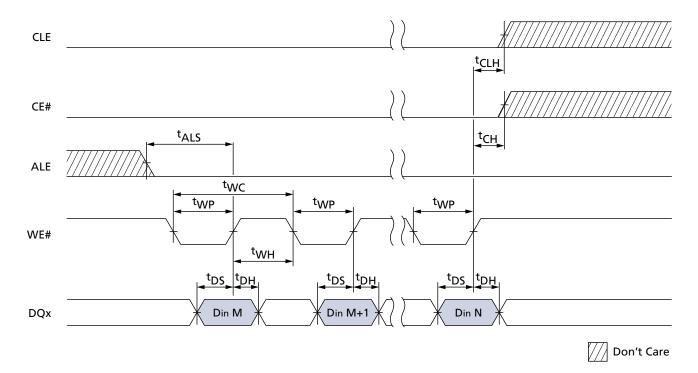

www.DataSheet4U.com




#### **Asynchronous Data Output**

Data can be output from a die (LUN) if it is in a READY state. Data output is supported following a READ operation from the NAND Flash array. Data is output from the cache register of the selected die (LUN) to DQ[7:0] on the falling edge of RE# when CE# is LOW, ALE is LOW, CLE is LOW, and WE# is HIGH.

If the host controller is using a <sup>t</sup>RC of 30ns or greater, the host can latch the data on the rising edge of RE# (see Figure 22 for proper timing). If the host controller is using a <sup>t</sup>RC of less than 30ns, the host can latch the data on the next falling edge of RE# (see Figure 23 (page 33) for extended data output (EDO) timing).

Using the READ STATUS ENHANCED (78h) command prevents data contention following an interleaved die (multi-LUN) operation. After issuing the READ STATUS EN-HANCED (78h) command, to enable data output, issue the READ MODE (00h) command.

Data output requests are typically ignored by a die (LUN) that is busy (RDY = 0); however, it is possible to output data from the status register even when a die (LUN) is busy by first issuing the READ STATUS (70h) or READ STATUS ENHANCED (78h) command.

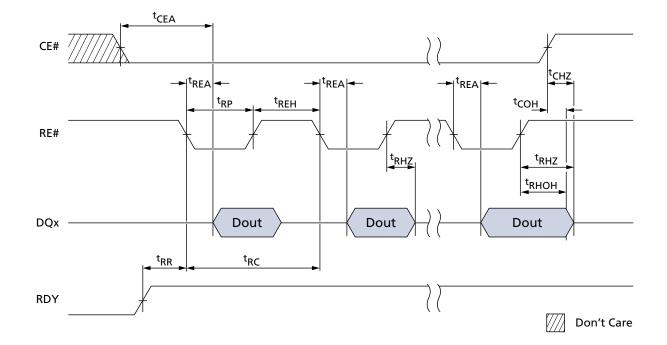


#### Figure 22: Asynchronous Data Output Cycles

www.DataSheet4U.com





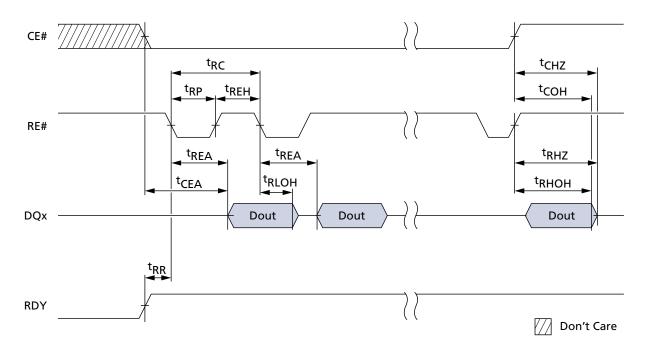

#### Write Protect

The write protect# (WP#) signal enables or disables PROGRAM and ERASE operations to a target. When WP# is LOW, PROGRAM and ERASE operations are disabled. When WP# is HIGH, PROGRAM and ERASE operations are enabled.

It is recommended that the host drive WP# LOW during power-on until Vcc and Vccq are stable to prevent inadvertent PROGRAM and ERASE operations (see Device Initialization (page 46) for additional details).

WP# must be transitioned only when the target is not busy and prior to beginning a command sequence. After a command sequence is complete and the target is ready, WP# can be transitioned. After WP# is transitioned, the host must wait <sup>t</sup>WW before issuing a new command.

The WP# signal is always an active input, even when CE# is HIGH. This signal should not be multiplexed with other signals.

#### Ready/Busy#

www.DataSheet4U.com

The ready/busy# (R/B#) signal provides a hardware method of indicating whether a target is ready or busy. A target is busy when one or more of its die (LUNs) are busy (RDY = 0). A target is ready when all of its die (LUNs) are ready (RDY = 1). Because each die (LUN) contains a status register, it is possible to determine the independent status of each die (LUN) by polling its status register instead of using the RWW.DataSheetaD.com tus Operations (page 71) for details regarding die (LUN) status).

This signal requires a pull-up resistor, Rp, for proper operation. R/B# is HIGH when the target is ready, and transitions LOW when the target is busy. The signal's open-drain



driver enables multiple R/B# outputs to be OR-tied. Typically, R/B# is connected to an interrupt pin on the system controller (see Figure 24 (page 34)).

The combination of Rp and capacitive loading of the R/B# circuit determines the rise time of the R/B# signal. The actual value used for Rp depends on the system timing requirements. Large values of Rp cause R/B# to be delayed significantly. Between the 10-to 90-percent points on the R/B# waveform, the rise time is approximately two time constants (TC).

$$TC = R \times C$$

Where R = Rp (resistance of pull-up resistor), and C = total capacitive load.


The fall time of the R/B# signal is determined mainly by the output impedance of the R/B# signal and the total load capacitance. Approximate Rp values using a circuit load of 100pF are provided in Figure 29 (page 37).

The minimum value for Rp is determined by the output drive capability of the R/B# signal, the output voltage swing, and Vccq.

$$Rp = \frac{Vcc (MAX) - Vol (MAX)}{IOL + \Sigma iI}$$

Where  $\Sigma$  is the sum of the input currents of all devices tied to the R/B# pin.


#### Figure 24: READ/BUSY# Open Drain

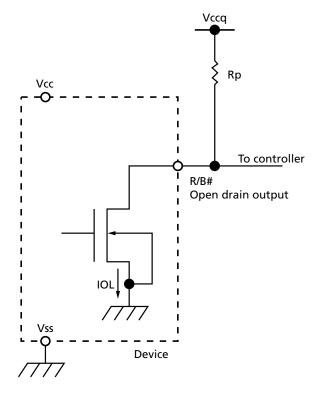

www.DataSheet4U.com




#### Figure 25: <sup>t</sup>Fall and <sup>t</sup>Rise (V<sub>CCQ</sub> = 2.7-3.6V)

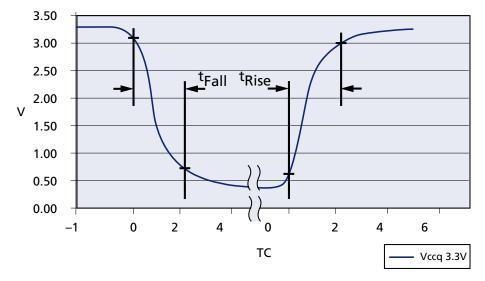

- Notes: 1. <sup>t</sup>FALL is  $V_{OH(DC)}$  to  $V_{OL(AC)}$  and <sup>t</sup>RISE is  $V_{OL(DC)}$  to  $V_{OH(AC)}$ .
  - 2. <sup>t</sup>Rise dependent on external capacitance and resistive loading and output transistor impedance.
  - 3. <sup>t</sup>Rise primarily dependent on external pull-up resistor and external capacitive loading.
  - 4. <sup>t</sup>Fall = 10ns at 3.3V
  - 5. See TC values in Figure 29 (page 37) for approximate Rp value and TC.

#### Figure 26: <sup>t</sup>Fall and <sup>t</sup>Rise (V<sub>CCQ</sub> = 1.7-1.95V)

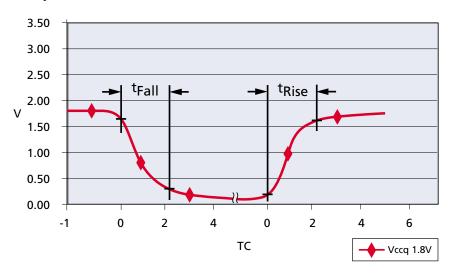

www.DataSheet4U.com

Notes: 1. <sup>t</sup>FALL is  $V_{OH(DC)}$  to  $V_{OL(AC)}$  and <sup>t</sup>RISE is  $V_{OL(DC)}$  to  $V_{OH(AC)}$ .

- tRise is primarily dependent on external pull-up resistor and external capacitive loading.
   tFall ≈ 7ns at 1.8V.
- 4. See TC values in Figure 29 (page 37) for TC and approximate Rp value.



#### Figure 27: IOL vs Rp (V<sub>CCQ</sub> = 2.7-3.6V)


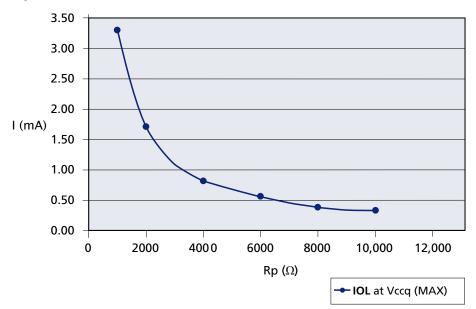



Figure 28: IOL vs Rp (V<sub>CCQ</sub> = 1.7-1.95V)

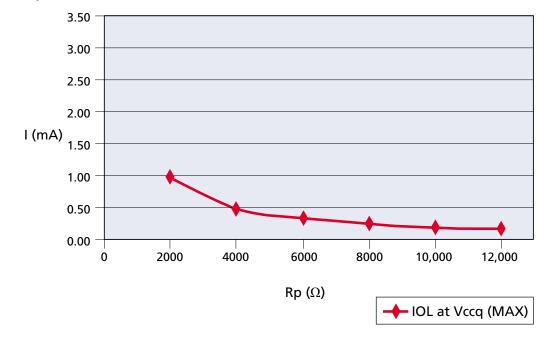

www.DataSheet4U.com



Figure 29: TC vs Rp

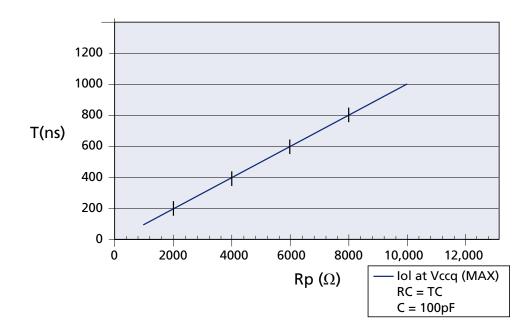

www.DataSheet4U.com



# **Bus Operation – Synchronous Interface**

These NAND Flash devices have two interfaces—a synchronous interface for fast data I/O transfer and an asynchronous interface that is backward compatible with existing NAND Flash devices.

The NAND Flash command protocol for both the asynchronous and synchronous interfaces is identical. However, there are some differences betweeen the asynchronous and synchronous interfaces when issuing command, address, and data I/O cycles using the NAND Flash signals.

When the synchronous interface is activated on a target (see Activating Interfaces (page 47)), the target is capable of high-speed DDR data transfers. Existing signals are redefined for high-speed DDR I/O. The WE# signal becomes CLK. DQS is enabled. The RE# signal becomes W/R#. CLK provides a clock reference to the NAND Flash device.

DQS is a bidirectional data strobe. During data output, DQS is driven by the NAND Flash device. During data input, DQS is controlled by the host controller while input-ting data on DQ[7:0].

The direction of DQS and DQ[7:0] is controlled by the W/R# signal. When the W/R# signal is latched HIGH, the controller is driving the DQ bus and DQS. When the W/R# is latched LOW, the NAND Flash is driving the DQ bus and DQS.

The synchronous interface bus modes are summarized below.

Mode	CE#	CLE	ALE	CLK	W/R#	DQS	DQ[7:0]	WP#	Notes
Standby	Н	Х	Х	Х	Х	Х	Х	0V/V <sub>CCQ</sub>	1, 2
Bus idle	L	L	L		н	x	х	х	
Bus driv- ing	L	L	L	₹	L	output	output	Х	
Command input	L	Н	L	₹	Н	X	input	Н	3
Address input	L	L	Н	l .₹	н	X	input	Н	3
Data input	L	Н	Н	<b>_▲</b> ₹	н	<b>_₹</b> ₹	input	Н	4
Data out- put	L	Н	Н	_ <b>▲</b> ₹	L	See Note 5	output	Х	5
Write pro- tect	Х	X	Х	X	X	X	Х	L	
Undefined	L	L	н		L	output	output	х	
Undefined	L pet4U com	н	L		L	output	output	х	

#### **Table 4: Synchronous Interface Mode Selection**

Notes: 1. CLK can be stopped when the target is disabled, even when R/B# WWW.DataSheet4U.com

2. WP# should be biased to CMOS LOW or HIGH for standby.

- 3. Commands and addresses are latched on the rising edge of CLK.
- 4. During data input to the device, DQS is the "clock" that latches the data in the cache register.



- 5. During data output from the NAND Flash device, DQS is an output generated from CLK after <sup>t</sup>DQSCK delay.
- 6. Mode selection settings for this table: H = Logic level HIGH; L = Logic level LOW; X =  $V_{IH}$  or  $V_{IL}$ .

### Synchronous Enable/Standby

In addition to the description in the section Asynchronous Enable/Standby (page 28), the following requirements also apply when the synchronous interface is active.

Before enabling a target, CLK must be running and ALE and CLE must be LOW. When CE# is driven LOW, all of the signals for the selected target are enabled. The target is not enabled until <sup>t</sup>CS completes; the target's bus is then idle.

Prior to disabling a target, the target's bus must be idle. A target is disabled when CE# is driven HIGH, even when it is busy. All of the target's signals are disabled except CE#, WP#, and R/B#. After the target is disabled, CLK can be stopped.

A target enters low-power standby when it is disabled and is not busy. If the target is busy when it is disabled, the target enters standby after all of the die (LUNs) complete their operations.

### **Synchronous Bus Idle/Driving**

A target's bus is idle or driving when CLK is running, CE# is LOW, ALE is LOW, and CLE is LOW.


The bus is idle when W/R# transitions HIGH and is latched by CLK. During the bus idle mode, all signals are enabled; DQS and DQ[7:0] are inputs. No commands, addresses, or data are latched into the target; no data is output. When entering the bus idle mode, the host must wait a minimum of <sup>t</sup>CAD before changing the bus mode. In the bus idle mode, the only valid bus modes supported are: bus driving, command, address, and DDR data input.

The bus is driving when W/R# transitions LOW and is latched by CLK. During the bus driving mode, all signals are enabled; DQS is LOW and DQ[7:0] is driven LOW or HIGH, but no valid data is output. Following the bus driving mode, the only valid bus modes supported are bus idle and DDR data output.

www.DataSheet4U.com



#### Figure 30: Synchronous Bus Idle/Driving Behavior

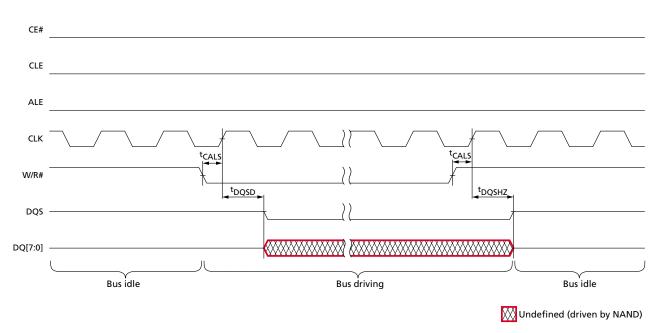

Note: 1. Only the selected die (LUN) drives DQS and DQ[7:0]. During an interleaved die (multi-LUN) operation, the host must use the READ STATUS ENHANCED (78h) to prevent data output contention.

#### **Synchronous Commands**

A command is written from DQ[7:0] to the command register on the rising edge of CLK when CE# is LOW, ALE is LOW, CLE is HIGH, and W/R# is HIGH.


After a command is latched—and prior to issuing the next command, address, or data I/O—the bus must go to bus idle mode on the next rising edge of CLK, except when the clock period, <sup>t</sup>CK, is greater than <sup>t</sup>CAD.

Commands are typically ignored by die (LUNs) that are busy (RDY = 0); however, some commands, such as READ STATUS (70h) and READ STATUS ENHANCED (78h), are accepted by die (LUNs), even when they are busy.

www.DataSheet4U.com



#### Figure 31: Synchronous Command Cycle

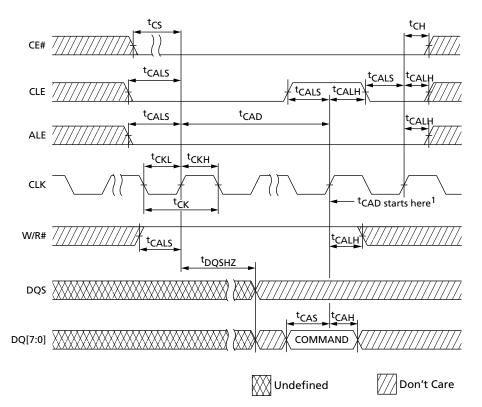

Note: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock from which the command cycle is latched for subsequent command, address, data input, or data output cycle(s).

### **Synchronous Addresses**

A synchronous address is written from DQ[7:0] to the address register on the rising edge of CLK when CE# is LOW, ALE is HIGH, CLE is LOW, and W/R# is HIGH.

After an address is latched—and prior to issuing the next command, address, or data I/O —the bus must go to bus idle mode on the next rising edge of CLK, except when the clock period, <sup>t</sup>CK, is greater than <sup>t</sup>CAD.


Bits not part of the address space must be LOW (see Device and Array Organization). The number of address cycles required for each command varies. Refer to the command descriptions to determine addressing requirements.

Addresses are typically ignored by die (LUNs) that are busy (RDY = 0); however, some addresses such as address cycles that follow the READ STATUS ENHANCED (78h) command, are accepted by die (LUNs), even when they are busy.

www.DataSheet4U.com



#### Figure 32: Synchronous Address Cycle

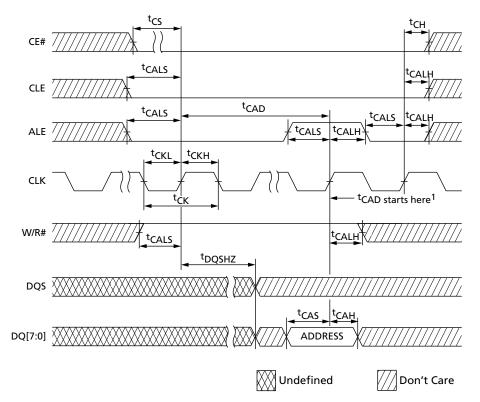

Note: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock from which the command cycle is latched for subsequent command, address, data input, or data output cycle(s).

## Synchronous DDR Data Input

To enter the DDR data input mode, the following conditions must be met:

- CLK is running
- CE# is LOW
- W/R# is HIGH
- <sup>t</sup>CAD is met
- DQS is LOW
- ALE and CLE are HIGH on the rising edge of CLK

Upon entering the DDR data input mode after <sup>t</sup>DQSS, data is written from DQ[7:0] to the cache register on each and every rising and falling edge of DQS (center-aligned) when CLK is running and the DQS to CLK skew meets <sup>t</sup>DSH and <sup>t</sup>DSS, CE# is LOW, W/R# is HIGH, and ALE and CLE are HIGH on the rising edge of CLK.

www.DataSheet4U.com

To exit DDR data input mode, the following conditions must be monww.DataSheet4U.com

- CLK is running and the DQS to CLK skew meets <sup>t</sup>DSH and <sup>t</sup>DSS
- CE# is LOW
- W/R# is HIGH




- ALE and CLE are latched LOW on the rising edge of CLK
- The final two data bytes of the data input sequence are written to DQ[7:0] to the cache register on the rising and falling edges of DQS after the last cycle in the data input sequence in which ALE and CLE are latched HIGH.
- DQS is held LOW for  ${}^t\!WPST$  (after the final falling edge of DQS)

Following <sup>t</sup>WPST, the bus enters bus idle mode and <sup>t</sup>CAD begins on the next rising edge of CLK. After <sup>t</sup>CAD starts, the host can disable the target if desired.

Data input is ignored by die (LUNs) that are not selected or are busy.

#### Figure 33: Synchronous DDR Data Input Cycles

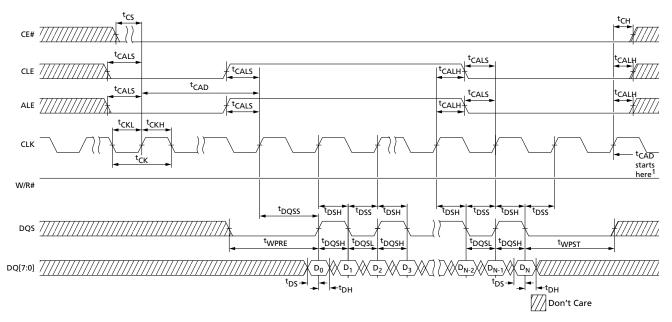

- Notes: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the first rising edge of the clock after <sup>t</sup>WPST completes.
  - 2. <sup>t</sup>DSH (MIN) generally occurs during <sup>t</sup>DQSS (MIN).
  - 3. <sup>t</sup>DSS (MIN) generally occurs during <sup>t</sup>DQSS (MAX).

# Synchronous DDR Data Output

Data can be output from a die (LUN) if it is ready. Data output is supported following a READ operation from the NAND Flash array.

To enter the DDR data output mode, the following conditions must be met:

• CLK is running

www.DataSheet4U.com

- The host has released the DQ[7:0] bus and DQS
- The nost has released the DQ[7:0] bus and DQS
   W/R# is latched LOW on the rising edge of CLK to enable the selected die (LUN) to take ownership of the DQ[7:0] bus and DQS within <sup>t</sup>WRCK
- <sup>t</sup>CAD is met

• CE# is LOW

• ALE and CLE are HIGH on the rising edge of CLK



Upon entering the DDR data output mode, DQS will toggle HIGH and LOW with a delay of <sup>t</sup>DQSCK from the respective rising and falling edges of CLK. DQ[7:0] will output data edge-aligned to the rising and falling edges of DQS, with the first transition delayed by no more than <sup>t</sup>AC.

DDR data output mode continues as long as CLK is running, CE# is LOW, W/R# is LOW, and ALE and CLE are HIGH on the rising edge of CLK.

To exit DDR data output mode, the following conditions must be met:

- CLK is running
- CE# is LOW
- W/R# is LOW
- ALE and CLE are latched LOW on the rising edge of CLK


The final two data bytes are output on DQ[7:0] on the final rising and falling edges of DQS. The final rising and falling edges of DQS occur <sup>t</sup>DQSCK after the last cycle in the data output sequence in which ALE and CLE are latched HIGH. After <sup>t</sup>CKWR, the bus enters bus idle mode and <sup>t</sup>CAD begins on the next rising edge of CLK. Once <sup>t</sup>CAD starts the host can disable the target if desired.

Data output requests are typically ignored by a die (LUN) that is busy (RDY = 0); however, it is possible to output data from the status register even when a die (LUN) is busy by issuing the READ STATUS (70h) or READ STATUS ENHANCED (78h) command.

www.DataSheet4U.com



#### Figure 34: Synchronous DDR Data Output Cycles

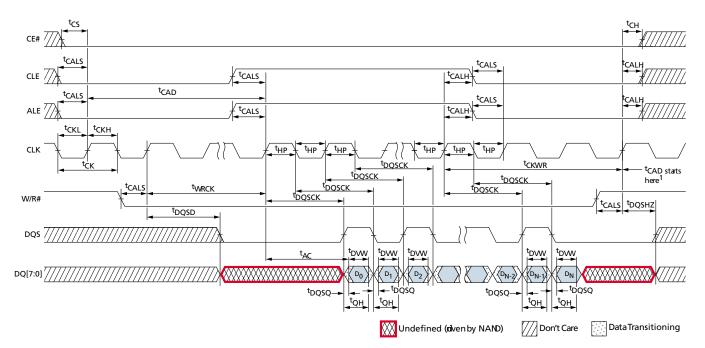

- Notes: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock after <sup>t</sup>CKWR for subsequent command or data output cycle(s).
  - 2. See Figure 31 (page 41) for details of W/R# behavior.
  - 3. <sup>t</sup>AC is the DQ output window relative to CLK and is the long-term component of DQ skew.
  - 4. For W/R# transitioning HIGH, DQ[7:0] and DQS go to tri-state.
  - 5. For W/R# transitioning LOW, DQ[7:0] drives current state and DQS goes LOW.
  - 6. After final data output, DQ[7:0] is driven until W/R# goes HIGH, but is not valid.

## **Write Protect**

See Write Protect (page 33).

## Ready/Busy#

See Ready/Busy# (page 33).

www.DataSheet4U.com




# **Device Initialization**

Some NAND Flash devices do not support  $V_{CCQ}$ . For these devices all references to  $V_{CCQ}$  are replaced with  $V_{CC}$ .

Micron NAND Flash devices are designed to prevent data corruption during power transitions.  $V_{CC}$  is internally monitored. (The WP# signal supports additional hardware protection during power transitions.) When ramping  $V_{CC}$  and  $V_{CCQ}$ , use the following procedure to initialize the device:

- 1. Ramp V<sub>CC</sub>.
- 2. Ramp  $V_{CCQ}$ .  $V_{CCQ}$  must not exceed  $V_{CC}$ .
- 3. The host must wait for R/B# to be valid and HIGH before issuing RESET (FFh) to any target (see Figure 35). The R/B# signal becomes valid when 50µs has elapsed since the beginning the  $V_{CC}$  ramp, and 10µs has elapsed since  $V_{CCQ}$  reaches  $V_{CCQ}$  (MIN) and  $V_{CC}$  reaches  $V_{CC}$  (MIN).
- 4. If not monitoring R/B#, the host must wait at least 100 $\mu$ s after V<sub>CCQ</sub> reaches V<sub>CCQ</sub> (MIN) and V<sub>CC</sub> reaches V<sub>CC</sub> (MIN). If monitoring R/B#, the host must wait until R/B# is HIGH.
- 5. The asynchronous interface is active by default for each target. Each LUN draws less than an average of  $10mA (I_{ST})$  measured over intervals of 1ms until the RESET (FFh) command is issued.
- 6. The RESET (FFh) command must be the first command issued to all targets (CE#s) after the NAND Flash device is powered on. Each target will be busy for <sup>t</sup>POR after a RESET command is issued. The RESET busy time can be monitored by polling R/B# or issuing the READ STATUS (70h) command to poll the status register.
- 7. The device is now initialized and ready for normal operation.

At power-down,  $V_{CCQ}$  must go LOW, either before, or simultaneously with,  $V_{CC}$  going LOW.

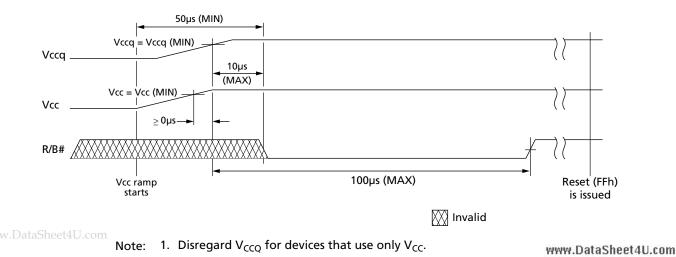

#### Figure 35: R/B# Power-On Behavior



# **Activating Interfaces**

After performing the steps under Device Initialization (page 46), the asynchronous interface is active for all targets on the device.

Each target's interface is independent of other targets, so the host is responsible for changing the interface for each target.

If the host and NAND Flash device, through error, are no longer using the same interface, then steps under Activating the Asynchronous Interface are performed to resynchronize the interfaces.

## **Activating the Asynchronous Interface**

To activate the asynchronous NAND interface, once the synchronous interface is active, the following steps are repeated for each target:

- 1. The host pulls CE# HIGH, disables its input to CLK, and enables its asynchronous interface.
- 2. The host pulls CE# LOW and issues the RESET (FFh) command, using an asynchronous command cycle.
- 3. R/B# goes LOW for <sup>t</sup>RST.
- 4. After <sup>T</sup>ITC, and during <sup>t</sup>RST, the device enters the asynchronous NAND interface. READ STATUS (70h) and READ STATUS ENHANCED (78h) are the only commands that can be issued.
- 5. After <sup>t</sup>RST, R/B# goes HIGH. Timing mode feature address (01h), subfeature parameter P1 is set to 00h, indicating that the asynchronous NAND interface is active and that the device is set to timing mode 0.

For further details, see Reset Operations.

## **Activating the Synchronous Interface**

To activate the synchronous NAND Flash interface, the following steps are repeated for each target:


- 1. Issue the SET FEATURES (EFh) command.
- 2. Write address 01h, which selects the timing mode.
- 3. Write P1 with 1Xh, where "X" is the timing mode used in the synchronous interface (see Configuration Operations).
- 4. Write P2–P4 as 00h-00h-00h.
- 5. R/B# goes LOW for <sup>t</sup>ITC. The host should pull CE# HIGH. During <sup>t</sup>ITC, the host should not issue any type of command, including status commands, to the NAND Flash device.
- 6. After <sup>t</sup>ITC, R/B# goes HIGH and the synchronous interface is enabled. Before pulling CE# LOW, the host should enable the clock.

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Activating Interfaces

#### **Figure 36: Activating the Synchronous Interface**

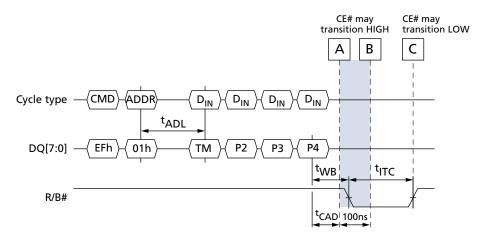

Note: 1. TM = Timing mode.

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Command Definitions

# **Command Definitions**

### Table 5: Command Set

Command	Command Cycle #1	Number of Valid Address Cycles	Data Input Cycles	Command Cycle #2	Valid While Selected LUN is Busy <sup>1</sup>	Valid While Other LUNs are Busy <sup>2</sup>	Notes
Reset Operations							
RESET	FFh	0	_	_	Yes	Yes	
SYNCHRONOUS RESET	FCh	0	_	-	Yes	Yes	
Identification Operatio	ns		•				•
READ ID	90h	1	_	-			3
READ PARAMETER PAGE	ECh	1	_	-			
READ UNIQUE ID	EDh	1	_	_			
<b>Configuration Operatio</b>	ons		•				•
GET FEATURES	EEh	1	-	-			3
SET FEATURES	EFh	1	4	-			4
Status Operations			•				•
READ STATUS	70h	0	-	-	Yes		
READ STATUS ENHANCED	78h	3	-	-	Yes	Yes	
Column Address Operat	tions		3				
CHANGE READ COLUMN	05h	2	-	E0h		Yes	
CHANGE READ COLUMN ENHANCED	06h	5	-	E0h		Yes	
CHANGE WRITE COLUMN	85h	2	Optional	-		Yes	
CHANGE ROW ADDRESS	85h	5	Optional	-		Yes	5
Read Operations			3				
READ MODE	00h	0	-	-		Yes	
READ PAGE	00h	5	-	30h		Yes	6
READ PAGE MULTI- PLANE	00h	5	-	32h		Yes	
READ PAGE CACHE SEQUENTIAL	31h	0	-	-		Yes	7
READ PAGE CACHE RANDOM	00h	5	-	31h		Yes	6,7
READ PAGE CACHE LAST	3Fh	0	_	_		Yes	7
Program Operations	· · · · · · · · · · · · · · · · · · ·		4	4			
PROGRAM PAGE	80h	5	Yes	10h		Yes	
PROGRAM PAGE MULTI-PLANE	80h	5	Yes	11h		www.DeataShe	et4U.con
PROGRAM PAGE CACHE	80h	5	Yes	15h		Yes	8
Erase Operations			,				



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Command Definitions

#### Table 5: Command Set (Continued)

Command	Command Cycle #1	Number of Valid Address Cycles	Data Input Cycles	Command Cycle #2	Valid While Selected LUN is Busy <sup>1</sup>	Valid While Other LUNs are Busy <sup>2</sup>	Notes
ERASE BLOCK	60h	3	_	D0h		Yes	
ERASE BLOCK MULTI-PLANE	60h	3	-	D1h		Yes	
Copyback Operations			1				
COPYBACK READ	00h	5	-	35h		Yes	6
COPYBACK PROGRAM	85h	5	Optional	10h		Yes	
COPYBACK PROGRAM MULTI-PLANE	85h	5	Optional	11h		Yes	

Notes: 1. Busy means RDY = 0.

- 2. These commands can be used for interleaved die (multi-LUN) operations (see Interleaved Die (Multi-LUN) Operations (page 106)).
- 3. The READ ID (90h) and GET FEATURES (EEh) output identical data on rising and falling DQS edges.
- 4. The SET FEATURES (EFh) command requires data transition prior to the rising edge of CLK, with identical data for the rising and falling edges.
- 5. Command cycle #2 of 11h is conditional. See CHANGE ROW ADDRESS (85h) (page 77) for more details.
- 6. This command can be preceded by up to one READ PAGE MULTI-PLANE (00h-32h) command to accommodate a maximum simultaneous two-plane array operation.
- Issuing a READ PAGE CACHE-series (31h, 00h-31h, 00h-32h, 3Fh) command when the array is busy (RDY = 1, ARDY = 0) is supported if the previous command was a READ PAGE (00h-30h) or READ PAGE CACHE-series command; otherwise, it is prohibited.
- Issuing a PROGRAM PAGE CACHE (80h-15h) command when the array is busy (RDY = 1, ARDY = 0) is supported if the previous command was a PROGRAM PAGE CACHE (80h-15h) command; otherwise, it is prohibited.

www.DataSheet4U.com



# **Reset Operations**

### **RESET (FFh)**

The RESET (FFh) command is used to put a target into a known condition and to abort command sequences in progress. This command is accepted by all die (LUNs), even when they are busy.


When FFh is written to the command register, the target goes busy for <sup>t</sup>RST. During <sup>t</sup>RST, the selected target (CE#) discontinues all array operations on all die (LUNs). All pending single- and multi-plane operations are cancelled. If this command is issued while a PROGRAM or ERASE operation is occurring on one or more die (LUNs), the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid.

RESET must be issued as the first command to each target following power-up (see Device Initialization (page 46)). Use of the READ STATUS ENHANCED (78h) command is prohibited during the power-on RESET. To determine when the target is ready, use READ STATUS (70h).

If the RESET (FFh) command is issued when the synchronous interface is enabled, the target's interface is changed to the asynchronous interface and the timing mode is set to 0. The RESET (FFh) command can be issued asynchronously when the synchronous interface is active, meaning that CLK does not need to be continuously running when CE# is transitioned LOW and FFh is latched on the rising edge of CLK. After this command is latched, the host should not issue any commands during <sup>t</sup>ITC. After <sup>t</sup>ITC, and during or after <sup>t</sup>RST, the host can poll each LUN's status register.

If the RESET (FFh) command is issued when the asynchronous interface is active, the target's asynchronous timing mode remains unchanged. During or after <sup>t</sup>RST, the host can poll each LUN's status register.

#### Figure 37: RESET (FFh) Operation

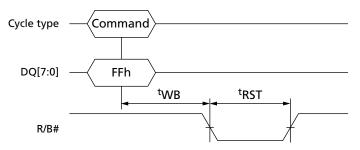

www.DataSheet4U.com



## **SYNCHRONOUS RESET (FCh)**


When the synchronous interface is active, the SYNCHRONOUS RESET (FCh) command is used to put a target into a known condition and to abort command sequences in progress. This command is accepted by all die (LUNs), even when they are BUSY.

When FCh is written to the command register, the target goes busy for <sup>t</sup>RST. During <sup>t</sup>RST, the selected target (CE#) discontinues all array operations on all die (LUNs). All pending single- and multi-plane operations are cancelled. If this command is issued while a PROGRAM or ERASE operation is occurring on one or more die (LUNs), the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid and the synchronous interface remains active.

During or after <sup>t</sup>RST, the host can poll each LUN's status register.

SYNCHRONOUS RESET is only accepted while the synchronous interface is active. Its use is prohibited when the asynchronous interface is active.

#### Figure 38: SYNCHRONOUS RESET (FCh) Operation

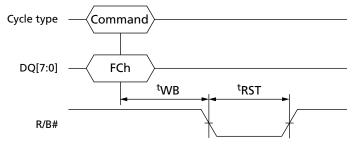

www.DataSheet4U.com



# **Identification Operations**

## READ ID (90h)

The READ ID (90h) command is used to read identifier codes programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.

 
Writing 90h to the command register puts the target in read ID mode. The target stays in this mode until another valid command is issued.

 
When the 90h command is followed by a 00h address cycle, the target returns a 5-byte identifier code that includes the manufacturer ID, device configuration, and part-specific information.

When the 90h command is followed by a 20h address cycle, the target returns the 4-byte ONFI identifier code.


After the 90h and address cycle are written to the target, the host enables data output mode to read the identifier information. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one data byte is output per rising edge of DQS when ALE and CLE are HIGH; the data byte on the falling edge of DQS is identical to the data byte output on the previous rising edge of DQS.

#### Figure 39: READ ID (90h) with 00h Address Operation





#### Figure 40: READ ID (90h) with 20h Address Operation

 

Note: 1. See the READ ID Parameter tables for byte definitions.

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND READ ID Parameter Tables

# **READ ID Parameter Tables**

Device	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
MT29F16G08ABABA	2Ch	48h	00h	26h	89h	00h	00h	00h
MT29F16G08ABCBB	2Ch	48h	00h	26h	89h	00h	00h	00h
MT29F32G08AFABA	2Ch	48h	00h	26h	89h	00h	00h	00h
MT29F32G08AECBB	2Ch	48h	00h	26h	89h	00h	00h	00h
MT29F64G08AJABA	2Ch	68h	01h	A6h	89h	00h	00h	00h
MT29F64G08AKABA	2Ch	68h	01h	A6h	89h	00h	00h	00h
MT29F64G08AKCBB	2Ch	68h	01h	A6h	89h	00h	00h	00h
MT29F64G08AMABA	2Ch	48h	00h	26h	89h	00h	00h	00h
MT29F64G08AMCBB	2Ch	48h	00h	26h	89h	00h	00h	00h
MT29F128G08AUABA	2Ch	68h	01h	A6h	89h	00h	00h	00h
MT29F128G08AUCBB	2Ch	68h	01h	A6h	89h	00h	00h	00h

#### Table 6: Read ID Parameters for Address 00h

Note: 1. h = hexadecimal.

### Table 7: Read ID Parameters for Address 20h

Device	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4
All	4Fh	4Eh	46h	49h	XXh

Notes: 1. h = hexadecimal.

2. XXh = Undefined.

www.DataSheet4U.com



### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Configuration Operations

# **Configuration Operations**

The SET FEATURES (EFh) and GET FEATURES (EEh) commands are used to modify the target's default power-on behavior. These commands use a one-byte feature address to determine which subfeature parameters will be read or modified. Each feature address (in the 00h to FFh range) is defined in Table 8. The SET FEATURES (EFh) command writes subfeature parameters (P1-P4) to the specified feature address. The GET FEA-TURES command reads the subfeature parameters (P1-P4) at the specified feature address.

Unless otherwise specifed, the values of the feature addresses do not change when RE-SET (FFh, FCh) is issued by the host.

Feature Address	Definition
00h	Reserved
01h	Timing mode
02h–0Fh	Reserved
10h	Programmable output drive strength
11h–7Fh	Reserved
80h	Programmable output drive strength
81h	Programmable RB# pull-down strength
82h–8Fh	Reserved
90h	Array operation mode
91h–FFh	Reserved

#### **Table 8: Feature Address Definitions**

# **SET FEATURES (EFh)**

The SET FEATURES (EFh) command writes the subfeature parameters (P1-P4) to the specified feature address to enable or disable target-specific features. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EFh to the command register puts the target in the set features mode. The target stays in this mode until another command is issued.


The EFh command is followed by a valid feature address as specified in Table 8. The host waits for <sup>t</sup>ADL before the subfeature parameters are input. When the asynchronous interface is active, one subfeature parameter is latched per rising edge of WE#. When the synchronous interface is active, one subfeature parameter is latched per rising edge of DQS. The data on the falling edge of DQS should be identical to the subfeature parameter input on the previous rising edge of DQS. The device is not required to wait for the repeated data byte before beginning internal actions.

After all four subfeature parameters are input, the target goes busy for <sup>t</sup>FEAT. The READ STATUS (70h) command can be used to monitor for command completion.

Feature address 01h (timing mode) operation is unique. If SET FEAWWW DataSheet4U.com modify the interface type, the target will be busy for <sup>t</sup>ITC. See Activating Interfaces (page 47) for details.



#### Figure 41: SET FEATURES (EFh) Operation

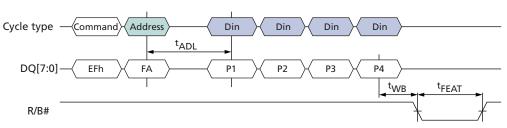

### **GET FEATURES (EEh)**


The GET FEATURES (EEh) command reads the subfeature parameters (P1-P4) from the specified feature address. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EEh to the command register puts the target in get features mode. The target stays in this mode until another valid command is issued.

When the EEh command is followed by a feature address, the target goes busy for <sup>t</sup>FEAT. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode. During and prior to data output, use of the READ STATUS ENHANCED (78h) command is prohibited.

After <sup>t</sup>FEAT completes, the host enables data output mode to read the subfeature parameters. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one subfeature parameter is output per DQS toggle on rising or falling edge of DQS.

#### Figure 42: GET FEATURES (EEh) Operation

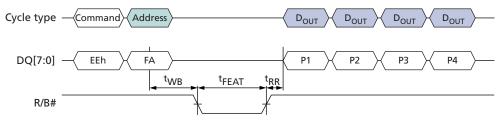

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Configuration Operations

#### **Table 9: Feature Address 01h: Timing Mode**

Subfeature Pa-											
rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											
Timing mode	Mode 0 (default)					0	0	0	0	x0h	1, 2
	Mode 1					0	0	0	1	x1h	
	Mode 2					0	0	1	0	x2h	
	Mode 3					0	0	1	1	x3h	
	Mode 4					0	1	0	0	x4h	
	Mode 5					0	1	0	1	x5h	
Data interface	Asynchronous (de- fault)			0	0					0xh	1
	Synchronous DDR			0	1					1xh	
	Reserved			1	x					2xh	
Reserved		0	0							00b	
P2	·			•	1	1					
Reserved		0	0	0	0	0	0	0	0	00h	
Р3	·			•	1	1					
Reserved		0	0	0	0	0	0	0	0	00h	
P4											
Reserved		0	0	0	0	0	0	0	0	00h	

Notes: 1. Asynchronous timing mode 0 is the default, power-on value.

2. If the synchronous interface is active, a RESET (FFh) command will change the timing mode and data interface bits of feature address 01h to their default values. If the asynchronous interface is active, a RESET (FFh) command will not change the values of the timing mode or data interface bits to their default valued.

#### Table 10: Feature Addresses 10h and 80h: Programmable Output Drive Strength

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1			•								
Output drive	Overdrive 2							0	0	00h	1
strength	Overdrive 1							0	1	01h	1
	Nominal (de- fault)							1	0	02h	
	Underdrive							1	1	03h	1
Reserved Sheet 4U.c	om	0	0	0	0	0	0			00h	
P2									www.	DataShe	et4U.con
Reserved		0	0	0	0	0	0	0	0	00h	
Р3											
Reserved		0	0	0	0	0	0	0	0	00h	



#### Table 10: Feature Addresses 10h and 80h: Programmable Output Drive Strength (Continued)

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P4											
Reserved		0	0	0	0	0	0	0	0	00h	

Note: 1. See Output Drive Impedance (page 108) for details.

#### Table 11: Feature Addresses 81h: Programmable R/B# Pull-Down Strength

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1			•				•				
R/B# pull-down	Full (default)							0	0	00h	1
strength	Three-quarter							0	1	01h	
	One-half							1	0	02h	
	One-quarter							1	1	03h	
Reserved		0	0	0	0	0	0			00h	
P2	•		•				•	•			
Reserved		0	0	0	0	0	0	0	0	00h	
Р3	•		•				•	•			
Reserved		0	0	0	0	0	0	0	0	00h	
Р4				1							
Reserved		0	0	0	0	0	0	0	0	00h	

Note: 1. This feature address is used to change the default R/B# pull-down strength. Its strength should be selected based on the expected loading of R/B#. Full strength is the default, power-on value.

#### Table 12: Feature Addresses 90h: Array Operation Mode

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1					•				•		
Array Operation Mode	Normal (de- fault)								0	00h	
	OTP Block								1	01h	1
Reserved		0	0	0	0	0	0	0		00h	
P2	·			1				1			
Reserved		0	0	0	0	0	0	0	0	00h	
P3	om			1				1	www	DataShe	et4U.com
Reserved		0	0	0	0	0	0	0	0	00h	
P4	·				·						



#### Table 12: Feature Addresses 90h: Array Operation Mode (Continued)

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
Reserved		0	0	0	0	0	0	0	0	00h	

Notes: 1. See One-Time Programmable (OTP) Operations for details.

2. A RESET (FFh) command will cause the bits of the array operation mode to change to their default values.

www.DataSheet4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND READ PARAMETER PAGE (ECh)

# **READ PARAMETER PAGE (ECh)**

The READ PARAMETER PAGE (ECh) command is used to read the ONFI parameter page programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing ECh to the command register puts the target in read parameter page mode. The target stays in this mode until another valid command is issued.


When the ECh command is followed by an 00h address cycle, the target goes busy for <sup>t</sup>R. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode. Use of the READ STATUS ENHANCED (78h) command is prohibited while the target is busy and during data output.

After <sup>t</sup>R completes, the host enables data output mode to read the parameter page. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one data byte is output for each rising or falling edge of DQS.

A minimum of three copies of the parameter page are stored in the device. Each parameter page is 256 bytes. If desired, the CHANGE READ COLUMN (05h-E0h) command can be used to change the location of data output. Use of the CHANGE READ COLUMN ENHANCED (06h-E0h) command is prohibited.

The READ PARAMETER PAGE (ECh) output data can be used by the host to configure its internal settings to properly use the NAND Flash device. Parameter page data is static per part, however the value can be changed through the product cycle of NAND Flash. The host should interpret the data and configure itself accordingly.

#### Figure 43: READ PARAMETER (ECh) Operation

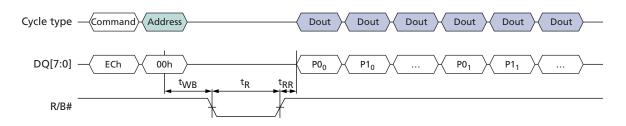

www.DataSheet4U.com



# **Parameter Page Data Structure Tables**

#### Table 13: Parameter Page Data Structure

Byte	Description	Device	Values	
levision i	nformation and features block			
0–3	Parameter page signature Byte 0: 4Fh, "O" Byte 1: 4Eh, "N" Byte 2: 46h, "F" Byte 3: 49h, "I"	_	4Fh, 4Eh, 46h, 49h	
4–5	Revision number Bit[15:4]: Reserved (0) Bit 3: 1 = supports ONFI verion 2.1 Bit 2: 1 = supports ONFI version 2.0 Bit 1: 1 = supports ONFI version 1.0 Bit 0: Reserved (0)	-	0Eh, 00h	
6–7	Features supported	MT29F16G08ABABA	58h, 00h	
	Bit[15:8]: Reserved (0)	MT29F32G08AFABA		
	Bit 7: 1 = supports extended parameter page Bit 6: 1 = supports interleaved (multi-plane) read opera-	MT29F64G08AMABA		
	tions	MT29F64G08AJABA	5Ah, 00h	
	Bit 5: 1 = supports synchronous interface	MT29F64G08AKABA		
	Bit 4: 1 = supports odd-to-even page copyback	MT29F128G08AUABA	1	
	Bit 3: 1 = supports interleaved (multi-plane) program and erase operations	MT29F16G08ABCBB	78h, 00h	
	Bit 2: 1 = supports non-sequential page programming	MT29F32G08AECBB	1	
	Bit 1: 1 = supports multiple LUN operations	MT29F64G08AMCBB		
	Bit 0: 1 = supports 16-bit data bus width	MT29F64G08AKCBB	7Ah, 00h	
		MT29F128G08AUCBB		
8–9	Optional commands supported Bit[15:9]: Reserved (0) Bit 8: 1 = supports small data move Bit 7: 1 = supports CHANGE ROW ADDRESS Bit 6: 1 = supports CHANGE READ COLUMN ENHANCED Bit 5: 1 = supports READ UNIQUE ID Bit 4: 1 = supports COPYBACK Bit 3: 1 = supports READ STATUS ENHANCED Bit 2: 1 = supports GET FEATURES and SET FEATURES Bit 1: 1 = supports read cache commands Bit 0: 1 = supports PROGRAM PAGE CACHE	_	FFh, 01h	
10–11	Reserved (0)	_	All 00h	
12–13	Reserved (0)	_	All 00h	
vw.DataSh 14	Number of parameter pages	_	03h www.DataSheet4U.co	
15–31	Reserved (0)	_	- www.DataSneet4U.co All 00h	



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values
32–43	Device manufacturer (12 ASCII characters) Micron	-	4Dh, 49h, 43h, 52h, 4Fh, 4Eh, 20h, 20h, 20h, 20h, 20h, 20h
44–63	Device model (20 ASCII characters)	MT29F16G08ABABAWP	4Dh, 54h, 32h, 39h, 46h, 31h, 36h, 47h, 30h, 38h, 41h, 42h, 41h, 42h, 41h, 57h, 50h, 20h, 20h, 20h
		MT29F32G08AFABAWP	4Dh, 54h, 32h, 39h, 46h, 33h, 32h, 47h, 30h, 38h, 41h, 46h, 41h, 42h, 41h, 57h, 50h, 20h, 20h, 20h
		MT29F64G08AJABAWP	4Dh, 54h, 32h, 39h, 46h, 36h, 34h, 47h, 30h, 38h, 41h, 4Ah, 41h, 42h, 41h, 57h, 50h, 20h, 20h, 20h
		MT29F64G08AKABAC5	4Dh, 54h, 32h, 39h, 46h, 36h, 34h, 47h, 30h, 38h, 41h, 4Bh, 41h, 42h, 41h, 43h, 35h, 20h, 20h, 20h
		MT29F64G08AMABAC5	4Dh, 54h, 32h, 39h, 46h, 36h, 34h, 47h, 30h, 38h, 41h, 4Dh, 41h, 42h, 41h, 43h, 35h, 20h, 20h, 20h
		MT29F128G08AUABAC5	4Dh, 54h, 32h, 39h, 46h, 31h, 32h, 38h, 47h, 30h, 38h, 41h, 55h, 41h, 42h, 41h, 43h, 35h, 20h, 20h

www.DataSheet4U.com



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values	
		MT29F16G08ABCBBH1	4Dh, 54h, 32h, 39h,	
			46h, 31h, 36h, 47h,	
			30h, 38h, 41h, 42h,	
			43h, 42h, 42h, 48h,	
			31h, 20h, 20h, 20h	
		MT29F32G08AECBBH1	4Dh, 54h, 32h, 39h,	
			46h, 33h, 32h, 47h,	
			30h, 38h, 41h, 45h,	
			43h, 42h, 42h, 48h,	
			31h, 20h, 20h, 20h	
		MT29F64G08AKCBBH2	4Dh, 54h, 32h, 39h,	
			46h, 36h, 34h, 47h,	
			30h, 38h, 41h, 4Bh,	
			43h, 42h, 42h, 48h, 32h, 20h, 20h, 20h	
		MT29F64G08AMCBBH2	4Dh, 54h, 32h, 39h,	
			46h, 36h, 34h, 47h, 30h, 38h, 41h, 4Dh,	
			43h, 42h, 42h, 48h,	
			32h, 20h, 20h, 20h	
		MT29F128G08AUCBBH3		
		MIT29FT28G08AUCBBH3	4Dh, 54h, 32h, 39h, 46h, 31h, 32h, 38h,	
			47h, 30h, 38h, 41h,	
			55h, 43h, 42h, 42h,	
			48h, 33h, 20h, 20h	
64	JEDEC manufacturer ID	_	2Ch	
65–66	Date code	_	00h, 00h	
67–79	Reserved (0)	_	All 00h	
Aemory o	organization block			
80–83	Number of data bytes per page	_	00h, 10h, 00h, 00h	
84–85	Number of spare bytes per page	-	E0h, 00h	
86–89	Number of data bytes per partial page	-	00h, 02h, 00h, 00h	
90–91	Number of spare bytes per partial page	-	1Ch, 00h	
92–95	Number of pages per block	_	80h, 00h, 00h, 00h	
96–99	Number of blocks per LUN	_	00h, 10h, 00h, 00h	

www.DataSheet4U.com



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values		
100	Number of LUNs per chip enable	MT29F16G08ABABA	01h		
		MT29F16G08ABCBB			
		MT29F32G08AFABA			
		MT29F32G08AECBB			
		MT29F64G08AMABA	_		
		MT29F64G08AMCBB	_		
		MT29F64G08AJABA	02h		
		MT29F64G08AKABA	_		
		MT29F64G08AKCBB	_		
		MT29F128G08AUABA	_		
		MT29F128G08AUCBB			
101	Number of address cycles Bit[7:4]: Column address cycles Bit[3:0]: Row address cycles	-	23h		
102	Number of bits per cell	_	01h		
103–104	Bad blocks maximum per LUN	-	50h, 00h		
105–106	Block endurance	-	01h, 05h		
107	Guaranteed valid blocks at beginning of target	-	01h		
108–109	Block endurance for guaranteed valid blocks	_	00h, 00h		
110	Number of programs per page	-	04h		
111	Partial programming attributes Bit[7:5]: Reserved Bit 4: 1 = partial page layout is partial page data fol- lowed by partial page spare Bit[3:1]: Reserved Bit 0: 1 = partial page programming has constraints	_	00h		
112	Number of bits ECC correctability	-	04h		
113	Number of interleaved address bits Bit[7:4]: Reserved (0) Bit[3:0]: Number of interleaved address bits	-	01h		
114	Interleaved operation attributes Bit[7:5]: Reserved (0) Bit 4: 1 = supports read cache Bit 3: Address restrictions for cache operations Bit 2: 1 = supports program cache Bit 1: 1 = no block address restrictions Bit 0: Overlapped/concurrent interleaving support	_	1Eh		
115–127	Reserved (0) – www.DataSheet4				
Electrical <b>n</b>	barameters block				



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values	
128	I/O pin capacitance per chip enable	MT29F16G08ABABAWP	05h	
		MT29F32G08AFABAWP	05h	
		MT29F64G08AJABAWP	09h	
		MT29F64G08AKABAC5	0Eh	
		MT29F64G08AMABAC5	07h	
		MT29F128G08AUABAC5	0Ah	
		MT29F16G08ABCBBH1	05h	
		MT29F32G08AECBBH1	05h	
		MT29F64G08AKCBBH2	09h	
		MT29F64G08AMCBBH2	05h	
		MT29F128G08AUCBBH3	09h	
129–130	Timing mode support Bit[15:6]: Reserved (0) Bit 5: 1 = supports timing mode 5 Bit 4: 1 = supports timing mode 4 Bit 3: 1 = supports timing mode 3 Bit 2: 1 = supports timing mode 2 Bit 1: 1 = supports timing mode 1 Bit 0: 1 = supports timing mode 0, shall be 1	_	1Fh, 00h	
131–132	Program cache timing mode support Bit[15:6]: Reserved (0) Bit 5: 1 = supports timing mode 5 Bit 4: 1 = supports timing mode 4 Bit 3: 1 = supports timing mode 3 Bit 2: 1 = supports timing mode 2 Bit 1: 1 = supports timing mode 1 Bit 0: 1 = supports timing mode 0		1Fh, 00h	
133–134	<sup>t</sup> PROG Maximum PROGRAM PAGE time (µs)	-	F4h, 01h	
135–136	<sup>t</sup> BERS Maximum BLOCK ERASE time (µs)	_	ACh, 0Dh	
137–138	<sup>t</sup> R Maximum PAGE READ time (µs)	-	19h, 00h	
139–140	<sup>t</sup> CCS Minimum change column setup time (ns)	_	C8h, 00h	

www.DataSheet4U.com



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values
141–142	Source synchronous timing mode support	MT29F16G08ABABAWP	00h, 00h
	Bit[15:6]: Reserved (0)	MT29F32G08AFABAWP	
	Bit 5: 1 = supports timing mode 5	MT29F64G08AJABAWP	
	Bit 4: 1 = supports timing mode 4 Bit 3: 1 = supports timing mode 3	MT29F64G08AKABAC5	
	Bit 2: 1 = supports timing mode 2	MT29F64G08AMABAC5	
	Bit 1: 1 = supports timing mode 1	MT29F128G08AUABAC5	
	Bit 0: 1 = supports timing mode 0	MT29F16G08ABCBBH1	1Fh, 00h
		MT29F32G08AECBBH1	
		MT29F64G08AKCBBH2	
		MT29F64G08AMCBBH2	
		MT29F128G08AUCBBH3	
143	Source synchronous features	MT29F16G08ABABAWP	00h
	Bit[7:3]: Reserved (0)	MT29F32G08AFABAWP	
	Bit 2: 1 = devices support CLK stopped for data input Bit 1: 1 = typical capacitance values present Bit 0: 0 = use <sup>t</sup> CAD MIN value	MT29F64G08AJABAWP	
		MT29F64G08AKABAC5	
		MT29F64G08AMABAC5	
		MT29F128G08AUABAC5	
		MT29F16G08ABCBBH1	02h
		MT29F32G08AECBBH1	
		MT29F64G08AKCBBH2	
		MT29F64G08AMCBBH2	
		MT29F128G08AUCBBH3	
144–145	CLK input pin capacitance, typical	MT29F16G08ABABAWP	00h, 00h
		MT29F32G08AFABAWP	·
		MT29F64G08AJABAWP	
		MT29F64G08AKABAC5	
		MT29F64G08AMABAC5	
		MT29F128G08AUABAC5	
		MT29F16G08ABCBBH1	24h, 00h
		MT29F32G08AECBBH1	,
		MT29F64G08AKCBBH2	3Eh, 00h
		MT29F64G08AMCBBH2	1Fh, 00h
		MT29F128G08AUCBBH3	35h, 00h

www.DataSheet4U.com



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values
146–147	I/O pin capacitance, typical	MT29F16G08ABABAWP	00h, 00h
		MT29F32G08AFABAWP	
		MT29F64G08AJABAWP	
		MT29F64G08AKABAC5	
		MT29F64G08AMABAC5	
		MT29F128G08AUABAC5	
		MT29F16G08ABCBBH1	2Dh, 00h
		MT29F32G08AECBBH1	
		MT29F64G08AKCBBH2	50h, 00h
		MT29F64G08AMCBBH2	28h, 00h
		MT29F128G08AUCBBH3	49h, 00h
148–149	Input capacitance, typical	MT29F16G08ABABAWP	00h, 00h
		MT29F32G08AFABAWP	
		MT29F64G08AJABAWP	
		MT29F64G08AKABAC5	
		MT29F64G08AMABAC5	
		MT29F128G08AUABAC5	
		MT29F16G08ABCBBH1	28h, 00h
		MT29F32G08AECBBH1	
		MT29F64G08AKCBBH2	44h, 00h
		MT29F64G08AMCBBH2	22h, 00h
		MT29F128G08AUCBBH3	35h, 00h
150	Input pin capacitance, maximum	MT29F16G08ABABAWP	0Ah
		MT29F32G08AFABAWP	07h
		MT29F64G08AJABAWP	09h
		MT29F64G08AKABAC5	0Ah
		MT29F64G08AMABAC5	05h
		MT29F128G08AUABAC5	0Ah
		MT29F16G08ABCBBH1	05h
		MT29F32G08AECBBH1	
		MT29F64G08AKCBBH2	08h
		MT29F64G08AMCBBH2	04h
		MT29F128G08AUCBBH3	07h
151 ww.DataShe	Driver strength support Bit[7:3]: Reserved (0)	_	07h
	Bit 2: 1 = Supports overdrive (2 drive strength) Bit 1: 1 = Supports overdrive (1 drive strength)		www.DataSheet4U.com
	Bit 0: 1 = Supports driver strength settings		
152–153	${}^t\!R$ maximum interleaved (multi-plane) page read time (µs)	_	19h, 00h



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values	
154–163	Reserved (0)	_	All 00h	
Vendor blo	ock			
164–165	Vendor-specific revision number	_	01h, 00h	
166	TWO-PLANE PAGE READ support Bit[7:1]: Reserved (0) Bit 0: 1 = Support for TWO-PLANE PAGE READ	-	01h	
167	Read cache support Bit[7:1]: Reserved (0) Bit 0: 0 = Does not support Micron-specific read cache function	-	00h	
168	READ UNIQUE ID support Bit[7:1]: Reserved (0) Bit 0: 0 = Does not support Micron-specific READ UNIQUE ID	-	00h	
169	Programmable DQ output impedance support Bit[7:1]: Reserved (0) Bit 0: 0 = No support for programmable DQ output impe- dance by B8h command	-	00h	
170	Number of programmable DQ output impedance settings Bit[7:3]: Reserved (0) Bit [2:0] = Number of programmable DQ output impe- dance settings	-	04h	
171	Programmable DQ output impedance feature address Bit[7:0] = Programmable DQ output impedance feature address	-	10h	
172	Programmable R/B# pull-down strength support Bit[7:1]: Reserved (0) Bit 0: 1 = Support programmable R/B# pull-down strength	_	01h	
173	Programmable R/B# pull-down strength feature address Bit[7:0] = Feature address used with programmable R/B# pull-down strength	_	81h	
174	Number of programmable R/B# pull-down strength set- tings Bit[7:3]: Reserved (0) Bit[2:0] = Number of programmable R/B# pull-down strength settings	-	04h	
175 ww.DataShe	OTP mode support Bit[7:2]: Reserved (0) Bit 1: 1 = Supports Get/Set Features command set Bit 0: 0 = Does not support A5h/A0h/AFh OTP command set	_	02h www.DataSheet4U.com	
176	OTP page start Bit[7:0] = Page where OTP page space begins	-	02h	



#### Table 13: Parameter Page Data Structure (Continued)

Byte	Description	Device	Values		
177	OTP DATA PROTECT address Bit[7:0] = Page address to use when issuing OTP DATA PROTECT command	-	01h		
178	Number of OTP pages–1EhBit[15:5]: Reserved (0)Bit[4:0] = Number of OTP pages				
179	OTP Feature Address	_	90h		
180–252	Reserved (0)	_	All 00h		
253	Parameter page revision	_	03h		
254–255	Integrity CRC	MT29F16G08ABABAWP	B4h, ADh		
		MT29F32G08AFABAWP	BBh, A8h		
		MT29F64G08AJABAWP	F7h, D2h		
		MT29F64G08AKABAC5	20h, 7Dh		
		MT29F64G08AMABAC5	2Ch, 10h		
		MT29F128G08AUABAC5	AEh, E7h		
		MT29F16G08ABCBBH1	D9h, AAh		
		MT29F32G08AECBBH1	53h, 74h		
		MT29F64G08AKCBBH2	3Fh, CCh		
		MT29F64G08AMCBBH2	30h, 75h		
		MT29F128G08AUCBBH3	EBh, C5h		
Redundan	t parameter pages				
256–511	Value of bytes 0–255 –		See bytes 0–255		
512–767	Value of bytes 0–255	-	See bytes 0–255		
768–4319	Reserved (FFh)	_	All FFh		

www.DataSheet4U.com



### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND READ UNIQUE ID (EDh)

# **READ UNIQUE ID (EDh)**

The READ UNIQUE ID (EDh) command is used to read a unique identifier programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.


Writing EDh to the command register puts the target in read unique ID mode. The target stays in this mode until another valid command is issued.

When the EDh command is followed by a 00h address cycle, the target goes busy for <sup>t</sup>R. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode.

After <sup>t</sup>R completes, the host enables data output mode to read the unique ID. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, two data bytes are output, one byte for each rising or falling edge of DQS.

Sixteen copies of the unique ID data are stored in the device. Each copy is 32 bytes. The first 16 bytes of a 32-byte copy are unique data, and the second 16 bytes are the complement of the first 16 bytes. The host should XOR the first 16 bytes with the second 16 bytes. If the result is 16 bytes of FFh, then that copy of the unique ID data is correct. In the event that a non-FFh result is returned, the host can repeat the XOR operation on a subsequent copy of the unique ID data. If desired, the CHANGE READ COLUMN (05h-E0h) command can be used to change the data output location. Use of the CHANGE READ COLUMN ENHANCED (06h-E0h) command is prohibited.

#### Figure 44: READ UNIQUE ID (EDh) Operation

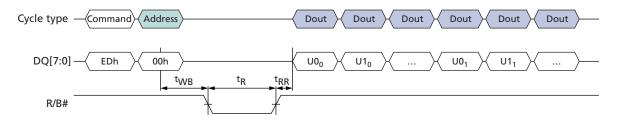

www.DataSheet4U.com



# **Status Operations**

Each die (LUN) provides its status independently of other die (LUNs) on the same target through its 8-bit status register.

After the READ STATUS (70h) or READ STATUS ENHANCED (78h) command is issued, status register output is enabled. The contents of the status register are returned on DQ[7:0] for each data output request.

When the asynchronous interface is active and status register output is enabled, changes in the status register are seen on DQ[7:0] as long as CE# and RE# are LOW; it is not necessary to toggle RE# to see the status register update.

When the synchronous interface is active and status register output is enabled, changes in the status register are seen on DQ[7:0] as long as CE# and W/R# are LOW and ALE and CLE are HIGH. DQS also toggles while ALE and CLE are HIGH.

While monitoring the status register to determine when a data transfer from the Flash array to the data register (<sup>t</sup>R) is complete, the host must issue the READ MODE (00h) command to disable the status register and enable data output (see READ MODE (00h) (page 81)).

The READ STATUS (70h) command returns the status of the most recently selected die (LUN). To prevent data contention during or following an interleaved die (multi-LUN) operation, the host must enable only one die (LUN) for status output by using the READ STATUS ENHANCED (78h) command (see Interleaved Die (Multi-LUN) Operations (page 106)).

#### **Table 14: Status Register Definition**

SR Bit	Definition	Independent per Plane <sup>1</sup>	Description
7	WP#	_	Write Protect: 0 = Protected 1 = Not protected In the normal array mode, this bit indicates the value of the WP# signal. In OTP mode this bit is set to 0 if a PROGRAM OTP PAGE operation is attemp- ted and the OTP area is protected.
6	RDY	_	Ready/Busy I/O: 0 = Busy 1 = Ready This bit indicates that the selected die (LUN) is not available to accept new commands, address, or data I/O cycles with the exception of RESET (FFh), SYNCHRONOUS RESET (FCh), READ STATUS (70h), and READ STATUS EN- HANCED (78h). This bit applies only to the selected die (LUN).
5 www.Dat	ARDY aSheet4U.com	-	Ready/Busy Array: 0 = Busy 1 = Ready This bit goes LOW (busy) when an array operation is www.DataSheet4U.com plane of the selected die (LUN). It goes HIGH when all array operations on the selected die (LUN) finish. This bit applies only to the selected die (LUN).
4	_	_	Reserved (0)
3	_	_	Reserved (0)



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Status Operations

#### Table 14: Status Register Definition (Continued)

SR Bit	Definition	Independent per Plane <sup>1</sup>	Description
2	_	_	Reserved (0)
1	FAILC	Yes	Pass/Fail (N-1): 0 = Pass 1 = Fail This bit is set if the previous operation on the selected die (LUN) failed. This bit is valid only when RDY (SR bit 6) is 1. It applies to PROGRAM-, and COPY- BACK PROGRAM-series operations (80h-10h, 80h-15h, 85h-10h). This bit is not valid following an ERASE-sereis or READ-series operation.
0	FAIL	Yes	Pass/Fail (N): 0 = Pass 1 = Fail This bit is set if the most recently finished operation on the selected die (LUN) failed. This bit is valid only when ARDY (SR bit 5) is 1. It applies to PROGRAM-, ERASE-, and COPYBACK PROGRAM-series operations (80h-10h, 80h-15h, 60h-D0h, 85h-10h). This bit is not valid following a READ-series operation.

Note: 1. After a multi-plane operation begins, the FAILC and FAIL bits are ORed together for the active planes when the READ STATUS (70h) command is issued. After the READ STATUS ENHANCED (78h) command is issued, the FAILC and FAIL bits reflect the status of the plane selected.

## **READ STATUS (70h)**

The READ STATUS (70h) command returns the status of the last-selected die (LUN) on a target. This command is accepted by the last-selected die (LUN) even when it is busy (RDY = 0).

If there is only one die (LUN) per target, the READ STATUS (70h) command can be used to return status following any NAND command.


In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select the die (LUN) that should report status. In this situation, using the READ STATUS (70h) command will result in bus contention, as two or more die (LUNs) could respond until the next operation is issued. The READ STATUS (70h) command can be used following all single die (LUN) operations.

If following a multi-plane operation, regardless of the number of LUNs per target, the READ STATUS (70h) command indicates an error occurred (FAIL = 1), use the READ STATUS ENHANCED (78h) command—once for each plane—to determine which plane operation failed.

www.DataSheet4U.com



### Figure 45: READ STATUS (70h) Operation

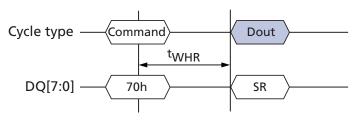

## **READ STATUS ENHANCED (78h)**

The READ STATUS ENHANCED (78h) command returns the status of the addressed die (LUN) on a target even when it is busy (RDY = 0). This command is accepted by all die (LUNs), even when they are BUSY (RDY = 0).

 
Writing 78h to the command register, followed by three row address cycles containing the page, block, and LUN addresses, puts the selected die (LUN) into read status mode. The selected die (LUN) stays in this mode until another valid command is issued. Die (LUNs) that are not addressed are deselected to avoid bus contention.

The selected LUN's status is returned when the host requests data output. The RDY and ARDY bits of the status register are shared for all of the planes of the selected die (LUN). The FAILC and FAIL bits are specific to the plane specified in the row address.

The READ STATUS ENHANCED (78h) command also enables the selected die (LUN) for data output. To begin data output following a READ-series operation after the selected die (LUN) is ready (RDY = 1), issue the READ MODE (00h) command, then begin data output. If the host needs to change the cache register that will output data, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command after the die (LUN) is ready (see CHANGE READ COLUMN ENHANCED (06h-E0h) (page 75)).

Use of the READ STATUS ENHANCED (78h) command is prohibited during the poweron RESET (FFh) command and when OTP mode is enabled. It is also prohibited following some of the other reset, identification, and configuration operations. See individual operations for specific details.

### Figure 46: READ STATUS ENHANCED (78h) Operation



www.DataSheet4U.com



# **Column Address Operations**

The column address operations affect how data is input to and output from the cache registers within the selected die (LUNs). These features provide host flexibility for managing data, especially when the host internal buffer is smaller than the number of data bytes or words in the cache register.

When the asynchronous interface is active, column address operations can address any byte in the selected cache register.

When the synchronous interface is active, column address operations are aligned to word boundaries (CA0 is forced to 0), because as data is transferred on DQ[7:0] in twobyte units.


## **CHANGE READ COLUMN (05h-E0h)**

The CHANGE READ COLUMN (05h-E0h) command changes the column address of the selected cache register and enables data output from the last selected die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during CACHE READ operations (RDY = 1; ARDY = 0).

Writing 05h to the command register, followed by two column address cycles containing the column address, followed by the E0h command, puts the selected die (LUN) into data output mode. After the E0h command cycle is issued, the host must wait at least <sup>t</sup>CCS before requesting data output. The selected die (LUN) stays in data output mode until another valid command is issued.

In devices with more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be issued prior to issuing the CHANGE READ COLUMN (05h-E0h). In this situation, using the CHANGE READ COLUMN (05h-E0h) command without the READ STATUS EN-HANCED (78h) command will result in bus contention, as two or more die (LUNs) could output data.

### Figure 47: CHANGE READ COLUMN (05h-E0h) Operation

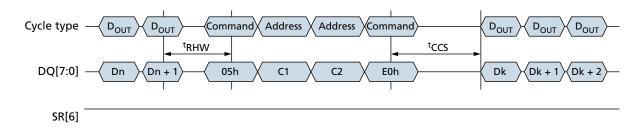

www.DataSheet4U.com



# CHANGE READ COLUMN ENHANCED (06h-E0h)

The CHANGE READ COLUMN ENHANCED (06h-E0h) command enables data output on the addressed die's (LUN's) cache register at the specified column address. This command is accepted by a die (LUN) when it is ready (RDY = 1; ARDY = 1).

Writing 06h to the command register, followed by two column address cycles and three row address cycles, followed by E0h, enables data output mode on the address LUN's cache register at the specified column address. After the E0h command cycle is issued, the host must wait at least <sup>t</sup>CCS before requesting data output. The selected die (LUN) stays in data output mode until another valid command is issued.

 
Following a multi-plane read page operation, the CHANGE READ COLUMN EN-HANCED (06h-E0h) command is used to select the cache register to be enabled for data output. After data output is complete on the selected plane, the command can be issued again to begin data output on another plane.

In devices with more than one die (LUN) per target, after all of the die (LUNs) on the target are ready (RDY = 1), the CHANGE READ COLUMN ENHANCED (06h-E0h) command can be used following an interleaved die (multi-LUN) read operation. Die (LUNs) that are not addressed are deselected to avoid bus contention.

In devices with more than one die (LUN) per target, during interleaved die (multi-LUN) operations where more than one or more die (LUNs) are busy (RDY = 1; ARDY = 0 or RDY = 0; ARDY = 0), the READ STATUS ENHANCED (78h) command must be issued to the die (LUN) to be selected prior to issuing the CHANGE READ COLUMN ENHANCED (06h-E0h). In this situation, using the CHANGE READ COLUMN ENHANCED (06h-E0h) command without the READ STATUS ENHANCED (78h) command will result in bus contention, as two or more die (LUNs) could output data.

If there is a need to update the column address without selecting a new cache register or LUN, the CHANGE READ COLUMN (05h-E0h) command can be used instead.

### Figure 48: CHANGE READ COLUMN ENHANCED (06h-E0h) Operation



www.DataSheet4U.com



# **CHANGE WRITE COLUMN (85h)**


The CHANGE WRITE COLUMN (85h) command changes the column address of the selected cache register and enables data input on the last-selected die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during cache program operations (RDY = 1; ARDY = 0).

Writing 85h to the command register, followed by two column address cycles containing the column address, puts the selected die (LUN) into data input mode. After the second address cycle is issued, the host must wait at least <sup>t</sup>CCS before inputting data. The selected die (LUN) stays in data input mode until another valid command is issued. Though data input mode is enabled, data input from the host is optional. Data input begins at the column address specified.

The CHANGE WRITE COLUMN (85h) command is allowed after the required address cycles are specified, but prior to the final command cycle (10h, 11h, 15h) of the following commands while data input is permitted: PROGRAM PAGE (80h-10h), PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE CACHE (80h-15h), COPYBACK PRO-GRAM (85h-10h), and COPYBACK PROGRAM MULTI-PLANE (85h-11h).

In devices that have more than one die (LUN) per target, the CHANGE WRITE COL-UMN (85h) command can be used with other commands that support interleaved die (multi-LUN) operations.

### Figure 49: CHANGE WRITE COLUMN (85h) Operation

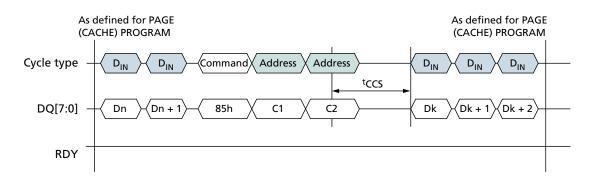

www.DataSheet4U.com



## **CHANGE ROW ADDRESS (85h)**

The CHANGE ROW ADDRESS (85h) command changes the row address (block and page) where the cache register contents will be programmed in the NAND Flash array. It also changes the column address of the selected cache register and enables data input on the specified die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during cache programming operations (RDY = 1; ARDY = 0).

Write 85h to the command register. Then write two column address cycles and three row address cycles. This updates the page and block destination of the selected plane for the addressed LUN and puts the cache register into data input mode. After the fifth address cycle is issued the host must wait at least <sup>t</sup>CCS before inputting data. The selected LUN stays in data input mode until another valid command is issued. Though data input mode is enabled, data input from the host is optional. Data input begins at the column address specified.

The CHANGE ROW ADDRESS (85h) command is allowed after the required address cycles are specified, but prior to the final command cycle (10h, 11h, 15h) of the following commands while data input is permitted: PROGRAM PAGE (80h-10h), PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE CACHE (80h-15h), COPYBACK PROGRAM (85h-10h), and COPYBACK PROGRAM MULTI-PLANE (85h-11h). When used with these commands, the LUN address and plane select bits are required to be identical to the LUN address and plane select bits originally specified.

The CHANGE ROW ADDRESS (85h) command enables the host to modify the original page and block address for the data in the cache register to a new page and block address.

In devices that have more than one die (LUN) per target, the CHANGE ROW ADDRESS (85h) command can be used with other commands that support interleaved die (multi-LUN) operations.


The CHANGE ROW ADDRESS (85h) command can be used with the CHANGE READ COLUMN (05h-E0h) or CHANGE READ COLUMN ENHANCED (06h-E0h) commands to read and modify cache register contents in small sections prior to programming cache register contents to the NAND Flash array. This capability can reduce the amount of buffer memory used in the host controller.

To modify the cache register contents in small sections, first issue a PAGE READ (00h-30h) or COPYBACK READ (00h-35h) operation. When data output is enabled, the host can output a portion of the cache register contents. To modify the cache register contents, issue the 85h command, the column and row addresses, and input the new data. The host can re-enable data output by issuing the 11h command, waiting <sup>t</sup>DBSY, and then issuing the CHANGE READ COLUMN (05h-E0h) or CHANGE READ COLUMN ENHANCED (06h-E0h) command. It is possible toggle between data output and data input multiple times. After the final CHANGE ROW ADDRESS (85h) operation is complete, issue the 10h command to program the cache register to the NAND Flash array.

www.DataSheet4U.com



#### Figure 50: CHANGE ROW ADDRESS (85h) Operation

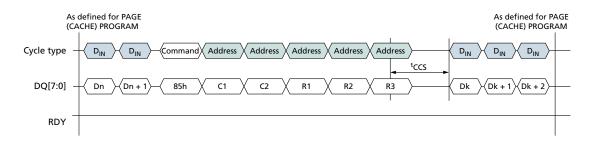

www.DataSheet4U.com



# **Read Operations**

Read operations are used to copy data from the NAND Flash array of one or more of the planes to their respective cache registers and to enable data output from the cache registers to the host through the DQ bus.

#### **Read Operations**

The READ PAGE (00h-30h) command, when issued by itself, reads one page from the NAND Flash array to its cache register and enables data output for that cache register.

During data output the following commands can be used to read and modify the data in the cache registers: CHANGE READ COLUMN (05h-E0h) and CHANGE ROW AD-DRESS (85h).

#### **Read Cache Operations**

To increase data throughput, the READ PAGE CACHE-series (31h, 00h-31h) commands can be used to output data from the cache register while concurrently copying a page from the NAND Flash array to the data register.

To begin a read page cache sequence, begin by reading a page from the NAND Flash array to its corresponding cache register using the READ PAGE (00h-30h) command. R/B# goes LOW during <sup>t</sup>R and the selected die (LUN) is busy (RDY = 0, ARDY = 0). After <sup>t</sup>R (R/B# is HIGH and RDY = 1, ARDY = 1), issue either of these commands:

- READ PAGE CACHE SEQUENTIAL (31h)—copies the next sequential page from the NAND Flash array to the data register
- READ PAGE CACHE RANDOM (00h-31h)—copies the page specified in this command from the NAND Flash array (any plane) to its corresponding data register

After the READ PAGE CACHE-series (31h, 00h-31h) command has been issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the next page begins copying data from the array to the data register. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die's (LUN's) status register bits indicate the device is busy with a cache operation (RDY = 1, ARDY = 0). The cache register becomes available and the page requested in the READ PAGE CACHE operation is transferred to the data register. At this point, data can be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output by the die (LUN).

After outputting the desired number of bytes from the cache register, either an additional READ PAGE CACHE-series (31h, 00h-31h) operation can be started or the READ PAGE CACHE LAST (3Fh) command can be issued.

If the READ PAGE CACHE LAST (3Fh) command is issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the data register is copied into the cache register. After <sup>t</sup>RCBSY, R/B# goes HIGH and RDY = 1 and ARDY = 1, indicating that the cache register is available and that the die (LUN) is ready. Data can then be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output.

For READ PAGE CACHE-series (31h, 00h-31h, 3Fh), during the die (LUN) busy time, <sup>t</sup>RCBSY, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and RESET (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during READ PAGE CACHE-series (31h, 00h-31h) operations are status opera-



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Read Operations

tions (70h, 78h), READ MODE (00h), READ PAGE CACHE-series (31h, 00h-31h), CHANGE READ COLUMN (05h-E0h), and RESET (FFh, FCh).

#### Multi-Plane Read Operations

Multi-plane read page operations improve data throughput by copying data from more than one plane simultaneously to the specified cache registers. This is done by prepending one or more READ PAGE MULTI-PLANE (00h-32h) commands in front of the READ PAGE (00h-30h) command.

When the die (LUN) is ready, the CHANGE READ COLUMN ENHANCED (06h-E0h) command determines which plane outputs data. During data output, the following commands can be used to read and modify the data in the cache registers: CHANGE READ COLUMN (05h-E0h) and CHANGE ROW ADDRESS (85h). See Multi-Plane Operations for details.

#### **Multi-Plane Read Cache Operations**

Multi-plane read cache operations can be used to output data from more than one cache register while concurrently copying one or more pages from the NAND Flash array to the data register. This is done by prepending READ PAGE MULTI-PLANE (00h-32h) commands in front of the PAGE READ CACHE RANDOM (00h-31h) command.

To begin a multi-plane read page cache sequence, begin by issuing a MULTI-PLANE READ PAGE operation using the READ PAGE MULTI-PLANE (00h-32h) and READ PAGE (00h-30h) commands. R/B# goes LOW during <sup>t</sup>R and the selected die (LUN) is busy (RDY = 0, ARDY = 0). After <sup>t</sup>R (R/B# is HIGH and RDY = 1, ARDY = 1), issue either of these commands:

- READ PAGE CACHE SEQUENTIAL (31h)—copies the next sequential page from the previously addressed planes from the NAND Flash array to the data registers.
- READ PAGE MULTI-PLANE (00h-32h) commands, if desired, followed by the READ PAGE CACHE RANDOM (00h-31h) command—copies the pages specified from the NAND Flash array to the corresponding data registers.

After the READ PAGE CACHE-series (31h, 00h-31h) command has been issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the next pages begin copying data from the array to the data registers. After <sup>t</sup>RCBSY, R/B# goes HIGH and the LUN's status register bits indicate the device is busy with a cache operation (RDY = 1, ARDY = 0). The cache registers become available and the pages requested in the READ PAGE CACHE operation are transferred to the data registers. Issue the CHANGE READ COLUMN ENHANCED (06h-E0h) command to determine which cache register will output data. After data is output, the CHANGE READ COL-UMN ENHANCED (06h-E0h) command can be used to output data from other cache registers. After a cache register has been selected, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output.

After outputting data from the cache registers, either an additional MULTI-PLANE READ CACHE-series (31h, 00h-31h) operation can be started or the READ PAGE CACHE LAST (3Fh) command can be issued.

www.DataSheet4U.com

If the READ PAGE CACHE LAST (3Fh) command is issued, R/B# good Determine the data registers are get, and RDY = 0 and ARDY = 0 on the die (LUN) for tRCBSY while the data registers are copied into the cache registers. After tRCBSY, R/B# goes HIGH and RDY = 1 and ARDY = 1, indicating that the cache registers are available and that the die (LUN) is ready. Issue the CHANGE READ COLUMN ENHANCED (06h-E0h) command to determine which



### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Read Operations

cache register will output data. After data is output, the CHANGE READ COLUMN EN-HANCED (06h-E0h) command can be used to output data from other cache registers. After a cache register has been selected, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output.

For READ PAGE CACHE-series (31h, 00h-31h, 3Fh), during the die (LUN) busy time, <sup>t</sup>RCBSY, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and RESET (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during READ PAGE CACHE-series (31h, 00h-31h) operations are status operations (70h, 78h), READ MODE (00h), multi-plane read cache-series (31h, 00h-32h, 00h-31h), CHANGE READ COLUMN (05h-E0h, 06h-E0h), and RESET (FFh, FCh).

See Multi-Plane Operations for additional multi-plane addressing requirements.

## **READ MODE (00h)**

The READ MODE (00h) command disables status output and enables data output for the last-selected die (LUN) and cache register after a READ operation (00h-30h, 00h-35h) has been monitored with a status operation (70h, 78h). This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 3Fh, 00h-31h) operations (RDY = 1 and ARDY = 0).

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) prior to issuing the READ MODE (00h) command. This prevents bus contention.

www.DataSheet4U.com



# READ PAGE (00h-30h)

The READ PAGE (00h–30h) command copies a page from the NAND Flash array to its respective cache register and enables data output. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To read a page from the NAND Flash array, write the 00h command to the command register, the write five address cycles to the address registers, and conclude with the 30h command. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>R as data is transferred.


To determine the progress of the data transfer, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. If the status operations are used to monitor the LUN's status, when the die (LUN) is ready (RDY = 1, ARDY = 1), the host disables status output and enables data output by issuing the READ MODE (00h) command. When the host requests data output, output begins at the column address specified.

During data output the CHANGE READ COLUMN (05h-E0h) command can be issued.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) prior to the issue of the READ MODE (00h) command. This prevents bus contention.

The READ PAGE (00h-30h) command is used as the final command of a multi-plane read operation. It is preceded by one or more READ PAGE MULTI-PLANE (00h-32h) commands. Data is transferred from the NAND Flash array for all of the addressed planes to their respective cache registers. When the die (LUN) is ready (RDY = 1, ARDY = 1), data output is enabled for the cache register linked to the plane addressed in the READ PAGE (00h-30h) command. When the host requests data output, output begins at the column address last specified in the READ PAGE (00h-30h) command. The CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to enable data output in the other cache registers. See Multi-Plane Operations for additional multi-plane addressing requirements.

## Figure 51: READ PAGE (00h-30h) Operation

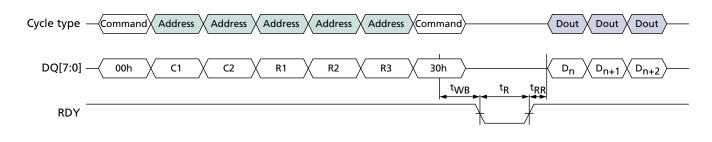

www.DataSheet4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Read Operations

# **READ PAGE CACHE SEQUENTIAL (31h)**


The READ PAGE CACHE SEQUENTIAL (31h) command reads the next sequential page within a block into the data register while the previous page is output from the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue this command, write 31h to the command register. After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>RCBSY. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die (LUN) is busy with a cache operation (RDY = 1, ARDY = 0), indicating that the cache register is available and that the specified page is copying from the NAND Flash array to the data register. At this point, data can be output from the cache register beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

The READ PAGE CACHE SEQUENTIAL (31h) command can be used to cross block boundaries. If the READ PAGE CACHE SEQUENTIAL (31h) command is issued after the last page of a block is read into the data register, the next page read will be the next logical block in the plane which the 31h command was issued. Do not issue the READ PAGE CACHE SEQUENTIAL (31h) to cross die (LUN) boundaries. Instead, issue the READ PAGE CACHE LAST (3Fh) command.

If the READ PAGE CACHE SEQUENTIAL (31h) command is issued after a MULTI-PLANE READ PAGE operation (00h-32h, 00h-30h), the next sequential pages are read into the data registers while the previous pages can be output from the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 0), the CHANGE READ COLUMN EN-HANCED (06h-E0h) command is used to select which cache register outputs data.

## Figure 52: READ PAGE CACHE SEQUENTIAL (31h) Operation

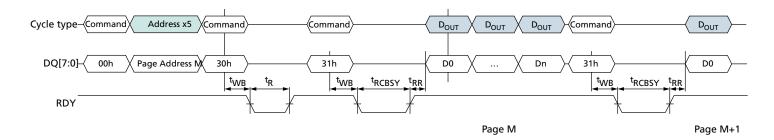

www.DataSheet4U.com



# **READ PAGE CACHE RANDOM (00h-31h)**

The READ PAGE CACHE RANDOM (00h-31h) command reads the specified block and page into the data register while the previous page is output from the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue this command, write 00h to the command register, then write five address cycles to the address register, and conclude by writing 31h to the command register. The column address in the address specified is ignored. The die (LUN) address must match the same die (LUN) address as the previous READ PAGE (00h-30h) command or, if applicable, the previous READ PAGE CACHE RANDOM (00h-31h) command. There is no restriction on the plane address.

After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>RCBSY. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die (LUN) is busy with a cache operation (RDY = 1, ARDY = 0), indicating that the cache register is available and that the specified page is copying from the NAND Flash array to the data register. At this point, data can be output from the cache register beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.


In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command followed by the READ MODE (00h) command must be used to select only one die (LUN) and prevent bus contention.

If a MULTI-PLANE CACHE RANDOM (00h-32h, 00h-31h) command is issued after a MULTI-PLANE READ PAGE operation (00h-32h, 00h-30h), then the addressed pages are read into the data registers while the previous pages can be output from the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 0), the CHANGE READ COL-UMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.

www.DataSheet4U.com

# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Read Operations

# Figure 53: READ PAGE CACHE RANDOM (00h-31h) Operation

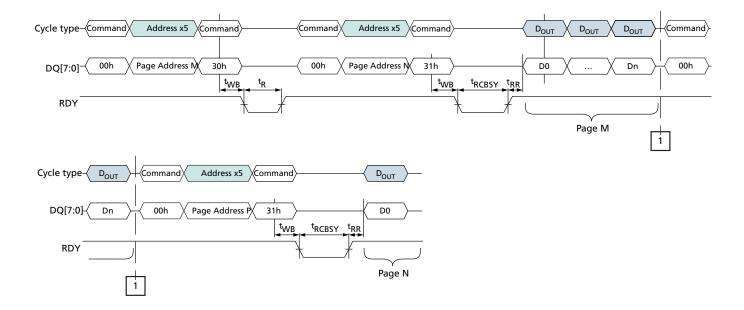

www.DataSheet4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Read Operations

# **READ PAGE CACHE LAST (3Fh)**


The READ PAGE CACHE LAST (3Fh) command ends the read page cache sequence and copies a page from the data register to the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue the READ PAGE CACHE LAST (3Fh) command, write 3Fh to the command register. After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>RCBSY. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die (LUN) is ready (RDY = 1, ARDY = 1). At this point, data can be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

In devices that have more than one LUN per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command followed by the READ MODE (00h) command must be used to select only one die (LUN) and prevent bus contention.

If the READ PAGE CACHE LAST (3Fh) command is issued after a MULTI-PLANE READ PAGE CACHE operation (31h; 00h-32h, 00h-30h), the die (LUN) goes busy until the pages are copied from the data registers to the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 1), the CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.

### Figure 54: READ PAGE CACHE LAST (3Fh) Operation

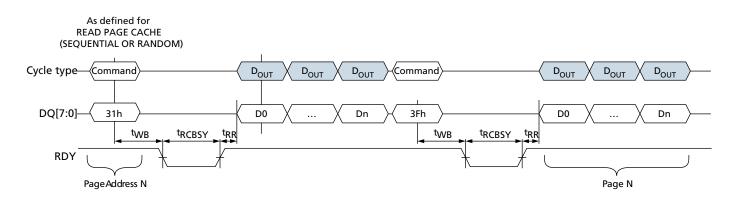

www.DataSheet4U.com



# **READ PAGE MULTI-PLANE (00h-32h)**

The READ PAGE MULTI-PLANE (00h-32h) command queues a plane to transfer data from the NAND flash array to its cache register. This command can be issued one or more times. Each time a new plane address is specified, that plane is also queued for data transfer. The READ PAGE (00h-30h) command is issued to select the final plane and to begin the read operation for all previously queued planes. All queued planes will transfer data from the NAND Flash array to their cache registers.

To issue the READ PAGE MULTI-PLANE (00h-32h) command, write 00h to the command register, then write five address cycles to the address register, and conclude by writing 32h to the command register. The column address in the address specified is ignored.

After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>DBSY. After <sup>t</sup>DBSY, R/B# goes HIGH and the die (LUN) is ready (RDY = 1, ARDY = 1). At this point, the die (LUN) and block are queued for data transfer from the array to the cache register for the addressed plane. During <sup>t</sup>DBSY, the only valid commands are status operations (70h, 78h) and reset commands (FFh, FCh). Following <sup>t</sup>DBSY, to continue the MULTI-PLANE READ operation, the only valid commands are status operations (70h, 78h), READ PAGE MULTI-PLANE (00h-32h), READ PAGE (00h-30h), and READ PAGE CACHE RANDOM (00h-31h).

Additional READ PAGE MULTI-PLANE (00h-32h) commands can be issued to queue additional planes for data transfer.

If the READ PAGE (00h-30h) command is used as the final command of a MULTI-PLANE READ operation, data is transferred from the NAND Flash array for all of the addressed planes to their respective cache registers. When the die (LUN) is ready (RDY = 1, ARDY = 1), data output is enabled for the cache register linked to the plane addressed in the READ PAGE (00h-30h) command. When the host requests data output, it begins at the column address specified in the READ PAGE (00h-30h) command. To enable data output in the other cache registers, use the CHANGE READ COLUMN EN-HANCED (06h-E0h) command. Additionally, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

If the READ PAGE CACHE SEQUENTIAL (31h) is used as the final command of a MULTI-PLANE READ CACHE operation, data is copied from the previously read operation from each plane to each cache register and then data is transferred from the NAND Flash array for all previously addressed planes to their respective data registers. When the die (LUN) is ready (RDY = 1, ARDY = 0), data output is enabled. The CHANGE READ COL-UMN ENHANCED (06h-E0h) command is used to determine which cache register outputs data first. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

If the READ PAGE CACHE RANDOM (00h-31h) command is used as the final command of a MULTI-PLANE READ CACHE operation, data is copied from the previously read operation from the data register to the cache register and then data is transferred from the NAND Flash array for all of the addressed planes to their respertive DataSheet4U.com When the die (LUN) is ready (RDY = 1, ARDY = 0), data output is enabled. The CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to determine which cache register outputs data first. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the




# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Read Operations

CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

See Multi-Plane Operations for additional multi-plane addressing requirements.

## Figure 55: READ PAGE MULTI-PLANE (00h-32h) Operation

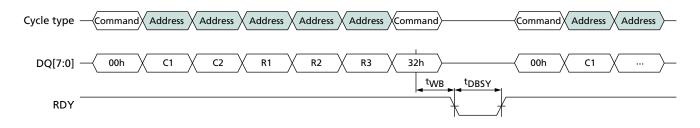

www.DataSheet4U.com



# **Program Operations**

Program operations are used to move data from the cache or data registers to the NAND array of one or more planes. During a program operation the contents of the cache and/or data registers are modified by the internal control logic.

Within a block, pages must be programmed sequentially from the least significant page address to the most significant page address (i.e. 0, 1, 2, 3, ...). Programming pages out of order within a block is prohibited.

### **Program Operations**

The PROGRAM PAGE (80h-10h) command, when not preceded by the PROGRAM PAGE MULTI-PLANE (80h-11h) command, programs one page from the cache register to the NAND Flash array. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that the operation has completed successfully.

### **Program Cache Operations**

The PROGRAM PAGE CACHE (80h-15h) command can be used to improve program operation system performance. When this command is issued, the die (LUN) goes busy (RDY = 0, ARDY = 0) while the cache register contents are copied to the data register, and the die (LUN) is busy with a program cache operation (RDY = 1, ARDY = 0. While the contents of the data register are moved to the NAND Flash array, the cache register is available for an additional PROGRAM PAGE CACHE (80h-15h) or PROGRAM PAGE (80h-10h) command.

For PROGRAM PAGE CACHE-series (80h-15h) operations, during the die (LUN) busy times, <sup>t</sup>CBSY and <sup>t</sup>LPROG, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and reset (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during PROGRAM PAGE CACHE-series (80h-15h) operations are status operations (70h, 78h), PROGRAM PAGE CACHE (80h-15h), PROGRAM PAGE (80h-10h), CHANGE WRITE COLUMN (85h), CHANGE ROW ADDRESS (85h), and reset (FFh, FCh).

## **Multi-Plane Program Operations**

The PROGRAM PAGE MULTI-PLANE (80h-11h) command can be used to improve program operation system performance by enabling multiple pages to be moved from the cache registers to different planes of the NAND Flash array. This is done by prepending one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands in front of the PRO-GRAM PAGE (80h-10h) command. See Multi-Plane Operations for details.

## Multi-Plane Program Cache Operations

The PROGRAM PAGE MULTI-PLANE (80h-11h) command can be used to improve program cache operation system performance by enabling multiple pages to be moved from the cache registers to the data registers and, while the pages are being transferred from the data registers to different planes of the NAND Flash array, free the cache registers to receive data input from the host. This is done by prepending one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands in front of the PROGRAM PAGE CACHE (80h-15h) command. See Multi-Plane Operations for details

www.DataSheet4U.com

# **PROGRAM PAGE (80h-10h)**

The PROGRAM PAGE (80h-10h) command enables the host to input data to a cache register, and moves the data from the cache register to the specified block and page ad-



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Program Operations

dress in the array of the selected die (LUN). This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) when it is busy with a PROGRAM PAGE CACHE (80h-15h) operation (RDY = 1, ARDY = 0).


To input a page to the cache register and move it to the NAND array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Then write five address cycles containing the column address and row address. Data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands may be issued. When data input is complete, write 10h to the command register. The selected LUN will go busy (RDY = 0, ARDY = 0) for <sup>1</sup>PROG as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) may be used. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the status of the FAIL bit.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The PROGRAM PAGE (80h-10h) command is used as the final command of a multiplane program operation. It is preceded by one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands. Data is transferred from the cache registers for all of the addressed planes to the NAND array. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

## Figure 56: PROGRAM PAGE (80h-10h) Operation

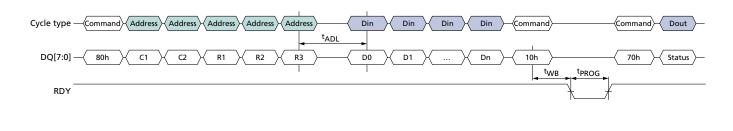

www.DataSheet4U.com



# PROGRAM PAGE CACHE (80h-15h)

The PROGRAM PAGE CACHE (80h-15h) command enables the host to input data to a cache register; copies the data from the cache register to the data register; then moves the data register contents to the specified block and page address in the array of the selected die (LUN). After the data is copied to the data register, the cache register is available for additional PROGRAM PAGE CACHE (80h-15h) or PROGRAM PAGE (80h-10h) commands. The PROGRAM PAGE CACHE (80h-15h) command is accepted by the die (LUN) when it is ready (RDY =1, ARDY = 1). It is also accepted by the die (LUN) when busy with a PROGRAM PAGE CACHE (80h-15h) operation (RDY = 1, ARDY = 0).

To input a page to the cache register to move it to the NAND array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Then write five address cycles containing the column address and row address. Data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands may be issued. When data input is complete, write 15h to the command register. The selected LUN will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>CBSY to allow the data register to become available from a previous program cache operation, to copy data from the cache register to the data register, and then to begin moving the data register contents to the specified page and block address.

To determine the progress of <sup>t</sup>CBSY, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is busy with a PROGRAM CACHE operation (RDY = 1, ARDY = 0), the host should check the status of the FAILC bit to see if a previous cache operation was successful.

If, after <sup>t</sup>CBSY, the host wants to wait for the program cache operation to complete, without issuing the PROGRAM PAGE (80h-10h) command, the host should monitor ARDY until it is 1. The host should then check the status of the FAIL and FAILC bits.

In devices with more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.


The PROGRAM PAGE CACHE (80h-15h) command is used as the final command of a multi-plane program cache operation. It is preceded by one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands. Data for all of the addressed planes is transferred from the cache registers to the corresponding data registers, then moved to the NAND Flash array. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

www.DataSheet4U.com




# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Program Operations

## Figure 57: PROGRAM PAGE CACHE (80h–15h) Operation (Start)

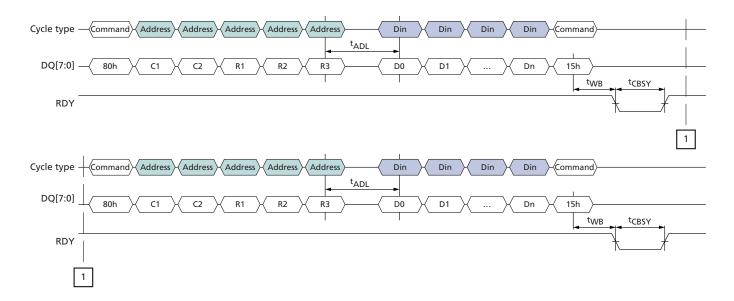

### Figure 58: PROGRAM PAGE CACHE (80h-15h) Operation (End)

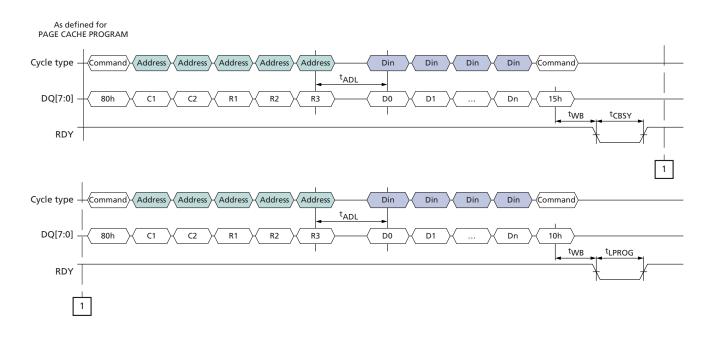

www.DataSheet4U.com



# **PROGRAM PAGE MULTI-PLANE 80h-11h**

The PROGRAM PAGE MULTI-PLANE (80h-11h) command enables the host to input data to the addressed plane's cache register and queue the cache register to ultimately be moved to the NAND Flash array. This command can be issued one or more times. Each time a new plane address is specified that plane is also queued for data transfer. To input data for the final plane and to begin the program operation for all previously queued planes, issue either the PROGRAM PAGE (80h-10h) command or the PROGRAM PAGE CACHE (80h-15h) command. All of the queued planes will move the data to the NAND Flash array. This command is accepted by the die (LUN) when it is ready (RDY = 1).

To input a page to the cache register and queue it to be moved to the NAND Flash array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Write five address cycles containing the column address and row address; data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle, the CHANGE WRITE COL-UMN (85h) and CHANGE ROW ADDRESS (85h) commands can be issued. When data input is complete, write 11h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>DBSY.

To determine the progress of <sup>t</sup>DBSY, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is ready (RDY = 1), additional PROGRAM PAGE MULTI-PLANE (80h-11h) commands can be issued to queue additional planes for data transfer. Alternatively, the PROGRAM PAGE (80h-10h) or PROGRAM PAGE CACHE (80h-15h) commands can be issued.

When the PROGRAM PAGE (80h-10h) command is used as the final command of a multiplane program operation, data is transferred from the cache registers to the NAND Flash array for all of the addressed planes during <sup>t</sup>PROG. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the status of the FAIL bit for each of the planes to verify that programming completed successfully.

When the PROGRAM PAGE CACHE (80h-15h) command is used as the final command of a MULTI-PLANE PROGRAM CACHE operation, data is transferred from the cache registers to the data registers after the previous array operations finish. The data is then moved from the data registers to the NAND Flash array for all of the addressed planes. This occurs during <sup>t</sup>CBSY. After <sup>t</sup>CBSY, the host should check the status of the FAILC bit for each of the planes from the previous program cache operation, if any, to verify that programming completed successfully.

 
For the PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE (80h-10h), and PROGRAM PAGE CACHE (80h-15h) commands, see Multi-Plane Operations for multi-plane addressing requirements.

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Program Operations

### Figure 59: PROGRAM PAGE MULTI-PLANE (80h-11h) Operation



www.DataSheet4U.com



# **Erase Operations**

Erase operations are used to clear the contents of a block in the NAND Flash array to prepare its pages for program operations.

#### **Erase Operations**

The ERASE BLOCK (60h-D0h) command, when not preceded by the ERASE BLOCK MUL-TI-PLANE (60h-D1h) command, erases one block in the NAND Flash array. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that this operation completed successfully.

#### **MULTI-PLANE ERASE Operations**

The ERASE BLOCK MULTI-PLANE (60h-D1h) command can be used to further system performance of erase operations by allowing more than one block to be erased in the NAND array. This is done by prepending one or more ERASE BLOCK MULTI-PLANE (60h-D1h) commands in front of the ERASE BLOCK (60h-D0h) command. See Multi-Plane Operations for details.

## **ERASE BLOCK (60h-D0h)**

The ERASE BLOCK (60h-D0h) command erases the specified block in the NAND Flash array. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).


To erase a block, write 60h to the command register. Then write three address cycles containing the row address; the page address is ignored. Conclude by writing D0h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>BERS while the block is erased.

To determine the progress of an ERASE operation, the host can monitor the target's R/ B# signal, or alternatively, the status operations (70h, 78h) can be used. When the die (LUN) is ready (RDY = 1, ARDY = 1) the host should check the status of the FAIL bit.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The ERASE BLOCK (60h-D0h) command is used as the final command of a MULTI-PLANE ERASE operation. It is preceded by one or more ERASE BLOCK MULTI-PLANE (60h-D1h) commands. All of blocks in the addressed planes are erased. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

## Figure 60: ERASE BLOCK (60h-D0h) Operation

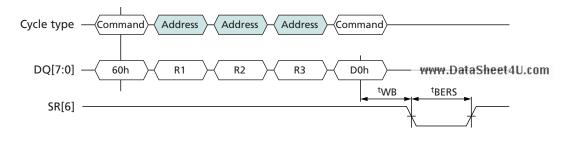



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Erase Operations

# **ERASE BLOCK MULTI-PLANE (60h-D1h)**


The ERASE BLOCK MULTI-PLANE (60h-D1h) command queues a block in the specified plane to be erased in the NAND Flash array. This command can be issued one or more times. Each time a new plane address is specified, that plane is also queued for a block to be erased. To specify the final block to be erased and to begin the ERASE operation for all previously queued planes, issue the ERASE BLOCK (60h-D0h) command. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To queue a block to be erased, write 60h to the command register, then write three address cycles containing the row address; the page address is ignored. Conclude by writing D1h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>DBSY.

To determine the progress of <sup>t</sup>DBSY, the host can monitor the target's R/B# signal, or alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is ready (RDY = 1, ARDY = 1), additional ERASE BLOCK MULTI-PLANE (60h-D1h) commands can be issued to queue additional planes for erase. Alternatively, the ERASE BLOCK (60h-D0h) command can be issued to erase all of the queued blocks.

For multi-plane addressing requirements for the ERASE BLOCK MULTI-PLANE (60h-D1h) and ERASE BLOCK (60h-D0h) commands, see Multi-Plane Operations.

#### Figure 61: ERASE BLOCK MULTI-PLANE (60h–D1h) Operation

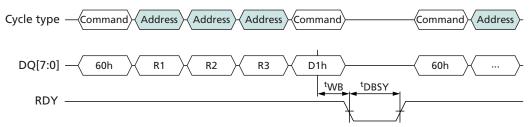

www.DataSheet4U.com



# **Copyback Operations**

COPYBACK operations make it possible to transfer data within a plane from one page to another using the cache register. This is particularly useful for block management and wear leveling.

The COPYBACK operation is a two-step process consisting of a COPYBACK READ (00h-35h) and a COPYBACK PROGRAM (85h-10h) command. To move data from one page to another on the same plane, first issue the COPYBACK READ (00h-35h) command. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host can transfer the data to a new page by issuing the COPYBACK PROGRAM (85h-10h) command. When the die (LUN) is again ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that this operation completed successfully.

To prevent bit errors from accumulating over multiple COPYBACK operations, it is recommended that the host read the data out of the cache register after the COPYBACK READ (00h-35h) completes prior to issuing the COPYBACK PROGRAM (85h-10h) command. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address. The host should check the data for ECC errors and correct them. When the COPYBACK PROGRAM (85h-10h) command is issued, any corrected data can be input. The CHANGE ROW ADDRESS (85h) command can be used to change the column address.

It is not possible to use the COPYBACK operation to move data from one plane to another or from one die (LUN) to another. Instead, use a READ PAGE (00h-30h) or COPY-BACK READ (00h-35h) command to read the data out of the NAND, and then use a PROGRAM PAGE (80h-10h) command with data input to program the data to a new plane or die (LUN).

Between the COPYBACK READ (00h-35h) and COPYBACK PROGRAM (85h-10h) commands, the following commands are supported: status operations (70h, 78h), and column address operations (05h-E0h, 06h-E0h, 85h). Reset operations (FFh, FCh) can be issued after COPYBACK READ (00h-35h), but the contents of the cache registers on the target are not valid.

In devices which have more than one die (LUN) per target, once the COPYBACK READ (00h-35h) is issued, interleaved die (multi-LUN) operations are prohibited until after the COPYBACK PROGRAM (85h-10h) command is issued.

### **Multi-Plane Copyback Operations**

Multi-plane copyback read operations improve read data throughput by copying data simultaneously from more than one plane to the specified cache registers. This is done by prepending one or more READ PAGE MULTI-PLANE (00h-32h) commands in front of the COPYBACK READ (00h-35h) command.

The COPYBACK PROGRAM MULTI-PLANE (85h-11h) command can be used to further system performance of COPYBACK PROGRAM operations by enabling movement of multiple pages from the cache registers to different planes of the NAND Flash array. This is done by prepending one or more COPYBACK PROGRAM (85h-11h) commands in front of the COPYBACK PROGRAM (85h-10h) command. See Multi-Plane Operations for details.




# **COPYBACK READ (00h-35h)**


The COPYBACK READ (00h-35h) command is functionally identical to the READ PAGE (00h-30h) command, except that 35h is written to the command register instead of 30h. See READ PAGE (00h-30h) (page 82) for further details.

Though it is not required, it is recommended that the host read the data out of the device to verify the data prior to issuing the COPYBACK PROGRAM (85h-10h) command to prevent the propagation of data errors.

### Figure 62: COPYBACK READ (00h-35h) Operation

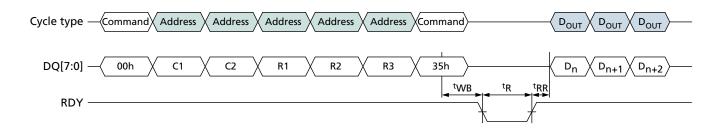

### Figure 63: COPYBACK READ (00h-35h) with CHANGE READ COLUMN (05h-E0h) Operation

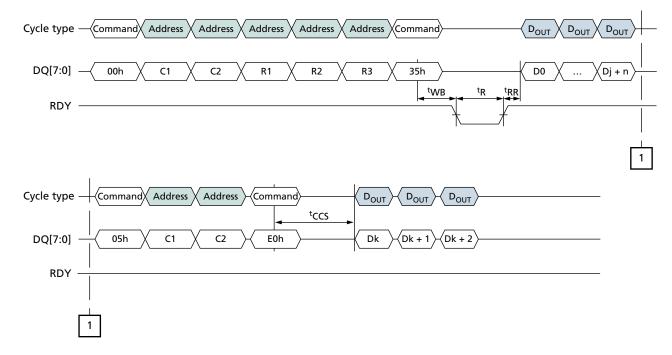

www.DataSheet4U.com




# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Copyback Operations


# **COPYBACK PROGRAM (85h–10h)**

The COPYBACK PROGRAM (85h-10h) command is functionally identical to the PRO-GRAM PAGE (80h-10h) command, except that when 85h is written to the command register, cache register contents are not cleared. See PROGRAM PAGE (80h-10h) (page 89) for further details.

### Figure 64: COPYBACK PROGRAM (85h–10h) Operation

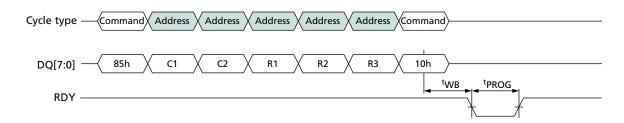

### Figure 65: COPYBACK PROGRAM (85h-10h) with CHANGE WRITE COLUMN (85h) Operation

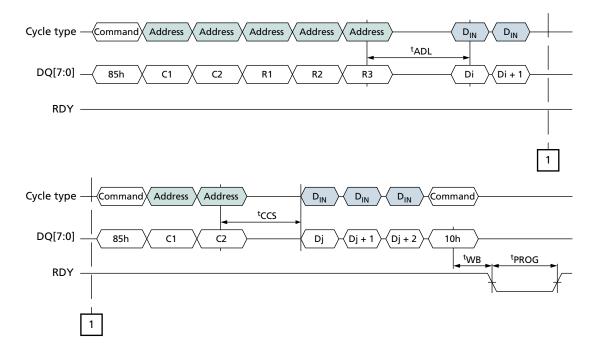

# COPYBACK READ MULTI-PLANE (00h-32h)

www.DataSheet4U.com

The COPYBACK READ MULTI-PLANE (00h-32h) command is functionally identical to the READ PAGE MULTI-PLANE (00h-32h) command, except that the 35h command is written as the final command. The complete command sequence for the COPYBACK READ PAGE MULTI-PLANE is 00h-32h-00h-35h. See READ PAGE MULTI-DEANE is 00h-32h-00h-35h. See READ PAGE MULTI-DEANE (00h-32h) (page 87) for further details.

 


# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Copyback Operations

# **COPYBACK PROGRAM MULTI-PLANE (85h-11h)**

The COPYBACK PROGRAM MULTI-PLANE (85h-11h) command is functionally identical to the PROGRAM PAGE MULTI-PLANE (80h-11h) command, except that when 85h is written to the command register, cache register contents are not cleared. See PRO-GRAM PAGE MULTI-PLANE 80h-11h (page 93) for further details.

### Figure 66: COPYBACK PROGRAM MULTI-PLANE (85h-11h) Operation



www.DataSheet4U.com



# **CION** 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND One-Time Programmable (OTP) Operations

# **One-Time Programmable (OTP) Operations**

This Micron NAND Flash device offers a protected, one-time programmable NAND Flash memory area. Each target has a an OTP area with a range of OTP pages (see Table 15 (page 102)); the entire range is guaranteed to be good. Customers can use the OTP area in any way they desire; typical uses include programming serial numbers or other data for permanent storage.

The OTP area leaves the factory in an erased state (all bits are 1). Programming an OTP page changes bits that are 1 to 0, but cannot change bits that are 0 to 1. The OTP area cannot be erased, even if it is not protected. Protecting the OTP area prevents further programming of the pages in the OTP area.

### **Enabling the OTP Operation Mode**

The OTP area is accessible while the OTP operation mode is enabled. To enable OTP operation mode, issue the SET FEATURES (EFh) command to feature address 90h and write 01h to P1, followed by three cycles of 00h to P2 through P4.

When the target is in OTP operation mode, all subsequent PAGE READ (00h-30h) and PROGRAM PAGE (80h-10h) commands are applied to the OTP area.

ERASE commands are not valid while the target is in OTP operation mode.

#### **Programming OTP Pages**

Each page in the OTP area is programming using the PROGRAM OTP PAGE (80h-10h) command. Each page can be programmed more than once, in sections, up to the maximum number allowed (see NOP in Table 15 (page 102)). The pages in the OTP area must be programmed in ascending order.

If the host issues a PAGE PROGRAM (80h-10h) command to an address beyond the maximum page-address range, the target will be busy for <sup>t</sup>OBSY and the WP# status register bit will be 0, meaning that the page is write-protected.

### Protecting the OTP Area

To protect the OTP area, issue the OTP PROTECT (80h-10h) command to the OTP Protect Page. When the OTP area is protected it cannot be programmed further. It is not possible to unprotect the OTP area after it has been protected.

#### **Reading OTP Pages**

To read pages in the OTP area, whether the OTP area is protected or not, issue the PAGE READ (00h-30h) command.

If the host issues the PAGE READ (00h-30h) command to an address beyond the maximum page-address range, the data output will not be valid. To determine whether the target is busy during an OTP operation, either monitor R/B# or use the READ STATUS (70h) command. Use of the READ STATUS ENHANCED (78h) command is prohibited while the OTP operation is in progress.

#### Returning to Normal Array Operation Mode

To exit OTP operation mode and return to normal array operation www.DataSheet40.com FEATURES (EFh) command to feature address 90h and write 00h to P1 through P4.

If the RESET (FFh) command is issued while in OTP operation mode, the target will exit OTP operation mode and enter normal operating mode. If the synchronous interface is active, the target will exit OTP operation and enable the asynchronous interface.



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND One-Time Programmable (OTP) Operations

If the SYNCHRONOUS RESET (FCh) command is issued while in the OTP operation mode, the target will exit OTP operation mode and the synchronous interface remains active.

### Table 15: OTP Area Details

Description	Value
Number of OTP pages	30
OTP protect page address	01h
OTP start page address	02h
Number of partial page programs (NOP) to each OTP page	8

# **PROGRAM OTP PAGE (80h-10h)**

The PROGRAM OTP PAGE (80h-10h) command is used to write data to the pages within the OTP area. To program data in the OTP area, the target must be in OTP operation mode.

To use the PROGRAM OTP PAGE (80h-10h) command, issue the 80h command. Issue five address cycles including the column address, the page address within the OTP page range, and a block address of 0. Next, write the data to the cache register using data input cycles. After data input is complete, issue the 10h command.

 
R/B# goes LOW for the duration of the array programming time, <sup>t</sup>PROG. The READ STA-TUS (70h) command is the only valid command for reading status in OTP operation mode. The RDY bit of the status register will reflect the state of R/B#. Use of the READ STATUS ENHANCED (78h) command is prohibited.

When the target is ready, read the FAIL bit of the status register to determine whether the operation passed or failed (see Table 14 (page 71)).

The PROGRAM OTP PAGE (80h-10h) command also accepts the CHANGE WRITE COL-UMN (85h) command during data input.

If a PROGRAM PAGE command is issued to the OTP area after the area has been protected, then R/B# goes LOW for <sup>t</sup>OBSY. After <sup>t</sup>OBSY, the status register is set to 60h.

### Figure 67: PROGRAM OTP PAGE (80h-10h) Operation




www.DataSheet4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND One-Time Programmable (OTP) Operations

## Figure 68: PROGRAM OTP PAGE (80h-10h) with CHANGE WRITE COLUMN (85h) Operation

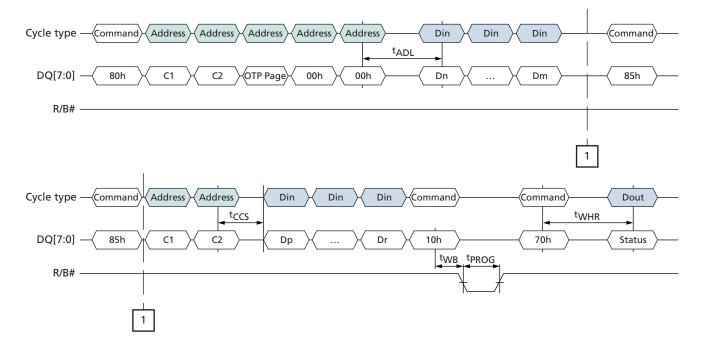

# **PROTECT OTP AREA (80h-10h)**

The PROTECT OTP AREA (80h-10h) command is used to prevent further programming of the pages in the OTP area. The protect the OTP area, the target must be in OTP operation mode.

To protect all data in the OTP area, issue the 80h command. Issue five address cycles including the column address, OTP protect page address and block address; the column and block addresses are fixed to 0. Next, write 00h data for the first byte location and issue the 10h command.

R/B# goes LOW for the duration of the array programming time, <sup>t</sup>PROG. The READ STA-TUS (70h) command is the only valid command for reading status in OTP operation mode. The RDY bit of the status register will reflect the state of R/B#. Use of the READ STATUS ENHANCED (78h) command is prohibited.

When the target is ready, read the FAIL bit of the status register to determine if the operation passed or failed (see Table 14 (page 71)).

 
If the PROTECT OTP AREA (80h-10h) command is issued after the OTP area has already been protected, R/B# goes LOW for <sup>t</sup>OBSY. After <sup>t</sup>OBSY, the status register is set to 60h.

 
www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND One-Time Programmable (OTP) Operations

### Figure 69: PROTECT OTP AREA (80h-10h) Operation





# **READ OTP PAGE (00h-30h)**

The READ OTP PAGE (00h-30h) command is used to read data from the pages in the OTP area. To read data in the OTP area, the target must be in OTP operation mode.


To use the READ OTP PAGE (00h-30h) command, issue the 00h command. Issue five address cycles including the column address, the page address within the OTP page range, and a block address of 0. Next, issue the 30h command. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>R as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal, or alternatively the READ STATUS (70h) command can be used. If the status operations are used to monitor the die's (LUN's) status, when the die (LUN) is ready (RDY = 1, ARDY = 1) the host disables status output and enables data output by issuing the READ MODE (00h) command. When the host requests data output, it begins at the column address specified.

Additional pages within the OTP area can be read by repeating the READ OTP PAGE (00h-30h) command.

The READ OTP PAGE (00h-30h) command is compatible with the CHANGE READ COL-UMN (05h-E0h) command. Use of the READ STATUS ENHANCED (78h) and CHANGE READ COLUMN ENHANCED (06h-E0h) commands are prohibited.

### Figure 70: READ OTP PAGE (00h-30h) Operation

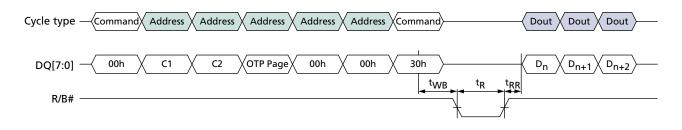

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Multi-Plane Operations

# **Multi-Plane Operations**

Each NAND Flash logical unit (LUN) is divided into multiple physical planes. Each plane contains a cache register and a data register independent of the other planes. The planes are addressed via the low-order block address bits. Specific details are provided in Device and Array Organization.

Multi-plane operations make better use of the NAND Flash arrays on these physical planes by performing concurrent READ, PROGRAM, or ERASE operations on multiple planes, significantly improving system performance. Multi-plane operations must be of the same type across the planes; for example, it is not possible to perform a PROGRAM operation on one plane with an ERASE operation on another.

When issuing MULTI-PLANE PROGRAM or ERASE operations, use the READ STATUS (70h) command and check whether the previous operation(s) failed. If the READ STA-TUS (70h) command indicates that an error occurred (FAIL = 1 and/or FAILC = 1), use the READ STATUS ENHANCED (78h) command—time for each plane—to determine which plane operation failed.

## **Multi-Plane Addressing**

Multi-plane commands require an address per operational plane. For a given multiplane operation, these addresses are subject to the following requirements:

- The LUN address bit(s) must be identical for all of the issued addresses.
- The plane select bit, BA[7], must be different for each issued address.
- The page address bits, PA[6:0], must be identical for each issued address.

The READ STATUS (70h) command should be used following MULTI-PLANE PRO-GRAM PAGE and ERASE BLOCK operations on a single die (LUN).

www.DataSheet4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Interleaved Die (Multi-LUN) Operations

# **Interleaved Die (Multi-LUN) Operations**

In devices that have more than one die (LUN) per target, it is possible to improve performance by interleaving operations between the die (LUNs). An interleaved die (multi-LUN) operation is one that is issued to an idle die (LUN) (RDY = 1) while another die (LUN) is busy (RDY = 0).

Interleaved die (multi-LUN) operations are prohibited following RESET (FFh, FCh), identification (90h, ECh, EDh), and configuration (EEh, EFh) operations until ARDY =1 for all of the die (LUNs) on the target.

During an interleaved die (multi-LUN) operation, there are two methods to determine operation completion. The R/B# signal indicates when all of the die (LUNs) have finished their operations. R/B# remains LOW while any die (LUN) is busy. When R/B# goes HIGH, all of the die (LUNs) are idle and the operations are complete. Alternatively, the READ STATUS ENHANCED (78h) command can report the status of each die (LUN) individually.

If a die (LUN) is performing a cache operation, like PROGRAM PAGE CACHE (80h-15h), then the die (LUN) is able to accept the data for another cache operation when status register bit 6 is 1. All operations, including cache operations, are complete on a die when status register bit 5 is 1.

Use the READ STATUS ENHANCED (78h) command to monitor status for the addressed die (LUN). When multi-plane commands are used with interleaved die (multi-LUN) operations, the multi-plane commands must also meet the requirements, see Multi-Plane Operations for details. After the READ STATUS ENHANCED (78h) command has been issued, the READ STATUS (70h) command may be issued for the previously addressed die (LUN).

See Command Definitions for the list of commands that can be issued while other die (LUNs) are busy.

During an interleaved die (multi-LUN) operation that involves a PROGRAM-series (80h-10h, 80h-15h, 80h-11h) operation and a READ operation, the PROGRAM-series operation must be issued before the READ-series operation. The data from the READ-series operation must be output to the host before the next PROGRAM-series operation is issued. This is because the 80h command clears the cache register contents of all cache registers on all planes.

www.DataSheet4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Error Management

# **Error Management**

Each NAND Flash die (LUN) is specified to have a minimum number of valid blocks (NVB) of the total available blocks. This means the die (LUNs) could have blocks that are invalid when shipped from the factory. An invalid block is one that contains at least one page that has more bad bits than can be corrected by the minimum required ECC. Additional blocks can develop with use. However, the total number of available blocks per die (LUN) will not fall below NVB during the endurance life of the product.

Although NAND Flash memory devices could contain bad blocks, they can be used quite reliably in systems that provide bad-block management and error-correction algorithms. This type of software environment ensures data integrity.

Internal circuitry isolates each block from other blocks, so the presence of a bad block does not affect the operation of the rest of the NAND Flash array.

NAND Flash devices are shipped from the factory erased. The factory identifies invalid blocks before shipping by attempting to program the bad-block mark into every location in the first page of each invalid block. It may not be possible to program every location with the bad-block mark. However, the first spare area location in each bad block is guaranteed to contain the bad-block mark. This method is compliant with ON-FI Factory Defect Mapping requirements. See the following table for the first spare area location and the bad-block mark.

System software should check the first spare area location on the first page of each block prior to performing any PROGRAM or ERASE operations on the NAND Flash device. A bad block table can then be created, enabling system software to map around these areas. Factory testing is performed under worst-case conditions. Because invalid blocks could be marginal, it may not be possible to recover this information if the block is erased.

Over time, some memory locations may fail to program or erase properly. In order to ensure that data is stored properly over the life of the NAND Flash device, the following precautions are required:

- Always check status after a PROGRAM or ERASE operation
- Under typical conditions, use the minimum required ECC (see table below)
- · Use bad-block management and wear-leveling algorithms

The first block (physical block address 00h) for each CE# is guaranteed to be valid with ECC when shipped from the factory.

### **Table 16: Error Management Details**

Description	Requirement
Minimum number of valid blocks (NVB) per LUN	4016
Total available blocks per LUN	4096
First spare area location	Byte 4096
Bad-block mark	00h
Minimum required ECC	4-bit ECC per 540 bytes of data



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND **Output Drive Impedance**

# **Output Drive Impedance**

Because NAND Flash is designed for use in systems that are typically point-to-point connections, an option to control the drive strength of the output buffers is provided. Drive strength should be selected based on the expected loading of the memory bus. There are four supported settings for the output drivers: overdrive 2, overdrive 1, nominal, and underdrive.

The nominal output drive strength setting is the power-on default value. The host can select a different drive strength setting using the SET FEATURES (EFh) command.

The output impedance range from minimum to maximum covers process, voltage, and temperature variations. Devices are not guaranteed to be at the nominal line.

Range	Process	Voltage	Temperature
Maximum	Fast-Fast	1.95V	–25°C
Nominal	Typical-Typical	1.8V	+25°C
Minimum	Slow-Slow	1.7V	+85°C

## Table 17: Output Drive Strength Test Conditions (V<sub>CCQ</sub> = 1.7–1.95V)

Output Strength	Rpd/Rpu	V <sub>OUT</sub> to V <sub>SSQ</sub>	Minimum	Nominal	Maximum	Unit
Overdrive 2	Rpd	$V_{CCQ} \times 0.2$	7.5	13.5	34	ohms
		$V_{CCQ} \times 0.5$	9	18	31	ohms
		$V_{CCQ} \times 0.8$	11	23.5	44	ohms
	Rpu	$V_{CCQ} \times 0.2$	11	23.5	44	ohms
		V <sub>CCQ</sub> × 0.5	9	18	31	ohms
		V <sub>CCQ</sub> × 0.8	7.5	13.5	34	ohms
Overdrive 1	Rpd	V <sub>CCQ</sub> × 0.2	10.5	19	47	ohms
		V <sub>CCQ</sub> × 0.5	13	25	44	ohms
		V <sub>CCQ</sub> × 0.8	16	32.5	61.5	ohms
	Rpu	$V_{CCQ} \times 0.2$	16	32.5	61.5	ohms
		V <sub>CCQ</sub> × 0.5	13	25	44	ohms
		V <sub>CCQ</sub> × 0.8	10.5	19	47	ohms
Nominal	Rpd	$V_{CCQ} \times 0.2$	15	27	66.5	ohms
		V <sub>CCQ</sub> × 0.5	18	35	62.5	ohms
		V <sub>CCQ</sub> × 0.8	22	52	88	ohms
	Rpu	V <sub>CCQ</sub> × 0.2	22	52	88	ohms
		V <sub>CCQ</sub> × 0.5	18	35	62.5	ohms
		V <sub>CCQ</sub> × 0.8	15	27	www.DataSl	neet4lb.com

### Table 18: Output Drive Strength Impedance Values (V<sub>CCO</sub> = 1.7–1.95V)



Table 18: Output Drive Strength Impedance Values ( $V_{CCQ} = 1.7-1.95V$ ) (Continued)

Output Strength	Rpd/Rpu	V <sub>OUT</sub> to V <sub>SSQ</sub>	Minimum	Nominal	Maximum	Unit
Underdrive	Rpd	$V_{CCQ} \times 0.2$	21.5	39	95	ohms
		V <sub>CCQ</sub> × 0.5	26	50	90	ohms
		$V_{CCQ} \times 0.8$	31.5	66.5	126.5	ohms
	Rpu	V <sub>CCQ</sub> × 0.2	31.5	66.5	126.5	ohms
		V <sub>CCQ</sub> × 0.5	26	50	90	ohms
		V <sub>CCQ</sub> × 0.8	21.5	39	95	ohms

# Table 19: Output Drive Strength Conditions (V<sub>CCQ</sub> = 2.7–3.6V)

Range	Process	Voltage	Temperature
Maximum	Fast-Fast	3.6V	–40°C
Nominal	Typical-Typical	3.3V	+25°C
Minimum	Slow-Slow	2.7V	+85°C

# Table 20: Output Drive Strength Impedance Values ( $V_{CCQ} = 2.7-3.6V$ )

Output Strength	Rpd/Rpu	V <sub>OUT</sub> to V <sub>SSQ</sub>	Minimum	Nominal	Maximum	Unit
Overdrive 2	Rpd	V <sub>CCQ</sub> X 0.2	6.0	10.0	18.0	ohms
		V <sub>CCQ</sub> X 0.5	10.0	18.0	35.0	ohms
		V <sub>CCQ</sub> X 0.8	15.0	25.0	49.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	15.0	25.0	49.0	ohms
		V <sub>CCQ</sub> X 0.5	10.0	18.0	35.0	ohms
		V <sub>CCQ</sub> X 0.8	6.0	10.0	18.0	ohms
Overdrive 1	Rpd	V <sub>CCQ</sub> X 0.2	8.0	15.0	30.0	ohms
		V <sub>CCQ</sub> X 0.5	15.0	25.0	45.0	ohms
		V <sub>CCQ</sub> X 0.8	20.0	35.0	65.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	20.0	35.0	65.0	ohms
		V <sub>CCQ</sub> X 0.5	15.0	25.0	45.0	ohms
		V <sub>CCQ</sub> X 0.8	8.0	15.0	30.0	ohms
Nominal	Rpd	V <sub>CCQ</sub> X 0.2	12.0	22.0	40.0	ohms
		V <sub>CCQ</sub> X 0.5	20.0	35.0	65.0	ohms
		V <sub>CCQ</sub> X 0.8	25.0	50.0	100.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	25.0	50.0	100.0	ohms
		V <sub>CCQ</sub> X 0.5	20.0	35.0	www.Data	Sheet44,com
		V <sub>CCQ</sub> X 0.8	12.0	22.0	40.0	ohms



Table 20: Output Drive Strength Impedance Values ( $V_{CCQ} = 2.7-3.6V$ ) (Continued)

Output Strength	Rpd/Rpu	V <sub>OUT</sub> to V <sub>SSQ</sub>	Minimum	Nominal	Maximum	Unit
Underdrive	Rpd	V <sub>CCQ</sub> X 0.2	18.0	32.0	55.0	ohms
		V <sub>CCQ</sub> X 0.5	29.0	50.0	100.0	ohms
		V <sub>CCQ</sub> X 0.8	40.0	75.0	150.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	40.0	75.0	150.0	ohms
		V <sub>CCQ</sub> X 0.5	29.0	50.0	100.0	ohms
		V <sub>CCQ</sub> X 0.8	18.0	32.0	55.0	ohms

#### Table 21: Pull-Up and Pull-Down Output Impedance Mismatch

Drive Strength	Minimum	Maximum	Unit	Notes
Overdrive 2	0	6.3	ohms	1, 2
Overdrive 1	0	8.8	ohms	1, 2
Nominal	0	12.3	ohms	1, 2
Underdrive	0	17.5	ohms	1, 2

Notes: 1. Mismatch is the absolute value between pull-up and pull-down impedances. Both are measured at the same temperature and voltage.

2. Test conditions:  $V_{CCQ} = V_{CCQ}$  (MIN),  $V_{OUT} = V_{CCQ} \times 0.5$ ,  $T_A = T_{OPER}$ .

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND AC Overshoot/Undershoot Specifications

 
# **AC Overshoot/Undershoot Specifications**

The supported AC overshoot and undershoot area depends on the timing mode selected by the host.

# Table 22: Overshoot/Undershoot Parameters


		Timing Mode							
Parameter	0	1	2	3	4	5	Unit		
Maximum peak amplitude provided for overshoot area	1	1	1	1	1	1	V		
Maximum peak amplitude provided for undershoot area	1	1	1	1	1	1	V		
Maximum overshoot area above V <sub>CCQ</sub>	3	3	3	2.25	1.8	1.5	V-ns		
Maximum undershoot area below V <sub>SSQ</sub>	3	3	3	2.25	1.8	1.5	V-ns		

#### **Figure 71: Overshoot**



Time (ns)

# Figure 72: Undershoot

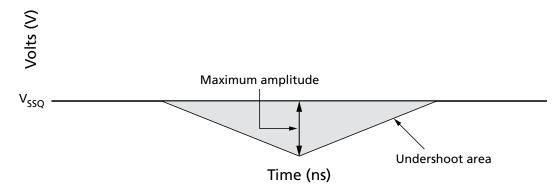

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Synchronous Input Slew Rate

# Synchronous Input Slew Rate

Though all AC timing parameters are tested with a nominal input slew rate of 1 V/ns, it is possible to run the device at a slower slew rate. The input slew rates shown below are sampled, and not 100% tested. When using slew rates slower than the minimum values, timing must be derated by the host.

# **Table 23: Test Conditions for Input Slew Rate**

Parameter	Value
Rising edge	V <sub>IL(DC)</sub> To V <sub>IH(AC)</sub>
Falling edge	V <sub>IH(DC)</sub> To V <sub>IL(AC)</sub>
Temperature range	T <sub>A</sub>

# Table 24: Input Slew Rate (V<sub>CCQ</sub> = 1.7–1.95V)

Command/		CLK/DQS Slew Rate Derating V <sub>IH(AC)</sub> /V <sub>IL(AC)</sub> = 540mV, V <sub>IH(DC)</sub> /V <sub>IL(DC)</sub> = 360mV															
Address	•	1	0	.9	0	.8	0	.7	0	.6	0	.5	0	.4	0	.3	
and DQ V/ns	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	Unit
1	0	0	0	0	-	-	I	-	-	-	I	-	-	-	-	-	ps
0.9	0	0	0	0	0	0	I	-	-	-	I	-	-	-	-	-	ps
0.8	-	-	0	0	0	0	0	0	-	-	-	-	-	-	-	-	ps
0.7	-	-	-	-	0	0	0	0	0	0	-	-	-	-	-	-	ps
0.6	-	-	-	-	-	-	0	0	0	0	0	0	-	-	-	-	ps
0.5	-	-	-	-	-	-	-	-	0	0	0	0	180	180	-	-	ps
0.4	-	-	-	-	-	-	-	-	-	-	180	180	360	360	660	660	ps
0.3	-	-	-	-	-	-	-	-	-	-	-	-	660	660	920	920	ps

www.DataSheet4U.com



# **Output Slew Rate**

The output slew rate is tested using the following setup with only one die per DQ channel.

# **Table 25: Test Conditions for Output Slew Rate**

Parameter	Value
V <sub>OL(DC)</sub>	0.3 × V <sub>CCQ</sub>
V <sub>OH(AC)</sub>	0.7 × V <sub>CCQ</sub>
V <sub>OL(AC)</sub>	$0.2 \times V_{CCQ}$
V <sub>OH(DC)</sub>	$0.8 \times V_{CCQ}$
Rising edge ( <sup>t</sup> RISE)	V <sub>OL(DC)</sub> to V <sub>OH(AC)</sub>
Falling edge ( <sup>t</sup> FALL)	V <sub>OH(DC)</sub> to V <sub>OL(AC)</sub>
Output capacitive load (C <sub>LOAD</sub> )	5pF
Temperature range	T <sub>A</sub>

# Table 26: Output Slew Rate (V<sub>CCQ</sub> = 1.7–1.95V)

Output Drive Strength	Min	Max	Unit
Overdrive 2	1	5.5	V/ns
Overdrive 1	0.85	5	V/ns
Nominal	0.75	4	V/ns
Underdrive	0.6	4	V/ns

# Table 27: Output Slew Rate (V<sub>CCQ</sub> = 2.7–3.6V)

Output Drive Strength	Min	Max	Unit
Overdrive 2	1.5	10.0	V/ns
Overdrive 1	1.5	9.0	V/ns
Nominal	1.2	7.0	V/ns
Underdrive	1.0	5.5	V/ns

www.DataSheet4U.com



# **Electrical Specifications**

Stresses greater than those listed can cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not guaranteed. Exposure to absolute maximum rating conditions for extended periods can affect reliability.

### Table 28: Absolute Maximum Ratings by Device

Parameter	Symbol	Min <sup>1</sup>	Max <sup>1</sup>	Unit
Voltage input	V <sub>IN</sub>	-0.6	4.6	V
V <sub>CC</sub> supply voltage	V <sub>cc</sub>	-0.6	4.6	V
V <sub>CCQ</sub> supply voltage	V <sub>CCQ</sub>	-0.6	4.6	V
Storage temperature	T <sub>STG</sub>	-65	150	°C

Note: 1. Voltage on any pin relative to V<sub>SS</sub>.

# **Table 29: Recommended Operating Conditions**

Parameter	Parameter			Тур	Max	Unit
Operating temperature	perating temperature Commercial		0	-	70	°C
	Industrial		-40	-	+85	
V <sub>CC</sub> supply voltage		V <sub>cc</sub>	2.7	3.3	3.6	V
V <sub>CCQ</sub> supply voltage (1.8V)		V <sub>CCQ</sub>	1.7	1.8	1.95	V
V <sub>CCQ</sub> supply voltage (3.3V)			2.7	3.3	3.6	V
V <sub>ss</sub> ground voltage		V <sub>SS</sub>	0	0	0	V

#### Table 30: Valid Blocks per LUN

Parameter	Symbol	Min	Мах	Unit	Notes
Valid block number	NVB	4016	4096	Blocks	1

Note: 1. Invalid blocks are block that contain one or more bad bits beyond ECC. The device may contain bad blocks upon shipment. Additional bad blocks may develop over time; however, the total number of available blocks will not drop below NVB during the endurance life of the device. Do not erase or program blocks marked invalid from the factory.

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications

#### Table 31: Capacitance: 100-Ball BGA Package

#### Notes 1 and 2 apply to entire table

		_	gle Die/l e Packa		Quad	Die Pa	ckage	Octal	Die Pa	ckage		
Description	Symbol	Min	Тур	Max	Min	Тур	Max	Min	Тур	Max	Unit	Notes
Input capacitance (CLK)	С <sub>СК</sub>	3.0	3.5	4.0	5.2	6.2	7.2	8.5	10.5	12.5	pF	3
Input capacitance (ALE, CLE, W/R#)	C <sub>IN</sub>	3.5	4	4.5	5.8	6.8	7.8	8.5	10.5	12.5	pF	3
Input/output capaci- tance (DQ[7:0], DQS)	C <sub>IO</sub>	4	4.5	5	7	8	9	12.5	14.5	16.5	pF	3
Input capacitance (CE#, WP#)	C <sub>OTHER</sub>	_	_	5	-	-	10	-	-	13	pF	
Delta clock capacitance	DC <sub>CK</sub>	_	_	0.25	_	_	0.5	-	-	1	pF	
Delta input capaci- tance	DC <sub>IN</sub>	_	_	0.5	_	_	1	_	_	2	pF	
Delta input/output ca- pacitance	DC <sub>IO</sub>	_	_	0.5	_	_	1	_	_	2	pF	

Notes: 1. Verified in device characterization; not 100% tested.

2. Test conditions:  $T_A = 25^{\circ}C$ , f = 100 MHz,  $V_{IN} = 0V$ .

3. Values for  $C_{CK}\text{, }C_{IN}$  and  $C_{IO}$  (TYP) are estimates.

#### Table 32: Capacitance: 48-Pin TSOP Package

Description	Symbol	Device	Мах	Unit	Notes
Input capacitance – ALE, CE#, CLE, RE#	C <sub>IN</sub>	Single die package	10	pF	1
(W/R#), WE# (CLK), WP#		Dual die package	14		
		Quad die package	18		
Input/output capacitance – DQ[7:0], DQS	C <sub>IO</sub>	Single die package	5	pF	1
		Dual die package	10		
		Quad die package	18		

Note: 1. These parameters are verified in device characterization and are not 100% tested. Test conditions:  $T_c = 25^{\circ}C$ ; f = 1 MHz; Vin = 0V.

#### Table 33: Capacitance: 52-Pad LGA Package

Description	Symbol	Device	Max	Unit	Notes
Input capacitance – ALE, CE#, CLE, RE#,	C <sub>IN</sub>	Quad die package	10	pF	1
WE#, WP#		Octal die package	20	www.Da	ataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – DC Characteristics and Operating Conditions (Asynchronous)

#### Table 33: Capacitance: 52-Pad LGA Package (Continued)

Description	Symbol	Device	Max	Unit	Notes
Input/output capacitance – DQ[7:0]	C <sub>IO</sub>	Quad die package	14	pF	1
		Octal die package	20		

Note: 1. These parameters are verified in device characterization and are not 100% tested. Test conditions:  $T_C = 25^{\circ}C$ ; f = 1 MHz; Vin = 0V.

#### **Table 34: Test Conditions**

Parameter	Value	Notes
Rising input transition	V <sub>IL(DC)</sub> to V <sub>IH(AC)</sub>	1
Falling input transition	V <sub>IH(DC)</sub> to V <sub>IL(AC)</sub>	1
Input rise and fall slew rates	1 V/ns	_
Input and output timing levels	V <sub>CCQ</sub> /2	_
Output load: Nominal output drive strength	C <sub>L</sub> = 5pF	2, 3

Notes: 1. The receiver will effectively switch as a result of the signal crossing the AC input level; it will remain in that status as long as the signal does not ring back above (below) the DC input LOW (HIGH) level.

- 2. Transmission line delay is assumed to be very small.
- 3. This test setup applies to all package configurations.

# **Electrical Specifications – DC Characteristics and Operating Conditions** (Asynchronous)

#### Table 35: DC Characteristics and Operating Conditions (Asynchronous Interface)

Parameter	Conditions	Symbol	Min <sup>1</sup>	Typ <sup>1</sup>	Max <sup>1</sup>	Unit
Array read current (active)	_	I <sub>CC1_A</sub>	_	20	50	mA
Array program current (active)	_	I <sub>CC2_A</sub>	_	20	50	mA
Erase current (active)	_	I <sub>CC3_A</sub>	_	20	50	mA
I/O burst read current	<sup>t</sup> RC = <sup>t</sup> RC (MIN); I <sub>OUT</sub> = 0mA	I <sub>CC4R_A</sub>	_	5	10	mA
I/O burst write current	$^{t}WC = ^{t}WC (MIN)$	I <sub>CC4w_A</sub>	_	5	10	mA
Bus idle current	_	I <sub>CC5_A</sub>	_	3	5	mA
Current during first RESET command after power-on	_	I <sub>CC6</sub>	_	_	10	mA
Standby current - V <sub>CC</sub>	$CE\# = V_{CCQ} - 0.2V;$ $WP\# = 0V/V_{CCQ}$	I <sub>SB</sub>	-	10	50	μΑ
<b>Standby current - V<sub>CCQ</sub></b> ww.DataSheet4U.com	$CE\# = V_{CCQ} - 0.2V;$ $WP\# = 0V/V_{CCQ}$	I <sub>SBQ</sub>	-	3	10	μΑ
Staggered power-up current	<sup>t</sup> RISE = 1ms; C <sub>LINE</sub> = 0.1uF	I <sub>ST</sub>	_	-	www.Data	Sheet4U.com

Note: 1. All values are per die (LUN) unless otherwise specified.



# Electrical Specifications – DC Characteristics and Operating Conditions (Synchronous)

Parameter	Conditions	Symbol	Min <sup>1</sup>	Typ <sup>1</sup>	Max <sup>1</sup>	Unit
Array read current (active)	$CE\# = V_{IL}; {}^{t}CK = {}^{t}CK (MIN)$	I <sub>CC1_S</sub>	-	20	50	mA
Array program current (active)	<sup>t</sup> CK = <sup>t</sup> CK (MIN)	I <sub>CC2_S</sub>	_	20	50	mA
Erase current (active)	<sup>t</sup> CK = <sup>t</sup> CK (MIN)	I <sub>CC3_S</sub>	_	20	50	mA
I/O burst read current	<sup>t</sup> CK = <sup>t</sup> CK (MIN)	I <sub>CC4R_S</sub>	_	10	20	mA
I/O burst write current	<sup>t</sup> CK = <sup>t</sup> CK (MIN)	I <sub>CC4W_S</sub>	_	10	20	mA
Bus idle current	<sup>t</sup> CK = <sup>t</sup> CK (MIN)	I <sub>CC5_S</sub>	_	5	10	mA
Standby current - V <sub>CC</sub>	$CE\# = V_{CCQ} - 0.2V;$ $WP\# = 0V/V_{CCQ}$	I <sub>SB</sub>	-	10	50	μA
Standby Current - V <sub>CCQ</sub>	$CE\# = V_{CCQ} - 0.2V;$ $WP\# = 0V/V_{CCQ}$	I <sub>SBQ</sub>	-	3	10	μA

#### Table 36: DC Characteristics and Operating Conditions (Synchronous Interface)

Note: 1. All values are per die (LUN) unless otherwise specified.

# Electrical Specifications – DC Characteristics and Operating Conditions ( $V_{CCQ}$ )

# Table 37: DC Characteristics and Operating Conditions (3.3V V<sub>CCQ</sub>)

Parameter	Condition	Symbol	Min	Тур	Max	Unit	Notes
AC input high voltage	CE#, DQ[7:0], DQS, ALE, CLE, CLK	V <sub>IH(AC)</sub>	$0.8 \times V_{CCQ}$	_	V <sub>CCQ</sub> + 0.3	V	
AC input low voltage	(WE#), W/R# (RE#), WP#	V <sub>IL(AC)</sub>	-0.3	_	0.2 × V <sub>CCQ</sub>	V	
DC input high voltage	DQ[7:0], DQS, ALE, CLE, CLK	V <sub>IH(DC)</sub>	$0.7 \times V_{CCQ}$	_	V <sub>CCQ</sub> + 0.3	V	
DC input low voltage	(WE#), W/R# (RE#)	V <sub>IL(DC)</sub>	-0.3	_	0.3 × V <sub>CCQ</sub>	V	
Input leakage current	Any input $V_{IN} = 0V$ to $V_{CCQ}$ (all other pins under test = 0V)	ILI	-	-	±10	μA	
Output leakage cur- rent	DQ are disabled; $V_{OUT} = 0V$ to $V_{CCQ}$	I <sub>LO</sub>	-	-	±10	μA	1
Output low current (R/B#)	V <sub>OL</sub> = 0.4V	I <sub>OL</sub> (R/B#)	8	10	-	mA	2

Notes: 1. All leakage currents are per die (LUN). Two die (LUNs) have a maximum leakage current of ±20μA and four die (LUNs) have a maximum leakage current of ±40μA in the asynchronous interface.

2. DC characteristics may need to be relaxed if R/B# pull-down strength is not set to full strength. See Table 14 (page 71) for additional details.

www.DataSheet4U.com



Parameter	Condition	Symbol	Min	Тур	Мах	Unit	Notes
AC input high voltage	CE#, DQ[7:0], DQS, ALE, CLE, CLK	V <sub>IH(AC)</sub>	$0.8 \times V_{CCQ}$	_	V <sub>CCQ</sub> + 0.3	V	
AC input low voltage	(WE#), W/R# (R/E#), WP#	V <sub>IL(AC)</sub>	-0.3	_	$0.2 \times V_{CCQ}$	V	
DC input high voltage	DQ[7:0], DQS, ALE, CLE, CLK	V <sub>IH(DC)</sub>	$0.7 \times V_{CCQ}$	_	V <sub>CCQ</sub> + 0.3	V	
DC input low voltage	(WE#), W/R# (R/E#)	V <sub>IL(DC)</sub>	-0.3	_	$0.3 \times V_{CCQ}$	V	
Input leakage current	Any input $V_{IN} = 0V$ to $V_{CCQ}$ (all other pins under test = 0V)	Ι <sub>LI</sub>	-	-	±10	μΑ	1
Output leakage current	DQ are disabled; Vout = 0V to V <sub>CCQ</sub>	I <sub>LO</sub>	-	-	±10	μΑ	1
Output low current (R/B#)	V <sub>OL</sub> = 0.2V	I <sub>OL</sub> (R/B#)	3	4	-	mA	

# Table 38: DC Characteristics and Operating Conditions (1.8V $V_{CCQ}$ )

Note: 1. All leakage currents are per die (LUN). Two die (LUNs) have a maximum leakage current of ±20μA and four die (LUNs) have a maximum leakage current of ±40μA in the asynchronous interface.

# **Electrical Specifications – AC Characteristics and Operating Conditions** (Asynchronous)

#### Table 39: AC Characteristics: Asynchronous Command, Address, and Data

		Mo	de 0	Мо	de 1	Mo	de 2	Mo	de 3	Mo	de 4	Mo	de 5		
Parameter	Symbol	Min	Max	Unit	Notes										
Clock period		100		5	50		35		30		5	20		ns	
Frequency		≈	10	n n	20	≈	≈28		33	≈.	40	≈50		MHz	
ALE to data start	<sup>t</sup> ADL	200	-	100	-	100	-	100	-	70	-	70	-	ns	1
ALE hold time	<sup>t</sup> ALH	20	-	10	_	10	-	5	_	5	-	5	_	ns	
ALE setup time	<sup>t</sup> ALS	50	-	25	_	15	-	10	_	10	-	10	_	ns	
ALE to RE# delay	<sup>t</sup> AR	25	-	10	_	10	-	10	_	10	-	10	_	ns	
CE# access time	<sup>t</sup> CEA	_	100	-	45	_	30	_	25	-	25	_	25	ns	
Change column set- up time to data in/ out or next command	<sup>t</sup> CCS	200	_	200	-	200	-	200	-	200	_	200	_	ns	
CE# hold time	<sup>t</sup> CH	20	_	10	_	10	-	5	_	5	_	5	_	ns	
CE# HIGH to output High-Z	<sup>t</sup> CHZ	-	100	-	50	-	50	-	50	-	30	-	30	ns	2
CLE hold time	<sup>t</sup> CLH	20	-	10	_	10	-	5	_	5	_	5	_	ns	
CLE to RE# delay	<sup>t</sup> CLR	20	-	10	_	10	-	10	_	10	-	10	_	ns	
CLE setup time	<sup>t</sup> CLS	50	-	25	_	15	-	10	_	10	-	10	D.a	ns to Choo	t4U.com
CE# HIGH to output hold	<sup>t</sup> COH	0	-	15	-	15	-	15	-	15	-	15	- - -	ns	140.001
CE# setup time	<sup>t</sup> CS	70	-	35	_	25	-	25	_	20	-	15	-	ns	
Data hold time	<sup>t</sup> DH	20	-	10	-	5	-	5	_	5	-	5	-	ns	

#### 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)

#### Table 39: AC Characteristics: Asynchronous Command, Address, and Data (Continued)

		Mode 0		Mode 1		Mo	de 2	Мо	de 3	Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Unit	Notes
Data setup time	<sup>t</sup> DS	40	_	20	_	15	_	10	_	10	_	7	_	ns	
Output High-Z to RE# LOW	<sup>t</sup> IR	10	-	0	-	0	-	0	-	0	-	0	-	ns	
RE# cycle time	<sup>t</sup> RC	100	_	50	-	35	-	30	_	25	-	20	_	ns	
RE# access time	<sup>t</sup> REA	-	40	_	30	_	25	-	20	-	20	-	16	ns	3
RE# HIGH hold time	tREH	30	_	15	-	15	-	10	_	10	-	7	_	ns	3
RE# HIGH to output hold	<sup>t</sup> RHOH	0	-	15	-	15	-	15	-	15	-	15	-	ns	3
RE# HIGH to WE# LOW	<sup>t</sup> RHW	200	-	100	-	100	-	100	-	100	-	100	-	ns	
RE# HIGH to output High-Z	<sup>t</sup> RHZ	-	200	-	100	-	100	-	100	-	100	-	100	ns	2, 3
RE# LOW to output hold	<sup>t</sup> RLOH	0	-	0	-	0	-	0	-	5	-	5	-	ns	3
RE# pulse width	<sup>t</sup> RP	50	_	25	-	17	-	15	_	12	-	10	_	ns	
Ready to RE# LOW	<sup>t</sup> RR	40	_	20	-	20	-	20	_	20	-	20	_	ns	
Device reset time (Read/Program/ Erase)	<sup>t</sup> RST	-	5/10/ 500	-	5/10/ 500	-	5/10/ 500	-	5/10/ 500	-	5/10/ 500	-	5/10/ 500	μs	4, 5
WE# HIGH to R/B# LOW	tWB	-	200	-	100	-	100	-	100	-	100	-	100	ns	6
WE# cycle time	tWC	100	_	45	_	35	-	30	_	25	-	20	_	ns	
WE# HIGH hold time	tWH	30	_	15	_	15	-	10	_	10	-	7	_	ns	
WE# HIGH to RE# LOW	tWHR	120	-	80	-	80	-	60	-	60	-	60	-	ns	
WE# pulse width	tWP	50	_	25	_	17	-	15	_	12	-	10	_	ns	
WP# transition to WE# LOW	tWW	100	-	100	-	100	-	100	-	100	-	100	-	ns	

Notes: 1. Timing for <sup>t</sup>ADL begins in the address cycle, on the final rising edge of WE# and ends with the first rising edge of WE# for data input.

- 2. Data transition is measured ±200mV from steady-steady voltage with load. This parameter is sampled and not 100 percent tested.
- 3. AC characteristics may need to be relaxed if output drive strength is not set to at least nominal.
- 4. If RESET (FFh) command is issued when the target is READY, the target goes busy for a maximum of  $5\mu$ s.

5. See Array Characteristics for details on the power-on reset time, <sup>t</sup>POR

6. Do not issue a new command during <sup>t</sup>WB, even if R/B# or RDY is ready.



# Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

#### Mode 0 Mode 1 Mode 2 Mode 3 Mode 4 Mode 5 Parameter Min Max Min Max Min Max Min Max Min Max Min Max Unit Symbol Notes 50 30 20 10 Clock period 15 12 ns ≈67 ≈33 Frequency ≈20 ≈50 ≈83 ≈100 MHz Access window <sup>t</sup>AC 10 10 10 10 20 20 10 20 20 10 20 20 ns of DQ[7:0] from CLK ALE to data <sup>t</sup>ADL 100 100 70 70 70 70 \_ \_ \_ \_ \_ \_ ns loading time Command, ad-<sup>t</sup>CAD 25 25 25 25 25 25 1 \_ \_ \_ \_ \_ \_ ns dress data delay ALE, CLE, W/R# <sup>t</sup>CALH 5 4 3 2 10 2.5 \_ \_ \_ \_ \_ \_ ns hold ALE, CLE, W/R# <sup>t</sup>CALS 5 3 2.5 2 10 4 ns \_ \_ setup <sup>t</sup>CAH DQ hold - com-10 5 4 3 2.5 2 ns \_ \_ \_ \_ \_ \_ mand, address DQ setup - com-<sup>t</sup>CAS 10 5 3 2.5 2 4 ns \_ \_ \_ \_ \_ \_ mand, address <sup>t</sup>CCS Change column 200 200 200 200 200 200 2 ns \_ \_ \_ \_ \_ \_ setup time to data in/out or next command <sup>t</sup>CH CE# hold 10 5 4 3 2.5 2 ns \_ \_ Average CLK cy-<sup>t</sup>CK (avg) 50 100 30 50 20 30 15 20 12 15 10 12 3 ns cle time Absolute CLK <sup>t</sup>CK (abs) <sup>t</sup>CK (abs) MIN = <sup>t</sup>CK (avg) + <sup>t</sup>JIT (per) MIN ns <sup>t</sup>CK (abs) MAX = <sup>t</sup>CK (avg) + <sup>t</sup>JIT (per) MAX cycle time, from rising edge to rising edge <sup>t</sup>CKH 0.43 0.57 0.57 0.57 <sup>t</sup>CK CLK cycle HIGH 0.43 0.43 0.57 0.43 0.57 0.43 0.43 0.57 4 (abs) CLK cycle LOW <sup>t</sup>CKL 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 <sup>t</sup>CK 4 (abs) Data output <sup>t</sup>CKWR <sup>t</sup>CKWR(MIN) = RoundUp[(<sup>t</sup>DQSCK(MAX) + <sup>t</sup>CK)/<sup>t</sup>CK] <sup>t</sup>CK end to W/R# HIGH www.DataSheet4U.com tCS 35 25 15 CE# setup 15 15 15 ns \_ \_ \_ \_ \_ \_ Data In hold <sup>t</sup>DH 5 2.5 1.7 1.3 1.1 0.8 ns \_ \_ \_

# Table 40: AC Characteristics: Synchronous Command, Address, and Data



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

# Table 40: AC Characteristics: Synchronous Command, Address, and Data (Continued)

		Мо	de 0	Мо	de 1	Mode 2		Mode 3		Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Unit	Notes
Access window of DQS from CLK	<sup>t</sup> DQSCK	-	20	-	20	-	20	_	20	-	20	-	20	ns	
DQS, DQ[7:0] Driven by NAND	<sup>t</sup> DQSD	_	18	_	18	_	18	_	18	-	18	_	18	ns	
DQS, DQ[7:0] to tri-state	<sup>t</sup> DQSHZ	_	20	_	20	-	20	_	20	-	20	_	20	ns	5
DQS input high pulse width	<sup>t</sup> DQSH	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	<sup>t</sup> CK	
DQS input low pulse width	<sup>t</sup> DQSL	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	<sup>t</sup> CK	
DQS-DQ skew	<sup>t</sup> DQSQ	-	5	-	2.5	-	1.7	_	1.3	_	1.0	_	0.85	ns	
Data input	<sup>t</sup> DQSS	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	<sup>t</sup> CK	
Data In setup	<sup>t</sup> DS	5	-	3	-	2	-	1.5	-	1.1	_	0.8	-	ns	
DQS falling edge from CLK rising – hold	<sup>t</sup> DSH	0.2	_	0.2	_	0.2	-	0.2	-	0.2	-	0.2	_	<sup>t</sup> CK	
DQS falling to CLK rising – set- up	<sup>t</sup> DSS	0.2	_	0.2	_	0.2	_	0.2	_	0.2	-	0.2	-	<sup>t</sup> CK	
Data valid win- dow	<sup>t</sup> DVW				·	⁺DV	/W = <sup>t</sup> C	H - <sup>t</sup> D	QSQ			1		ns	
Half clock peri- od	tHP					<sup>t</sup> HP	= Min(	<sup>t</sup> CKH, <sup>t</sup>	CKL)					ns	
The deviation of a given <sup>t</sup> CK (abs) from a <sup>t</sup> CK (avg)	<sup>t</sup> JIT (per)	-0.7	0.7	-0.7	0.7	-0.7	0.7	-0.6	0.6	-0.6	0.6	-0.5	0.5	ns	
DQ-DQS hold, DQS to first DQ to go nonvalid, per access	ţОН		<sup>t</sup> QH = <sup>t</sup> HP - <sup>t</sup> QHS										ns		
Data hold skew factor	tQHS	-	6	-	3	-	2	-	1.5	-	1.2	-	1	ns	
Data output to command, ad- dress, or data in- put. DataSheet4U	<sup>t</sup> RHW	100	-	100	-	100	-	100	_	100	-	100		ns	
Ready to data output	<sup>t</sup> RR	20	-	20	-	20	-	20	-	20	-	20	₩₩.D1	ns ns	et4U.com



## 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

		Мо	de 0	Mode 1		Mode 2		Mode 3		Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Unit	Notes
Device reset time (Read/Pro- gram/Erase)	<sup>t</sup> RST	_	5/10/ 500	_	5/10/ 500	_	5/10/ 500	_	5/10/ 500	_	5/10/ 500	_	5/10/ 500	μs	6
CLK HIGH to R/ B# LOW	tWB	-	100	_	100	_	100	_	100	-	100	_	100	ns	
Command cycle to data output	tWHR	80	-	60	-	60	-	60	-	60	-	60	-	ns	
DQS write pre- amble	tWPRE	1.5	-	1.5	-	1.5	-	1.5	-	1.5	-	1.5	-	<sup>t</sup> CK	
DQS write post- amble	tWPST	1.5	-	1.5	-	1.5	-	1.5	-	1.5	-	1.5	-	<sup>t</sup> CK	
W/R# LOW to data output cy- cle	<sup>t</sup> WRCK	20	-	20	-	20	-	20	-	20	_	20	_	ns	
WP# transition to command cy- cle	tWW	100	-	100	-	100	_	100	_	100	_	100	_	ns	

#### Table 40: AC Characteristics: Synchronous Command, Address, and Data (Continued)

Notes: 1. Delay is from start of command to next command, address, or data cycle; start of address to next command, address, or data cycle; and end of data to start of next command, address, or data cycle.

- 2. This value is specified in the parameter page.
- 3. <sup>t</sup>CK(avg) is the average clock period over any consecutive 200-cycle window.
- 4. <sup>t</sup>CKH(abs) and <sup>t</sup>CKL(abs) include static offset and duty cycle jitter.
- 5. <sup>t</sup>DQSHZ begins when W/R# is latched HIGH by CLK. This parameter is not referenced to a specific voltage level; it specifies when the device outputs are no longer driving.
- 6. If RESET (FFh) is issued when the target is idle, the target goes busy for a maximum of 5µs.

www.DataSheet4U.com



# 16Gb, 32Gb, 64Gb, 128Gb Asynchronous/Synchronous NAND Electrical Specifications – Array Characteristics

# **Electrical Specifications – Array Characteristics**

# Table 41: Array Characteristics

Parameter	Symbol	Тур	Мах	Unit	Notes
Number of partial page programs	NOP	_	4	Cycles	1
ERASE BLOCK operation time	<sup>t</sup> BERS	0.7	3.5	ms	
Cache busy	tCBSY	3	500	μs	
Dummy busy time	<sup>t</sup> DBSY	0.5	1	μs	
Cache read busy time	<sup>t</sup> RCBSY	3	25	μs	
Busy time for SET FEATURES and GET FEATURES operations	<sup>t</sup> FEAT	_	1	μs	
Busy time for interface change	<sup>t</sup> ITC	_	1	μs	2
LAST PAGE PROGRAM operation time	<sup>t</sup> LPROG	_	-	μs	3
Busy time for OTP DATA PROGRAM operation if OTP is protected	tOBSY	_	30	μs	
Power-on reset time	<sup>t</sup> POR	_	1	ms	
PROGRAM PAGE operation time	<sup>t</sup> PROG	230	500	μs	
READ PAGE operation time	<sup>t</sup> R	_	25	μs	

Notes: 1. The pages in the OTP Block have an NOP of 8.


- <sup>t</sup>ITC (MAX) is the busy time when the interface changes from asynchronous to synchronous using the SET FEATURES (EFh) command or synchronous to asynchronous using the RESET (FFh) command. During the <sup>t</sup>ITC time, any command, including READ STATUS (70h) and READ STATUS ENHANCED (78h), is prohibited.
- 3. <sup>t</sup>LPROG = <sup>t</sup>PROG (last page) + <sup>t</sup>PROG (last page 1) command load time (last page) address load time (last page) data load time (last page).

www.DataSheet4U.com




# **Asynchronous Interface Timing Diagrams**

# Figure 73: RESET Operation

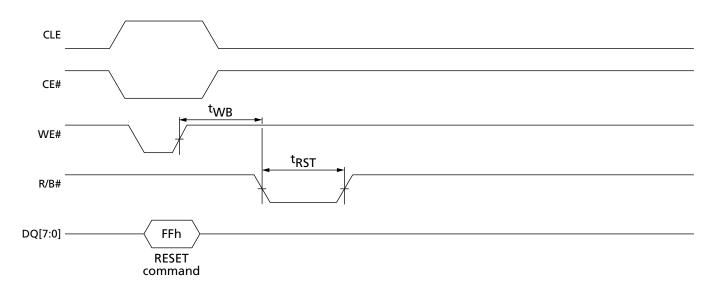


# Figure 74: READ STATUS Cycle

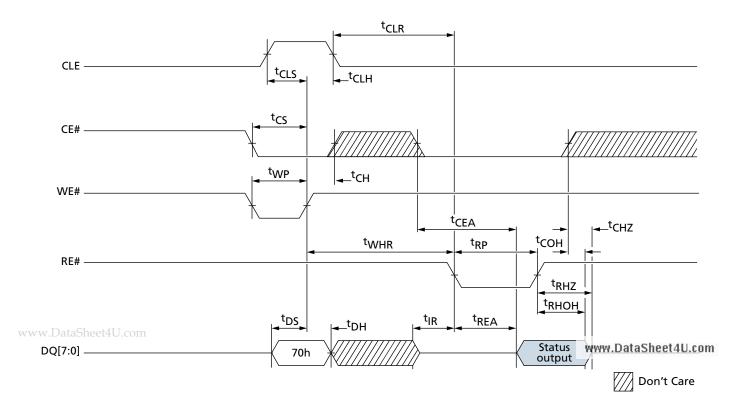




#### Figure 75: READ STATUS ENHANCED Cycle

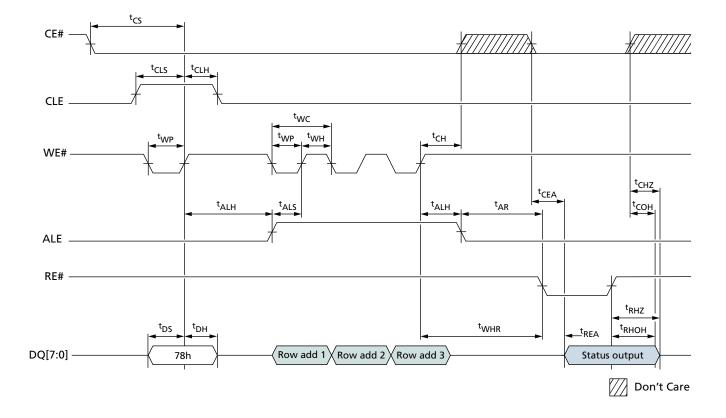


www.DataSheet4U.com



# Figure 76: READ PARAMETER PAGE

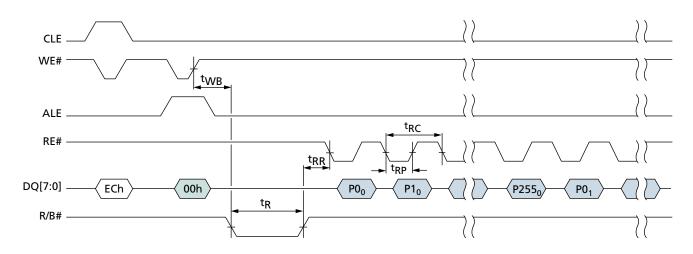


#### Figure 77: READ PAGE

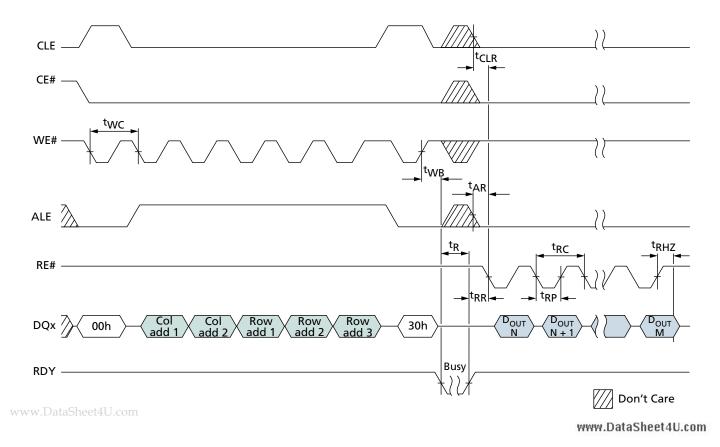




#### Figure 78: READ PAGE Operation with CE# "Don't Care"

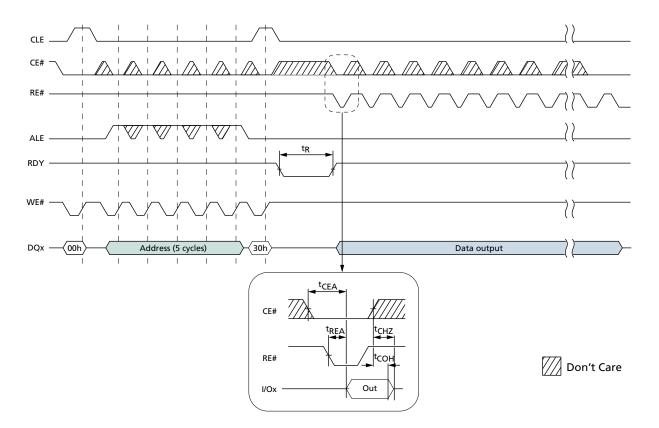

www.DataSheet4U.com




#### Figure 79: CHANGE READ COLUMN

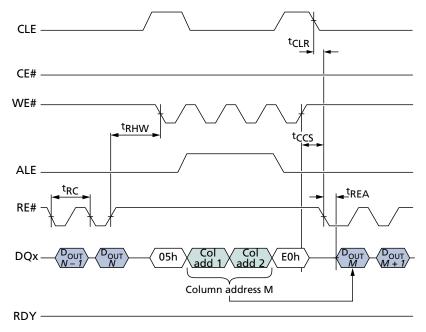

www.DataSheet4U.com




# Figure 80: READ PAGE CACHE SEQUENTIAL

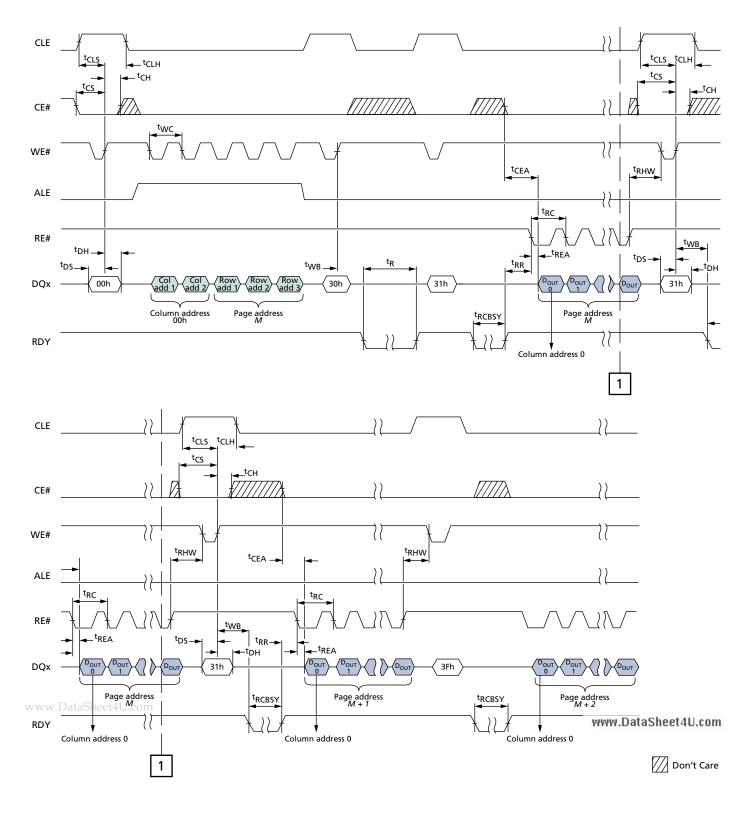




# Figure 81: READ PAGE CACHE RANDOM

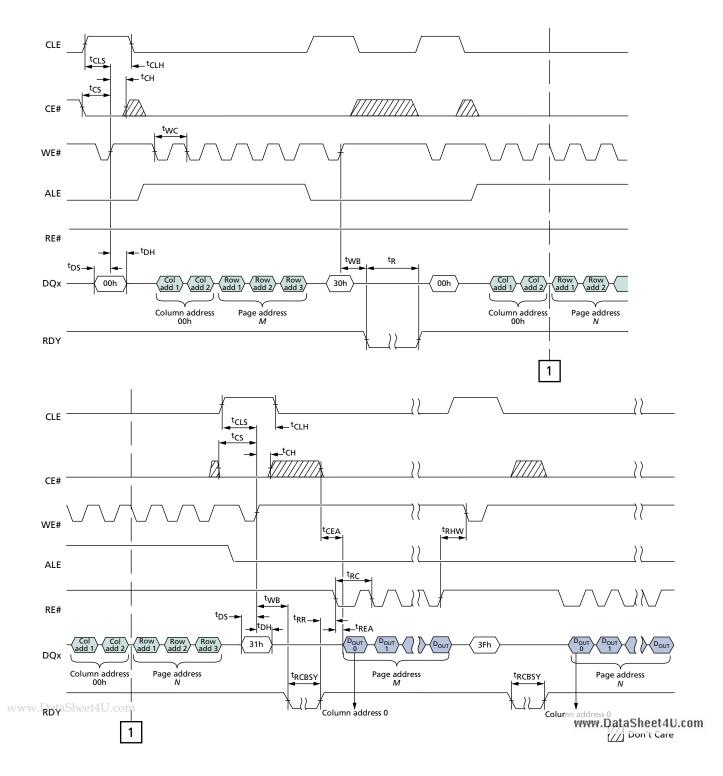




# Figure 82: READ ID Operation

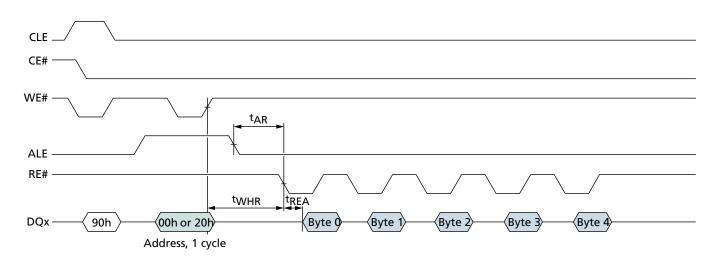




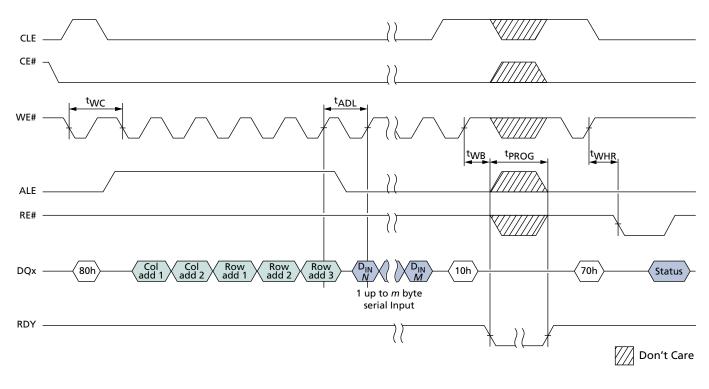


www.DataSheet4U.com



# Figure 84: PROGRAM PAGE Operation with CE# "Don't Care"

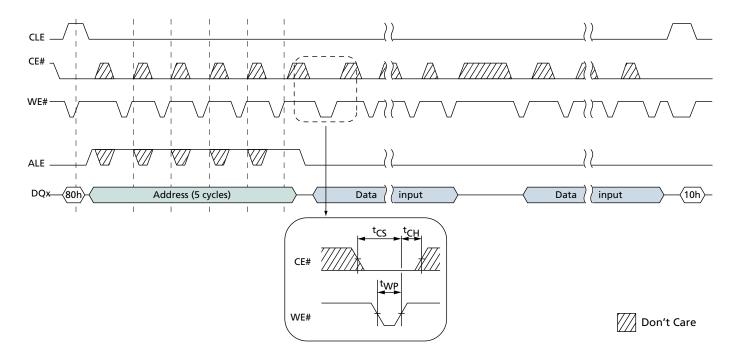


# Figure 85: PROGRAM PAGE Operation with CHANGE WRITE COLUMN

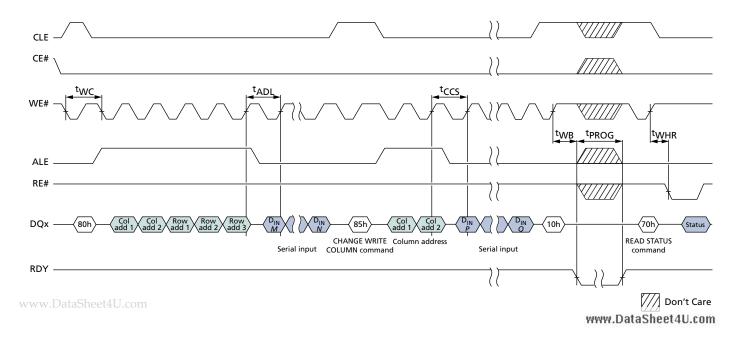




# Figure 86: PROGRAM PAGE CACHE

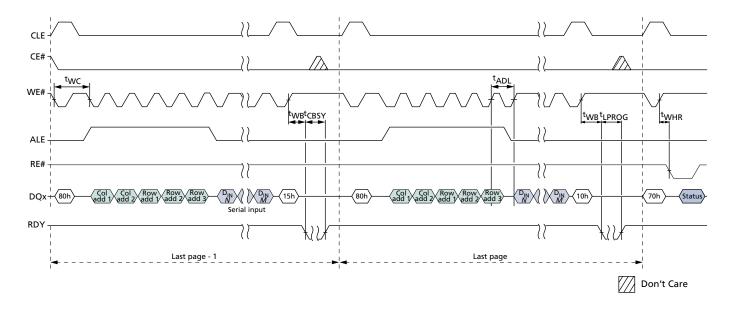


# Figure 87: PROGRAM PAGE CACHE Ending on 15h

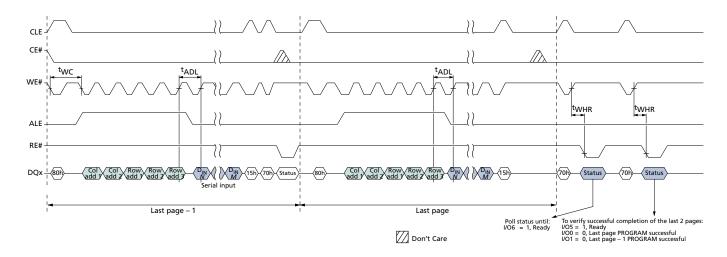


www.DataSheet4U.com



# Figure 88: COPYBACK

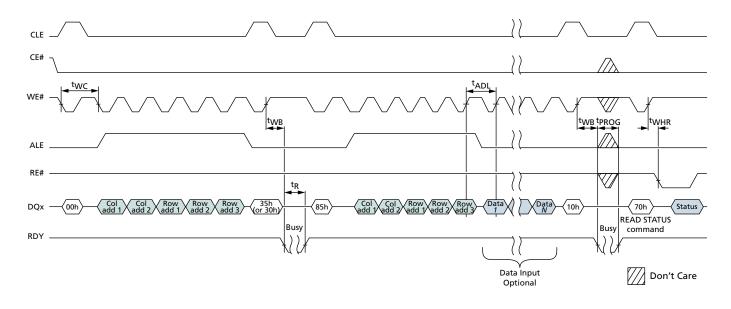


#### Figure 89: ERASE BLOCK Operation

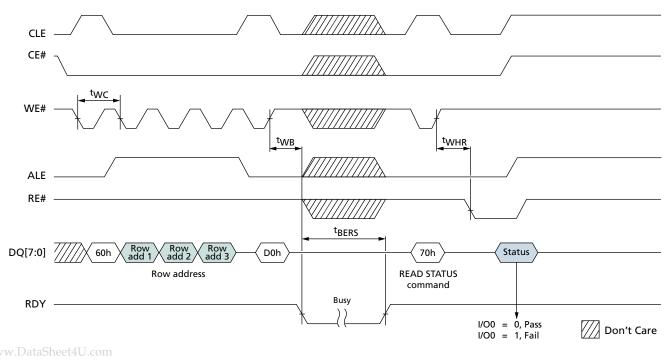



# **Synchronous Interface Timing Diagrams**

# **Figure 90: SET FEATURES Operation**

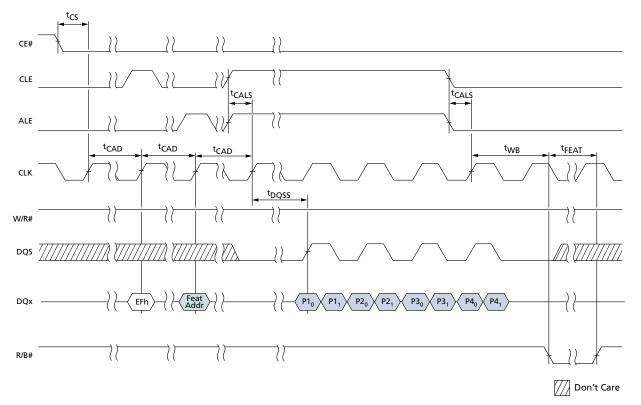


- Notes: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock from which the last data byte is input for the subsequent command or data input cycle(s).
  - 2. <sup>t</sup>DSH (MIN) generally occurs during <sup>t</sup>DQSS (MIN).
  - 3. <sup>t</sup>DSS (MIN) generally occurs during <sup>t</sup>DQSS (MAX).
  - 4. The cycle that <sup>t</sup>CAD is measured from may be an idle cycle (as shown), another command cycle, an address cycle, or a data cycle. The idle cycle is shown in this diagram for simplicity.

www.DataSheet4U.com




# Figure 91: READ ID Operation

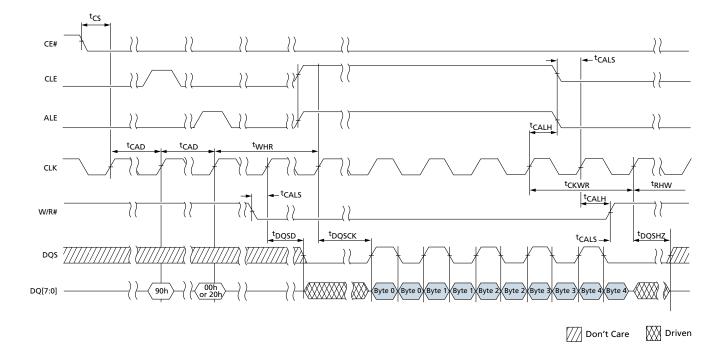

www.DataSheet4U.com




# Figure 92: GET FEATURES Operation

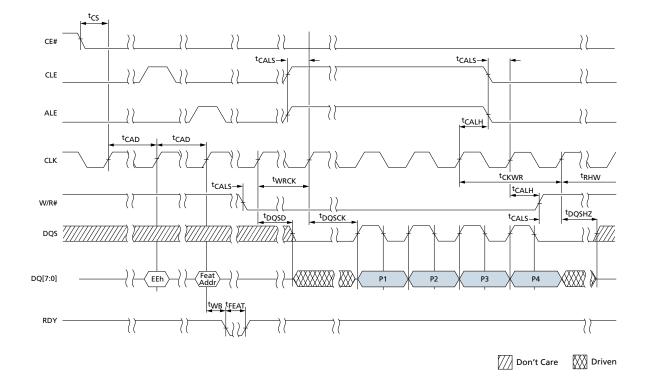

www.DataSheet4U.com




# Figure 93: RESET (FCh) Operation

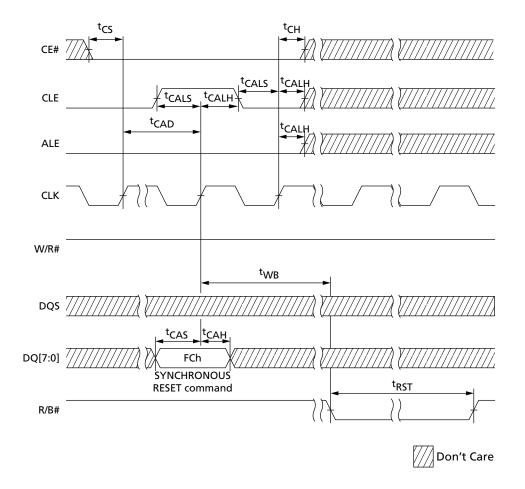

www.DataSheet4U.com




# Figure 94: READ STATUS Cycle

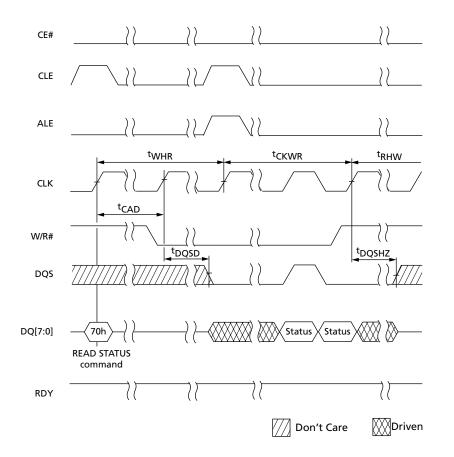

www.DataSheet4U.com




#### **Figure 95: READ STATUS ENHANCED Operation**

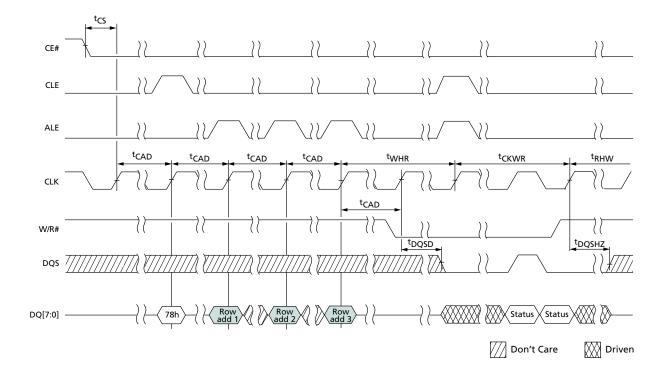

www.DataSheet4U.com




# Figure 96: READ PARAMETER PAGE Operation

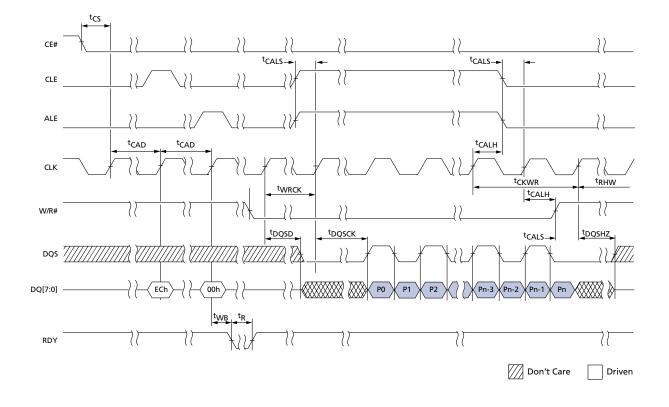

www.DataSheet4U.com




# Figure 97: READ PAGE Operation

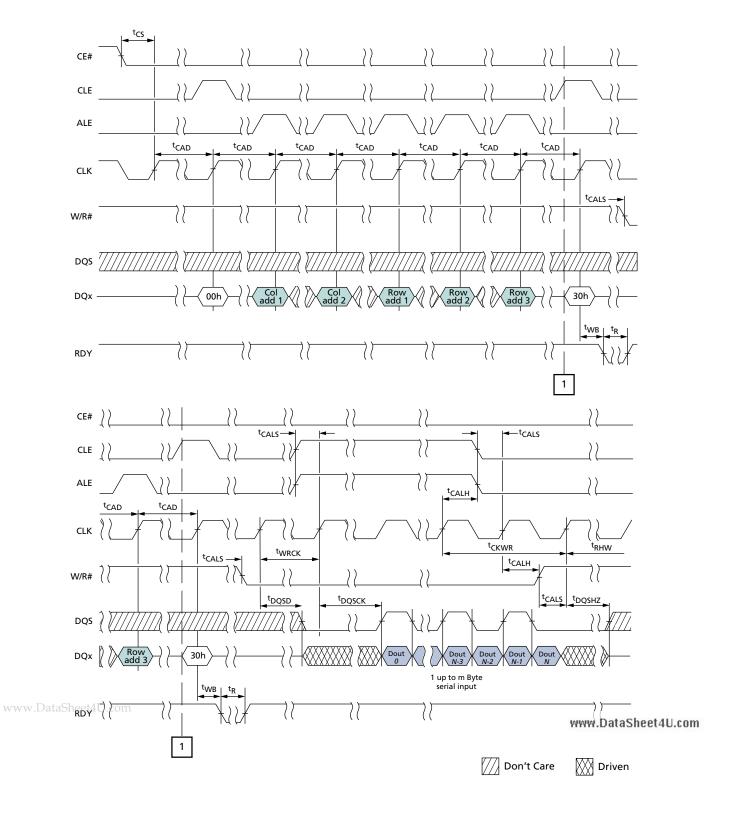




# Figure 98: CHANGE READ COLUMN

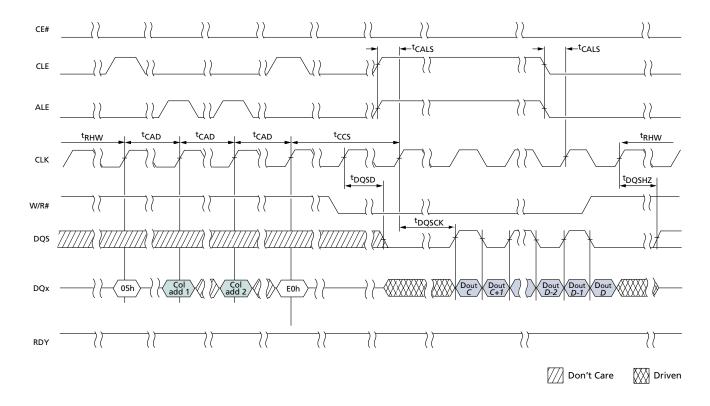

www.DataSheet4U.com




# Figure 99: READ PAGE CACHE SEQUENTIAL (1 of 2)

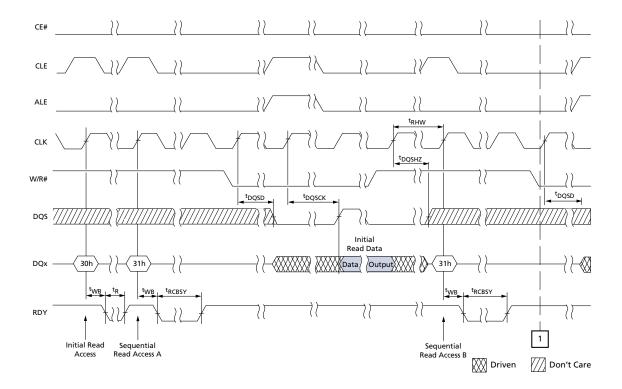

www.DataSheet4U.com




#### Figure 100: READ PAGE CACHE SEQUENTIAL (2 of 2)

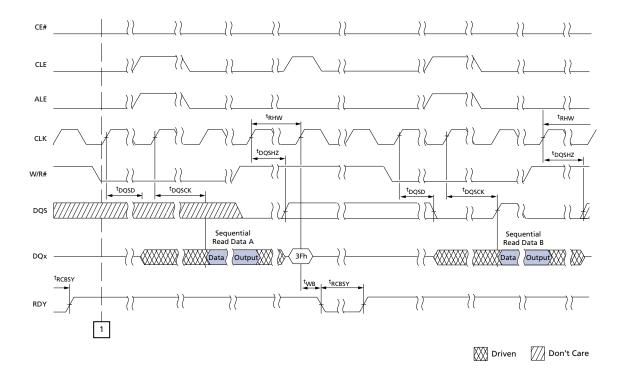


www.DataSheet4U.com



#### Figure 101: READ PAGE CACHE RANDOM (1 of 2)

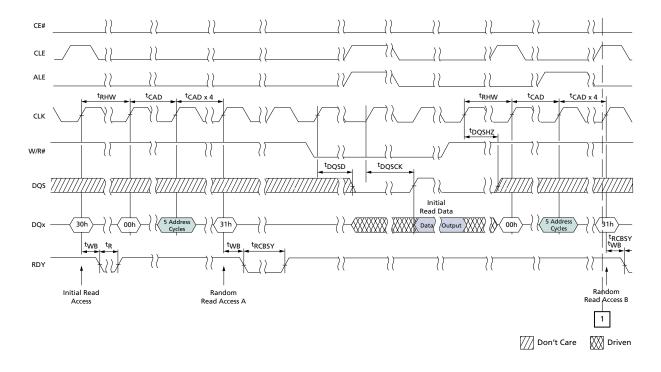


#### Figure 102: READ PAGE CACHE RANDOM (2 of 2)

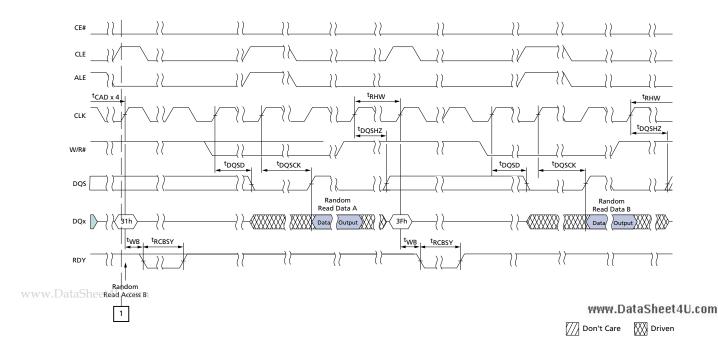




#### Figure 103: Multi-Plane Read Page (1 of 2)

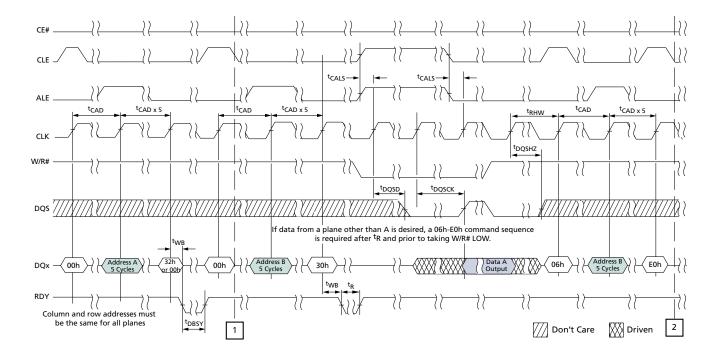

www.DataSheet4U.com




#### Figure 104: Multi-Plane Read Page (2 of 2)

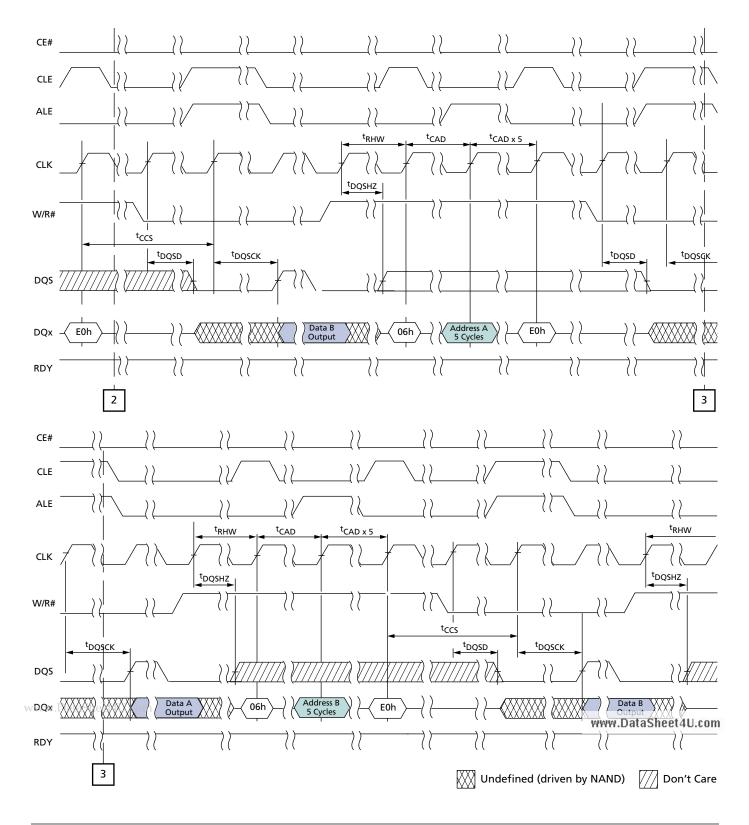




#### Figure 105: PROGRAM PAGE Operation (1 of 2)

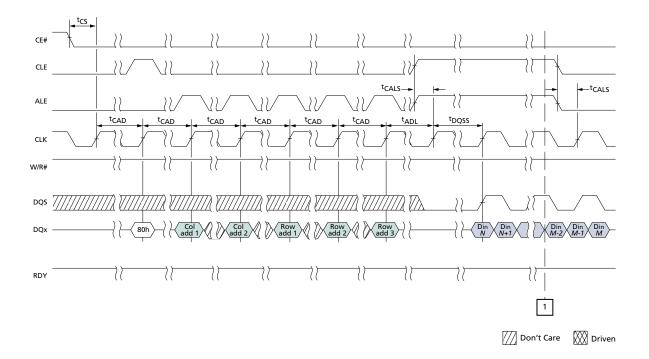


#### Figure 106: PROGRAM PAGE Operation (2 of 2)

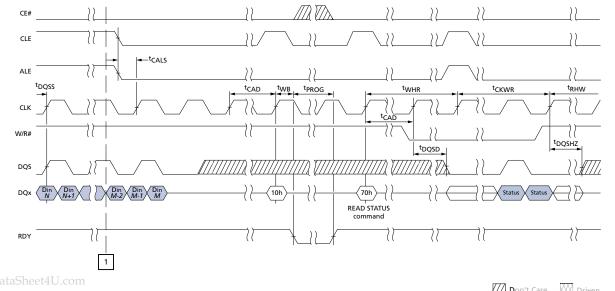

Don't Care WWW.DataSheet4U.com




#### Figure 107: CHANGE WRITE COLUMN

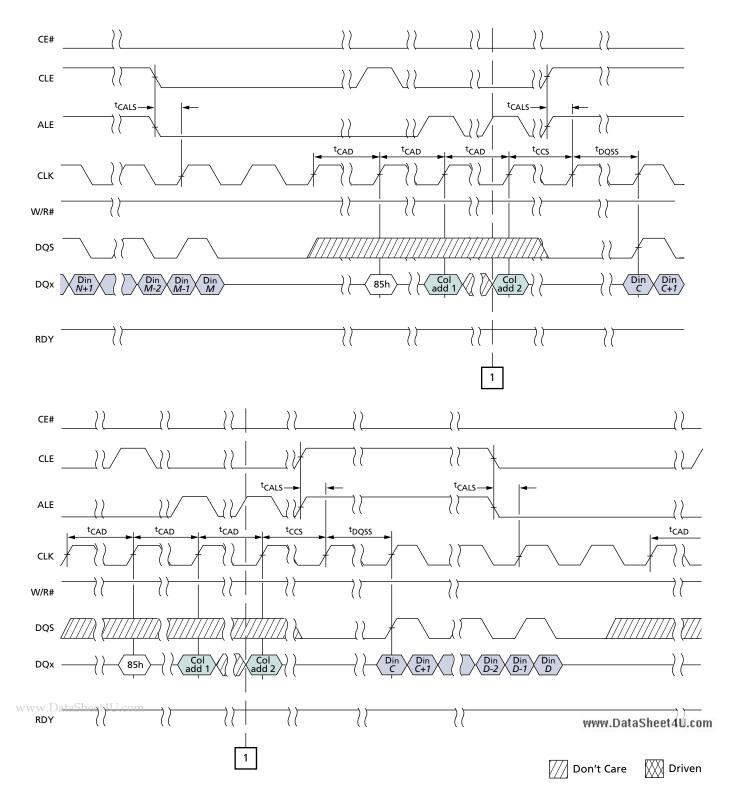




#### Figure 108: Multi-Plane Program Page

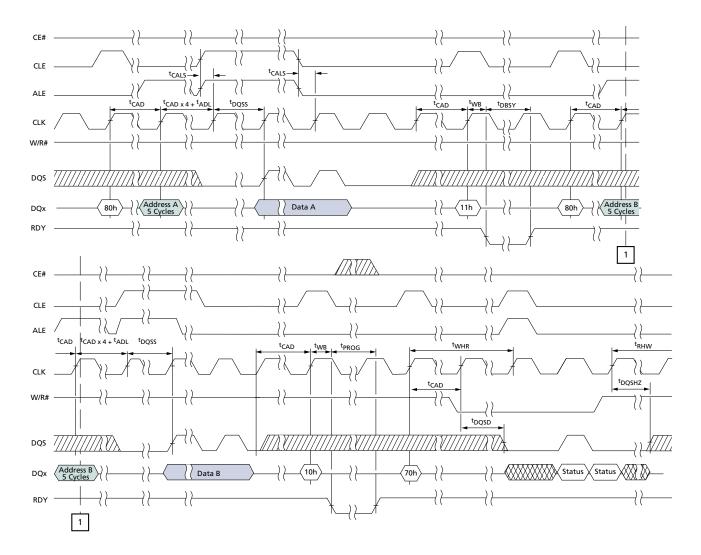

www.DataSheet4U.com




#### Figure 109: ERASE BLOCK

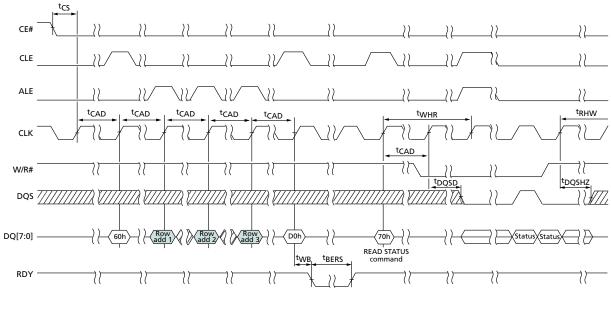


Don't Care Driven

### Figure 110: COPYBACK (1 of 3)

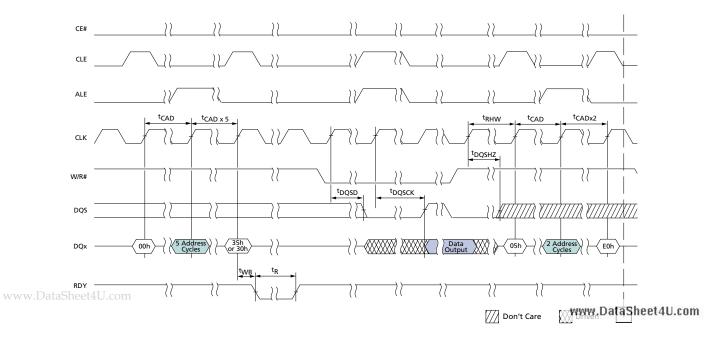




#### Figure 111: COPYBACK (2 of 3)

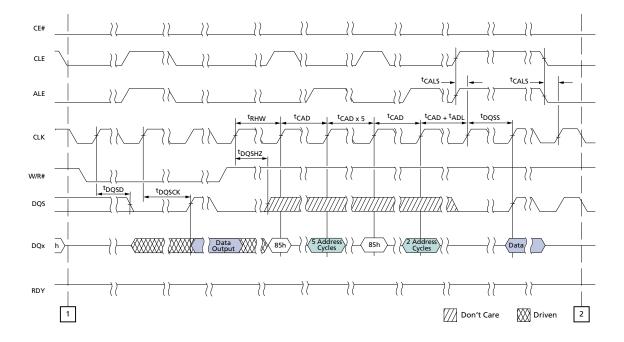


### Figure 112: COPYBACK (3 of 3)

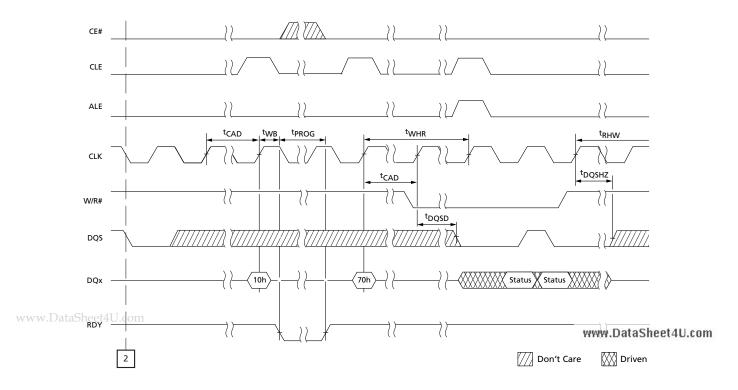




#### Figure 113: READ OTP PAGE

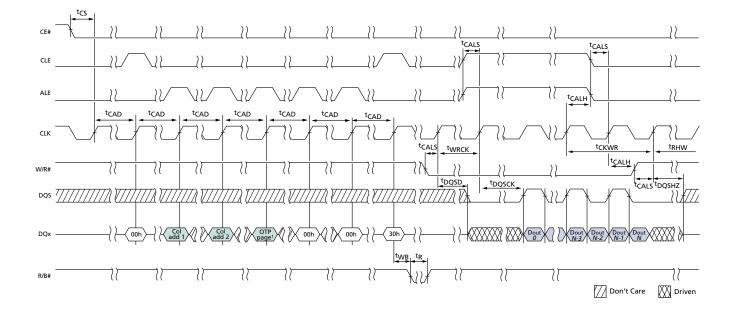


www.DataSheet4U.com



#### Figure 114: PROGRAM OTP PAGE (1 of 2)

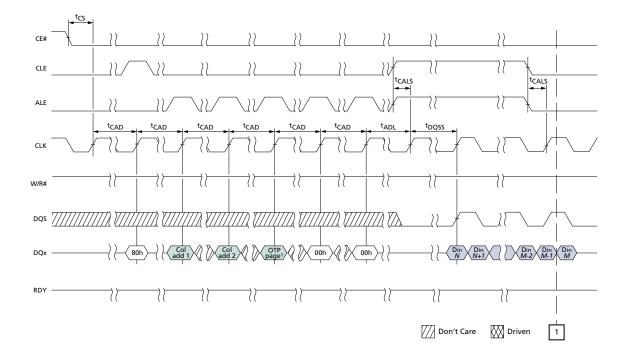


### Figure 115: PROGRAM OTP PAGE (2 of 2)

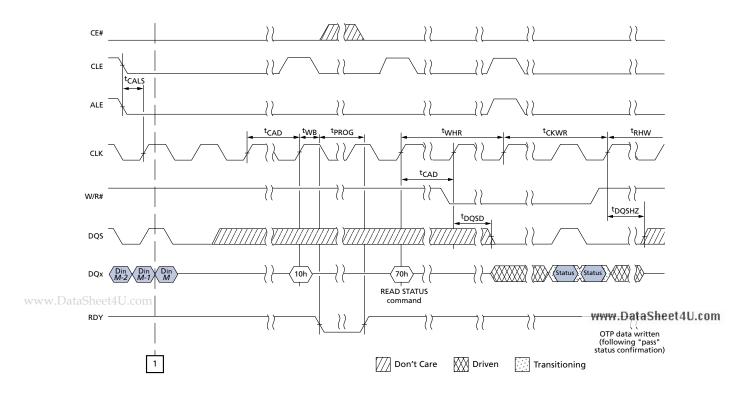



#### Figure 116: PROTECT OTP AREA

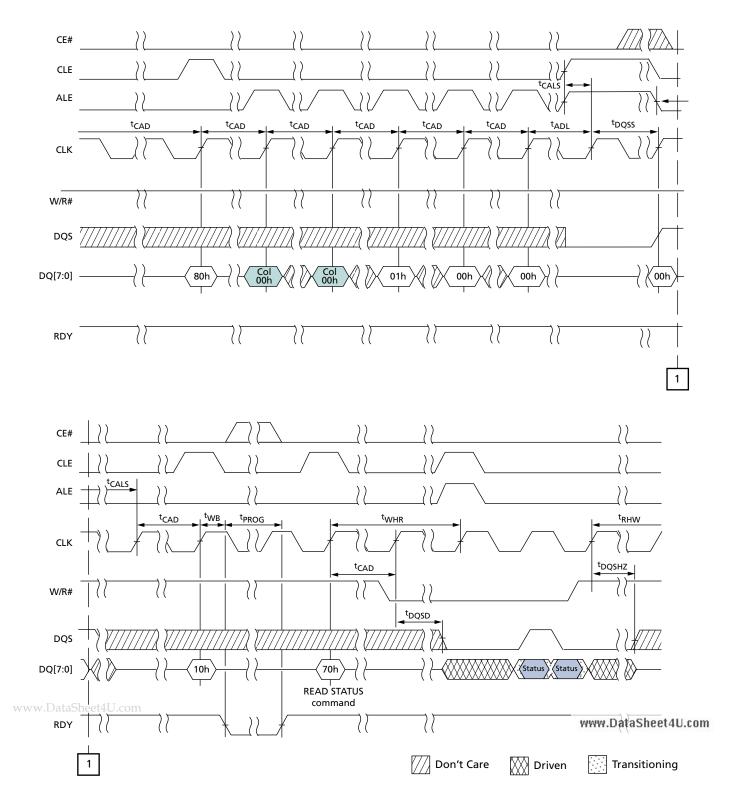



# **Revision History**

### Rev. E, Production – 3/10

• Corrected typo in "Error Management Details" and "Valid Blocks per LUN" tables for number of valid blocks (NVB) from 3996 to 4016.

### Rev. D, Production – 1/10

- Removed OCPL "WC" TSOP package option
- Changed <sup>t</sup>BERS MAX from 3ms to 3.5ms
- Updated values of "Parameter Page Data Structure" for changes to <sup>t</sup>BERS

#### Rev. C – 9/09

- Updated ONFI compliance from 2.0 to 2.1 standard
- Added "H2" BGA package option
- Added 128Gb BGA package option and references to this configuration
- Added 64Gb BGA/LGA four CE# package option and references to this configuration
- Removed 32Gb LGA package option and references to this configuration
- Updated values of "Parameter Page Data Structure"
- Updated definition of <sup>t</sup>FALL and <sup>t</sup>RISE
- Defined values for ICC4, ICC5, ICC6, and ISBQ
- Updated package capacitance values for BGA, LGA, and TSOP packages
- Updated "Test Conditions" table
- Changed <sup>t</sup>PROG TYP from 200µs to 230µs

#### Rev. B - 2/09

- Removed text 'SET FEATURES selects asynchronous/synchronous mode for data input/output' from "Features"
- Changed 'PA7' to 'BA7' in "Array Addressing for 16Gb Logical Unit (LUN)" table; under table, changed note 4 to reference 'BA[7]' instead of 'BA[8]'
- Added column 'I/O[7:0] DQ[7:0]' and changed the heading 'WP' to 'WP#' in "Asynchronous Interface Mode Selection" table
- Changed Y-axis units for "IOL vs. Rp (VccQ = 3.3V)" figure
- Changed Y-axis units for "TC vs. Rp" figure
- Changed '1ms' to 'tPOR' in step 6 under "Vcc Power Cycling"
- Added optional 11h command and note 8 to CHANGE ROW ADDRESS in "Command Set" table
- Added '1' to column '# Valid Address Cycles' for READ UNIQUE ID command in "Command Set" table
- Added text to second paragraph of "SYNCHRONOUS RESET (FCh)" on to more closely line up with "RESET (FFh)"
- Updated 'Edh' to 'EDh' in "READ UNIQUE ID (EDh) Operation" Www.DataSheet4U.com
- Corrected SELECT LUN WITH STATUS (70h) to (78h) for RDY in "Status Register Definition" table
- Removed text describing data output/input from "CHANGE WRITE COLUMN (85h)" and added that text to "CHANGE ROW ADDRESS (85h)"



- Removed first two bullets of text under "CHANGE WRITE COLUMN (85h)" and "CHANGE ROW ADDRESS (85h)"
- Changed 'CHANGE WRITE COLUMN' to 'CHANGE ROW ADDRESS' under "READ Operations"
- Added text describing not to use a READ PAGE CACHE SEQUENTIAL (31h) command to cross LUN boundaries to "READ PAGE CACHE SEQUENTIAL (31h)"
- Updated the following under "Multi-Plane Addressing" on page 93: Changed second bullet from referencing 'BA[8]' to 'BA[7]'; Changed third bullet from referencing 'PA[7:0]' to 'PA[6:0]'
- Broke out load test conditions for different values of VccQ in "Test Conditions" table
- Changed references to <sup>t</sup>WC to <sup>t</sup>CK in "Synchronous Device DC and Operating Characteristics" table
- Updated description of <sup>t</sup>CCS parameter in "AC Characteristic: Synchronous Command, Address, and Data" table and "AC Characteristics: Asynchronous Command, Address, and Data" table

Rev. A - 1/09

• Initial release

www.DataSheet4U.com

8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 www.micron.com/productsupport Customer Comment Line: 800-932-4992 Micron and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners.

www.DataSheet4U.com

This data sheet contains minimum and maximum limits specified over the power supply and temperature range set forth herein. Although considered final, these specifications are subject to change, as further product development and data characterization sometimes occur.